

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for Pioneer XXD3056, VSXD912K

Redi-Remote RTXXD3056

Redi-Remote Replacement Remote Control User Manual

For Pioneer Models: XXD3056, VSXD912K

1. PRODUCT OVERVIEW

This Redi-Remote is a custom-built replacement remote control designed for specific Pioneer audio/video units. It provides full functionality for the designated models without requiring any programming.



Image 1.1: Front view of the Redi-Remote replacement control. This image displays the general layout and button configuration of the remote.

2. SETUP

2.1 Battery Installation

The remote control requires four (4) AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2.2 Initial Use (No Programming Required)

This Redi-Remote is pre-programmed for immediate use with the specified Pioneer models (XXD3056, VSXD912K). No additional programming or code entry is necessary. Simply install the batteries, and the remote is ready to operate your device.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor of your Pioneer unit. Ensure there are no obstructions between the remote and the unit.

3.1 Button Functions

The remote features standard buttons for power, volume, channel/track selection, input source, and menu navigation. Refer to your Pioneer unit's original manual for specific functions of each button if you are unfamiliar with them.

Sliding Cover: A sliding cover is located over the lower half of the remote. Slide this cover down to reveal additional buttons for advanced functions.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's performance diminishes or if it stops responding. Always replace all four batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the Pioneer unit's sensor.
 - Ensure you are within the effective range of the unit.

- **Some buttons not working:**

- Verify that the sliding cover is fully open if you are trying to access lower-half buttons.
- Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.

- **Remote does not control other devices:**

- This Redi-Remote is designed exclusively for the specified Pioneer models (XXD3056, VSXD912K) and cannot be programmed to control auxiliary devices.

6. SPECIFICATIONS

Model Number	RTXXD3056
Compatible Pioneer Models	XXD3056, VSXD912K
Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces (approximately)
Batteries Required	4 x AAA (included)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Max Number of Supported Devices	1

7. WARRANTY INFORMATION

For specific warranty details regarding your Redi-Remote replacement control, please refer to the documentation provided at the time of purchase or contact the seller directly. General warranty terms typically cover manufacturing defects for a limited period.

8. CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your Redi-Remote replacement control, please contact the seller or manufacturer for assistance. When contacting support, please have your product model number (RTXXD3056) and purchase details available.

For further information or to provide feedback, you may visit the [Redi-Remote brand page](#).