

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for Power ACOUSTIK PD769NB, PD712B

Redi-Remote RTPD712B

Redi-Remote Replacement Remote Control User Manual

For Power ACOUSTIK Models PD769NB and PD712B

1. INTRODUCTION

This manual provides detailed instructions for the Redi-Remote replacement remote control, specifically designed for compatibility with Power ACOUSTIK car DVD player models PD769NB and PD712B. This remote is a custom-built replacement and is not an original Power ACOUSTIK product. It is engineered to perform all essential functions for the specified units without requiring any programming.

The remote features a unique design with a sliding cover that conceals the lower half of the buttons, providing a compact form factor when not in use.



Figure 1: Redi-Remote Replacement Remote Control for Power ACOUSTIK PD712B/PD769NB. The upper section features power, volume, channel, menu, and numeric buttons. The lower section, initially covered by a sliding panel, reveals additional function buttons for source, playback controls, and other specific features.

2. SETUP

2.1 Battery Installation

Your Redi-Remote requires four (4) AAA batteries for operation. These batteries are included with your purchase. Please follow these steps to install them correctly:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert four AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always use fresh batteries and replace all four batteries at the same time. Do not mix old and new batteries or different types of batteries.

3. OPERATING INSTRUCTIONS

This Redi-Remote is pre-programmed and ready to use with your Power ACOUSTIK PD769NB or PD712B unit immediately after battery installation. No additional programming is required.

3.1 Remote Control Layout and Button Functions

The remote control is divided into two main sections: the upper fixed section and the lower section, which is revealed by sliding down the cover.

Table 1: Button Functions Overview

Button	Function
PWR	Turns the Power ACOUSTIK unit on or off.
TV/VIDEO	Switches between TV and Video input modes.
DISP	Displays on-screen information.
CH+ / CH-	Navigates through channels or menu options.
VOL+ / VOL-	Adjusts the volume level.
MUTE	Mutes or unmutes the audio.
MENU	Accesses the main menu of the unit.
RECALL	Recalls the previously selected channel or input.
Numeric Buttons (0-9, 100)	Direct input for channels or menu selections.
ENT	Confirms selections or enters numeric input.
Lower Section Buttons (Slide Down to Reveal)	
SRC	Selects the input source.
OP/CL	Open/Close disc tray (if applicable).
P-ANGLE	Changes playback angle (for multi-angle DVDs).

Button	Function
EQ LOUD	Adjusts equalizer settings or loudness.
AUDIO #	Selects audio track or channel.
Directional Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections.
Play (▶)	Starts playback.
Pause ()	Pauses playback.
Stop (■)	Stops playback.
Fast Forward (▶▶)	Fast forwards through content.
Rewind (◀◀)	Rewinds through content.
Skip Forward (▶▶)	Skips to the next track/chapter.
Skip Backward (◀◀)	Skips to the previous track/chapter.
RDM/SUB-T	Random playback or subtitle selection.
TITLE	Accesses the disc title menu.
PBC/AST	Playback Control or Auto Store (function varies by unit).
RPT/A-B	Repeat playback or A-B repeat function.
SLOW/RED PHONE	Slow motion playback or Red button function.
ZOOM/GREEN PHONE	Zoom function or Green button function.
ST/DISP	Stereo/Mono selection or Display information.

4. MAINTENANCE

4.1 Cleaning the Remote

To maintain the remote control's appearance and functionality, wipe it regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

If the remote control's range decreases or it becomes unresponsive, it is likely time to replace the batteries. Refer to Section 2.1 "Battery Installation" for instructions on how to replace the four AAA batteries. Always dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you experience issues with your Redi-Remote, please consult the following common troubleshooting steps:

- Remote Not Responding:

- Ensure the batteries are installed correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones.
 - Check for any obstructions between the remote and the Power ACOUSTIK unit's infrared receiver.
 - Ensure you are within the effective operating range and pointing the remote directly at the unit.
- **Certain Buttons Not Working:**
 - This is often an indication of low batteries. Try replacing them.
 - Ensure the sliding cover is fully open to access the lower buttons if you are trying to use those functions.
 - **Remote Controls Other Devices:**
 - This remote is specifically designed for Power ACOUSTIK PD769NB/PD712B units and cannot be programmed to control auxiliary devices. If it is affecting other devices, ensure you are pointing it directly at the intended unit.

If the problem persists after trying these steps, please refer to the "Warranty and Support" section for further assistance.

6. SPECIFICATIONS

Table 2: Product Specifications

Feature	Detail
Model Number	RTPD712B
Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces
Batteries Required	4 x AAA (included)
Special Feature	No Programming Required
Max Number of Supported Devices	1 (specific Power ACOUSTIK unit)
Compatible Devices	Power ACOUSTIK PD769NB, Power ACOUSTIK PD712B Car DVD Players
Connectivity Technology	Infrared (IR)

7. WARRANTY AND SUPPORT

Redi-Remote aims to provide high-quality replacement remote controls. While specific warranty details are not provided in this manual, if you encounter any concerns or issues with your remote control after purchase, please contact the seller directly for assistance.

For support inquiries, please reach out to the seller (RemotesPro) through the platform where you made your purchase. They will be able to provide guidance and resolve any product-related concerns.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00MWB72D8>

More documents and user manuals: **<https://manuals.plus/>**