

[Manuals.plus](#) /

› [Cuisinart](#) /

› Cuisinart SG-3 Stainless Steel Rechargeable Salt, Pepper and Spice Mill Instruction Manual

Cuisinart SG-3

Cuisinart SG-3 Stainless Steel Rechargeable Salt, Pepper and Spice Mill Instruction Manual

PRODUCT OVERVIEW

This manual provides essential information for the safe and efficient operation of your Cuisinart SG-3 Rechargeable Salt, Pepper and Spice Mill. Please read all instructions carefully before use.





Image: The Cuisinart SG-3 Rechargeable Salt, Pepper and Spice Mill in stainless steel, standing on its charging base on a kitchen counter. Fresh vegetables are visible in the background, suggesting its use in meal preparation.

Key Features:

- Grind sea salt, peppercorns, and dried spices at the touch of a button.
- Durable stainless steel housing with embossed Cuisinart logo.
- Convenient charging base with a charge/ready indicator light and a removable crumb tray for easy cleaning.
- Adjustable grind settings from fine to coarse, allowing precise control over seasoning.
- Clear grinding containers to easily monitor spice levels and know when to refill.

SETUP AND INITIAL USE

Unpacking

Carefully remove all components from the packaging. Ensure all parts are present: the mill unit, charging base, and power adapter. Remove any protective films or labels from the unit.

Charging the Unit

Before first use, fully charge the mill. Place the mill onto its charging base. Connect the power adapter to the charging base and plug it into a standard electrical outlet. The charge/ready light on the base will indicate the charging status. A full charge ensures optimal performance.



Image: The Cuisinart SG-3 Rechargeable Salt, Pepper and Spice Mill standing on its black charging base. The power adapter is plugged into the base, indicating it is ready for charging.

Filling the Mill

The Cuisinart SG-3 features two transparent grinding containers for different spices. To fill, twist the upper or lower section of the mill to unlock and separate the container from the main body. Fill with your desired whole spices, such as peppercorns, sea salt, or dried herbs. Reattach the container by aligning the arrows and twisting to lock it securely in place.



Image: The Cuisinart SG-3 Rechargeable Salt, Pepper and Spice Mill, showcasing its two clear compartments filled with pink Himalayan salt and black peppercorns. The stainless steel body is visible between the compartments.

OPERATING YOUR SPICE MILL

Grinding Spices

To grind, simply press and hold the button located on the main body of the mill. The mill will activate, grinding the spices from the selected compartment. Release the button to stop grinding. The cordless design allows for easy use anywhere in your kitchen or dining area.

Adjusting Grind Coarseness

The mill offers adjustable grind settings. To change the coarseness, locate the adjustment mechanism at the bottom of each grinding compartment. Turn clockwise for a finer grind and counter-clockwise for a coarser grind. Experiment to find your preferred consistency for different dishes.

Measuring Ground Spices

The mill includes a convenient cap that doubles as a 1-teaspoon measure. Grind directly into the cap to

accurately measure spices for your recipes.

How to Use Video

Your browser does not support the video tag.

Video: An official Cuisinart video demonstrating the features and operation of the SG-3 Rechargeable Salt, Pepper and Spice Mill, including how to charge, fill, adjust grind, and use the measuring cap.

CARE AND MAINTENANCE

Cleaning

To clean the mill, remove the grinding containers and the removable crumb tray from the charging base. Wipe the exterior of the mill and the charging base with a damp cloth. The grinding containers can be hand-washed with warm, soapy water. **Do not immerse the main mill unit or charging base in water. This product is not dishwasher safe.** Ensure all parts are completely dry before reassembling.

TROUBLESHOOTING

Mill Not Operating

- Ensure the unit is fully charged. The charge/ready light should indicate a full charge.
- Verify that the grinding containers are properly attached and locked into place.
- Check that the button is being pressed firmly.

Inconsistent Grind

- Adjust the grind coarseness setting as described in the 'Operating Your Spice Mill' section.
- Ensure the grinding mechanism is clean and free of obstructions.

PRODUCT SPECIFICATIONS

- **Material:** Stainless Steel
- **Color:** Stainless Steel
- **Product Dimensions:** 6.13"W x 9.75"H
- **Item Weight:** 570 Grams
- **Operation Mode:** Automatic
- **Recommended Uses:** Kitchen
- **Dishwasher Safe:** No
- **Unit Count:** 1.0 Count
- **Model Number:** SG-3
- **UPC:** 086279071996

WARRANTY AND SUPPORT

This Cuisinart SG-3 Rechargeable Salt, Pepper and Spice Mill comes with a Limited 3-year Manufacturer's

Warranty. For warranty claims or product support, please refer to the contact information provided in your product packaging or visit the official Cuisinart website.

For more Cuisinart products and information, visit the [Cuisinart Store](#).