

[Manuals.plus](#) /

› [Mainstays](#) /

› Mainstays Halogen Desk Lamp User Manual

Mainstays MS10-020-002-25

Mainstays Halogen Desk Lamp User Manual

Model: MS10-020-002-25

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, setup, and maintenance of your Mainstays Halogen Desk Lamp. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: Mainstays Halogen Desk Lamp (Model MS10-020-002-25)

This image displays the Mainstays Halogen Desk Lamp in black, featuring its flexible gooseneck arm extending from a round base to a dome-shaped lamp head. The lamp head has ventilation slots at the top and a small wire guard at the bottom opening.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury to persons, please observe the following:

- Do not operate the lamp with a damaged cord or plug.
- Do not use the lamp if it has been dropped or damaged.
- Always unplug the lamp from the electrical outlet before cleaning or changing the bulb.

- Do not touch the bulb directly after use, as it will be hot. Allow it to cool before handling.
- Use only a 35-watt halogen bulb as specified. Using a higher wattage bulb may cause overheating and fire.
- Keep the lamp away from flammable materials.
- This lamp is for indoor use only.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts are present: lamp base, flexible gooseneck arm with lamp head, and 35-watt halogen bulb.
2. **Placement:** Place the lamp base on a stable, flat surface. Ensure there is adequate space around the lamp for ventilation and to avoid contact with flammable materials.
3. **Install Bulb:**
 - Ensure the lamp is unplugged.
 - Carefully insert the 35-watt halogen bulb into the socket within the lamp head. Avoid touching the glass part of the bulb with bare hands, as oils can reduce bulb life. Use a clean cloth or glove if necessary.
 - Gently push the bulb firmly into the socket until it is seated correctly.
4. **Connect Power:** Plug the lamp's power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. **Turning On/Off:** Locate the inline on/off switch on the power cord. Slide the switch to the "ON" position to illuminate the lamp, and to the "OFF" position to turn it off.
2. **Adjusting Light Direction:** The lamp features a flexible gooseneck design. Gently bend and position the gooseneck arm to direct the light beam to your desired area. Avoid excessive force or sharp bends to prevent damage.

MAINTENANCE

Cleaning

- Always unplug the lamp before cleaning.
- Wipe the lamp's exterior surfaces with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or polishes, as they may damage the finish.

Bulb Replacement

- Ensure the lamp is unplugged and the bulb has completely cooled down.
- Carefully remove the old bulb by pulling it straight out from the socket.
- Insert a new 35-watt halogen bulb (GU10 base, if applicable, or specified type) into the socket. Refer to the "Install Bulb" step in the Setup section for proper handling.
- Dispose of the old bulb according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in. Switch is in "OFF" position. Bulb is loose or burnt out. No power at outlet.	Ensure lamp is securely plugged into a working outlet. Slide the inline switch to the "ON" position. Check bulb; tighten if loose, replace if burnt out. Test outlet with another device or check circuit breaker.
Light flickers.	Loose bulb. Incorrect bulb type/wattage. Faulty bulb.	Unplug lamp, allow to cool, then gently tighten bulb. Ensure you are using a 35-watt halogen bulb. Replace the bulb.

If the problem persists after attempting the above solutions, please contact customer support.

SPECIFICATIONS

- **Model:** MS10-020-002-25
- **Brand:** Mainstays
- **Type:** Halogen Desk Lamp
- **Color:** Black
- **Light Source:** 35 Watt Halogen Bulb (included)
- **Dimensions:** Approximately 5" x 5" x 21" (12.7 x 12.7 x 53.34 cm)
- **Weight:** Approximately 3 Pounds (1.36 kg)
- **Features:** Flexible Gooseneck, On/Off Inline Switch
- **Manufacturer:** Mainstays
- **ASIN:** B00N0154PM
- **First Available:** January 8, 2014

WARRANTY AND SUPPORT

Specific warranty information for the Mainstays Halogen Desk Lamp is typically provided at the point of purchase or within the product packaging. Please refer to any enclosed documentation for details regarding warranty coverage and duration. For technical support, replacement parts, or further assistance, please contact Mainstays customer service through their official website or the contact information provided on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question