

[Manuals.plus](#) /

› [Princess](#) /

› Princess Bread Maker Belt Instruction Manual

Princess S194123

Princess Bread Maker Belt Instruction Manual

Model: S194123

1. INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of the Princess Bread Maker Belt. Please read this manual thoroughly before attempting any procedures to ensure proper function and longevity of the product.

This transmission belt is designed for Princess bread maker models 1941 and 2000.

2. PRODUCT OVERVIEW



Figure 1: Princess Bread Maker Transmission Belt

The Princess Bread Maker Transmission Belt is a crucial component for the proper functioning of your bread maker. It transfers power from the motor to the kneading paddle, ensuring efficient mixing and kneading of dough.

- **Material:** Stainless Steel (as per product specifications)
- **Color:** Black
- **Length:** 537 mm
- **Distance between cogged belts:** 3 mm
- **Weight:** 10 grams

3. SETUP AND INSTALLATION

Replacing the transmission belt requires careful handling and basic mechanical aptitude. It is recommended to consult a qualified technician if you are unsure about any steps.

3.1. Safety Precautions

- Always disconnect the bread maker from the power outlet before beginning any installation or maintenance.
- Wear appropriate safety gear, such as gloves, to protect your hands.

- Keep small parts away from children.

3.2. Installation Steps

1. **Disassembly:** Carefully disassemble the bread maker casing to access the motor and drive mechanism. Refer to your specific bread maker model's service manual for detailed disassembly instructions.
2. **Remove Old Belt:** Once the drive mechanism is accessible, gently remove the old or broken transmission belt from the pulleys.
3. **Install New Belt:** Place the new Princess transmission belt onto the smaller motor pulley first, then carefully stretch it over the larger drive pulley. Ensure the belt is seated correctly in the grooves of both pulleys.
4. **Tension Check:** Verify that the belt has appropriate tension. It should be snug but not overly tight, allowing for smooth rotation without slipping.
5. **Reassembly:** Carefully reassemble the bread maker casing, ensuring all screws and components are securely fastened.
6. **Test:** Plug in the bread maker and perform a short test cycle to ensure the new belt is functioning correctly and the kneading paddle rotates smoothly.

4. OPERATING CONSIDERATIONS

Once the new belt is installed, the bread maker should operate as intended. The belt's function is integral to the kneading process.

- Ensure the bread maker is placed on a stable, flat surface during operation.
- Avoid overloading the bread maker, as this can put undue strain on the motor and the transmission belt.
- Listen for unusual noises during operation, which could indicate an issue with the belt or other internal components.

5. MAINTENANCE

Regular inspection of the transmission belt can extend its lifespan and prevent unexpected failures.

- **Visual Inspection:** Periodically inspect the belt for signs of wear, cracking, fraying, or stretching.
- **Cleaning:** If accessible, gently clean any dust or debris from the belt and pulleys using a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Replacement:** Replace the belt immediately if any signs of significant wear or damage are observed. The typical lifespan of a transmission belt varies depending on usage.

6. TROUBLESHOOTING

If you encounter issues after replacing the belt, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Kneading paddle not rotating or rotating intermittently.	Belt not properly seated, belt too loose, or belt damaged.	Re-seat the belt, check tension, or replace the belt if damaged.
Loud grinding or squealing noise during operation.	Belt rubbing against casing, worn pulleys, or foreign object.	Inspect belt path, check pulleys for wear, remove any obstructions.
Bread maker motor runs but paddle does not move.	Belt is broken or completely slipped off pulleys.	Inspect and replace the belt.

If the problem persists after attempting these solutions, contact Princess customer support or a qualified service technician.

7. SPECIFICATIONS

Feature	Detail
Brand	Princess
Model Number	S194123
Compatible Bread Maker Models	1941, 2000
Length	537 mm
Distance between cogged belts	3 mm
Material	Stainless Steel
Color	Black
Item Weight	10 grams
Package Dimensions	15.8 x 9.5 x 1 cm

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Princess product, please refer to the documentation provided with your original bread maker or visit the official Princess website.

Online Support: www.princesshome.eu/en-gb/service-support

Seller Support: For issues related to your purchase, you may contact the seller "follettostore" via Amazon's messaging system.

