

SEIKI SE421TT, SE241TS, SC461TS

Seiki Remote Control User Manual

Model: SE421TT, SE241TS, SC461TS | Part Number: 845-045-03B01  
Brand: SEIKI

1. PRODUCT OVERVIEW

This document provides instructions for the SEIKI TV remote control, model numbers SE421TT, SE241TS, and SC461TS, part number 845-045-03B01. This remote is designed to be compatible with various SEIKI LED HDTV models, offering direct functionality without complex programming.

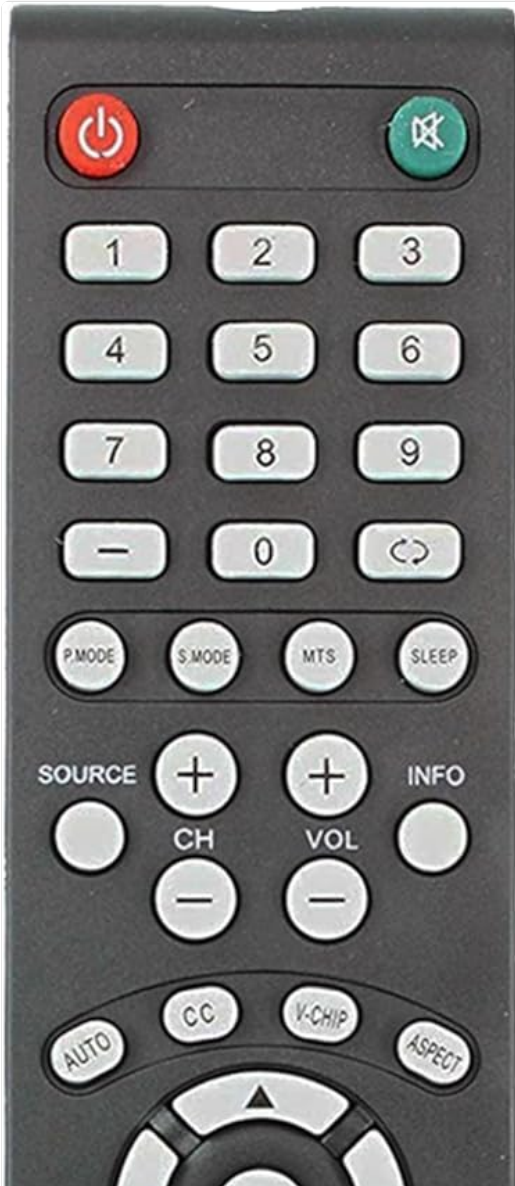




Figure 1: Front view of the Seiki remote control, showing all buttons and the SEIKI logo at the bottom.

The remote control is a direct replacement for the original equipment manufacturer (OEM) remote, ensuring seamless compatibility and operation with your SEIKI television. It is designed for ease of use, providing access to essential TV functions.





Figure 2: Back view of the Seiki remote control, showing the battery compartment cover.

## 2. SETUP

### 2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

## 2.2. Initial Use

This remote control is designed for immediate use with compatible SEIKI TV models. No programming or code entry is typically required. Simply insert the batteries, point the remote at your television, and begin operation.

## 3. OPERATING INSTRUCTIONS

The remote control provides access to all standard functions of your SEIKI television. Below is a description of the main buttons and their functions:







Figure 3: Angled view of the Seiki remote control, showing the arrangement of buttons.

**Power (Red Button):** Turns the television on or off.

**Mute (Green Button):** Mutes or unmutes the television audio.

**Number Buttons (0-9):** Directly select channels or input numerical values.

**P.MODE (Picture Mode):** Cycles through various picture modes (e.g., Standard, Dynamic, Movie).

**S.MODE (Sound Mode):** Cycles through various sound modes (e.g., Standard, Music, Movie).

**MTS (Multi-channel Television Sound):** Selects audio channels (e.g., Stereo, SAP).

**SLEEP:** Sets a timer for the TV to automatically turn off.

**SOURCE:** Selects the input source (e.g., HDMI 1, AV, Component).

**CH +/- (Channel Up/Down):** Changes the television channel.

**VOL +/- (Volume Up/Down):** Adjusts the television volume.

**INFO:** Displays current channel information or program details.

**AUTO:** Initiates auto-tuning or auto-adjustment for certain inputs.

**CC (Closed Caption):** Toggles closed captions on or off.

**V-CHIP:** Accesses V-Chip parental control settings.

**ASPECT:** Changes the screen aspect ratio (e.g., 16:9, 4:3).

**Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.

**MENU:** Opens the main television menu.

**EXIT:** Exits the current menu or on-screen display.

**Colored Buttons (A, B, C, D):** Functions vary depending on the TV model or specific menu context. Often used for interactive features or quick access.

**CH.LIST:** Displays the channel list.

**ADD/ERASE:** Used for adding or erasing channels in the channel list.

**FAV+, FAV-:** Navigates through favorite channels.

**HDMI:** Directly switches to an HDMI input.

## 4. MAINTENANCE

### 4.1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Follow the battery installation steps in Section 2.1. Dispose of used batteries responsibly according to local regulations.

### 4.2. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

### 4.3. Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage and potential damage.

## 5. TROUBLESHOOTING

### Remote not responding:

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Make sure you are within the effective range of the TV's sensor.

### Specific buttons not working:

- Clean around the button to ensure no debris is preventing it from pressing correctly.
- If only one or a few buttons are unresponsive after battery replacement, the remote may be damaged and require replacement.

### Interference:

- Strong light sources (e.g., direct sunlight, fluorescent lights) can interfere with the remote's signal. Try operating the remote in a different lighting condition.
- Other electronic devices emitting infrared signals might cause interference.

## 6. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Product Dimensions	8 x 2 x 0.5 inches
Item Weight	2.08 ounces
Manufacturer	Beyution factory
Item Model Number	SE421TT, SE241TS, SC461TS
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Television

## 7. WARRANTY INFORMATION

Specific warranty details for this product are typically provided by the seller or manufacturer at the time of purchase. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage, terms, and conditions.

## 8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your SEIKI remote control, please contact the retailer from whom you purchased the product or refer to the official SEIKI website for customer service contact information.





[illegible][illegible]

## Important Safety Instructions

Read these instructions. All safety and operating instructions should be read before this product is operated.

Observe the following instructions:

- **Read the instructions.** The safety and operating instructions should be read before first use.
- **Read all warnings.** All warnings on the appliance and in the operating instructions should be adhered to.
- **Do not use the appliance if you are not familiar with its operation.** If you are not familiar with the use of the appliance, ask a qualified person for advice.
- **Do not use the appliance near water.** The appliance should not be used near water or moisture - for example, in a wet room or near a swimming pool.
- **Keep your eyes off the cloth.**
- **Do not touch the appliance.** Do not touch the appliance with bare hands.
- **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including fixed appliances) that could raise the temperature of the appliance.**
- **Do not defect the safety pressure of the appliance or groundling plug.** A pilotlight plug has two blades with one wider than the other. A groundling plug has two blades and a third groundling prong. The wide blade in the third prong is provided for your safety. If the provided plug does not fit into the outlet, consult an electrician for replacement of the suitable outlet.
- **Protect the power cord from being walked on or pinched at places where the plug, convenience receptacle, and the point where they meet from the appliance.**
- **Only use attachments/accessories specified by the manufacturer.**
- **Do not use the cord to pull, strain, twist, break, or to take weight by the manufacturer, or sold with the appliance.** When a cord or a risk is used, use caution when moving the cord/appliance to avoid self-harm.
- **Do not use the appliance for anything other than what it was designed for.**
- **Unplug the appliance during lightning storms or when unused for long periods of time.**
- **Do not use the appliance to dry clothes or materials.** When it is required when the appliance has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, or the appliance has been damaged or modified in any way, it should be repaired. If the plug has been dropped.
- **Please keep the cord in a well-ventilated environment.**
- **Do not use the appliance if the power cord or plug is damaged or does not expose the appropriate risk or moisture.** The appliance that should not be exposed to dripping or splashing and all objects filled with liquids, such as vases, should be placed on a stable surface.
- **Do not use the appliance if the power cord is damaged or disconnected, the disconnect device that remain ready to operate.**
- **WARNING: The batteries shall not be exposed to discharging, heat, short-circuiting, fire or the like.**

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "live" parts which could cause electric shock. This symbol is usually accompanied by the text "DANGER" or "CAUTION". It is used, for example, on warning labels for uninsulated energized parts, for warning to qualified personnel.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of important information in the literature accompanying the appliance.

The apostrophe should be referred to an electrical wall switch with a protective grounding connection.

2

[\[pdf\]](#) Instructions

TD 6395 US static highspeedbackbone net 80 rebates

REBATE TERMS, CONDITIONS, AND INSTRUCTIONS 50 Mail In Rebate on Seiki  
**SE421TT** 42 Class LED HDTV 1. Purchase a qualified product listed on this form  
between the purchase dates of 6/15/2012 through 6/28/2012. 2. Go to  
<http://www.4myrebate.com/> oc=TD-6395 to claim your rebate Details Below . 3. Pri...  
lang:en score:21 filesize: 78.51 K page\_count: 1 document date: 2012-06-28

[\[pdf\]](#) Instructions

## TD 6460 CA static highspeedbackbone net rebates

REBATE TERMS, CONDITIONS, AND INSTRUCTIONS 50 Mail In Rebate on Seiki  
**SE421TT** 42 Class LED HDTV 1. Purchase a qualified product listed on this form  
between the purchase dates of 6/28/2012 through 7/12/2012. 2. Go to  
<http://www.4myrebate.com/> oc=TD-6460 to claim your rebate Details Below . 3. Pri...  
lang:en score:21 filesize: 78.84 K page\_count: 1 document date: 2012-06-26

[\[pdf\]](#) User Manual Guide Warranty Catalog

LC 46GH6 MSD TI11398 cdr ivan 9d82f05f 1bcc 4f74 85a1 870c7fc166a7 images homedepot static  
catalog Images 9d |||

CAUTION RISQUE CHOC ELECTRIQUE NE PAS OUVRIR 2 21 17-18 19 20-21 22  
23-25 26 26 3 4 5 **SC461TS** User s manual Warranty card Initial assembly Base stand  
Screw MP4x10-HO, 6PCS Mains cable 6 7 SERVICE SERVICE port. M5 x 20, 4PCS  
20 8 Connecting to External Devices SERVICE COAX...

lang:en score:18 filesize: 8.61 M page count: 25 document date: 2012-02-14