

Bestron AFH211B

Bestron Fan Heater AFH211B User Manual

Model: AFH211B

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the heater is placed on a firm, level surface.
- Do not cover the heater. Covering the heater can lead to overheating and fire.
- Keep the heater away from water and do not use it in bathrooms, laundries, or similar wet locations.
- Unplug the heater from the power outlet when not in use or before cleaning.
- Do not insert any objects into the heater's openings. This may cause electric shock or damage.
- Keep children and pets away from the heater, especially when it is operating.
- Do not use the heater near curtains, furniture, or other flammable materials. Maintain a minimum distance of 1 meter (3 feet) from all sides.
- Ensure the power cord is not damaged and is placed where it cannot be tripped over.
- This appliance is for indoor use only.



Image: Top view of the Bestron fan heater, clearly displaying the 'DO NOT COVER' warning label and the two control knobs for power/mode and thermostat settings. This emphasizes a critical safety instruction.

PRODUCT OVERVIEW

The Bestron AFH211B is a compact and efficient fan heater designed for supplemental heating in various indoor spaces. It features adjustable heat settings and a thermostat for precise temperature control.



Image: Front view of the Bestron AFH211B fan heater. The heater is black with a prominent front grille, two silver control knobs at the top, and a small red indicator light in the center.

Components

- **Power/Mode Selector:** Controls the fan and heat settings.
- **Thermostat Dial:** Adjusts the desired room temperature.
- **Indicator Light:** Illuminates when the heater is operating.
- **Air Outlet Grille:** Front grille through which heated air is expelled.
- **Air Inlet:** Located at the rear, where air is drawn in.
- **Tip-Over Safety Switch:** Located at the bottom, automatically shuts off the unit if it tips over.

SETUP AND FIRST USE

Follow these steps to set up your Bestron fan heater for the first time:

1. **Unpack:** Carefully remove the heater from its packaging. Retain the packaging for storage or in case of return.
2. **Placement:** Place the heater on a stable, flat, and heat-resistant surface. Ensure it is not placed directly under a power outlet.
3. **Clearance:** Ensure there is at least 1 meter (3 feet) of clear space around the heater from walls, furniture, curtains, and other flammable materials. Do not block the air inlet or outlet.
4. **Power Connection:** Plug the power cord into a suitable 240V AC power outlet. Ensure the outlet is properly grounded.



Image: The Bestron fan heater positioned on a light-colored rug in a room, with pillows and other home decor in the background. This illustrates a typical setup scenario, showing the heater placed on a stable surface with adequate surrounding space.

OPERATING INSTRUCTIONS

Your Bestron fan heater offers various settings for optimal comfort.

Power and Mode Selection

Use the left knob (Power/Mode Selector) to choose the operating mode:

- **O (Off):** Turns the heater off.
- **Fan Only (*):** Activates the fan without heat, useful for air circulation.
- **Low Heat (I - 1000W):** Provides a lower level of heat output.
- **High Heat (II - 2000W):** Provides the maximum heat output for faster warming.

Thermostat Control

Use the right knob (Thermostat Dial) to set your desired room temperature:

1. Turn the Power/Mode Selector to either Low Heat (I) or High Heat (II).
2. Turn the Thermostat Dial clockwise to the maximum setting. The heater will begin to emit heat.
3. Once the room reaches your desired temperature, slowly turn the Thermostat Dial counter-clockwise until the heater switches off. The indicator light will turn off.
4. The heater will now automatically cycle on and off to maintain the set temperature.



Image: A detailed close-up of the Bestron fan heater's top panel, highlighting the two silver control knobs. The left knob is the power and mode selector (Off, Fan, Low Heat, High Heat), and the right knob is the thermostat dial, allowing users to precisely control the heat output.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your heater.

- **Before Cleaning:** Always unplug the heater from the power outlet and allow it to cool down completely before attempting any cleaning or maintenance.
- **Exterior Cleaning:** Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Air Inlets/Outlets:** Use a vacuum cleaner with a brush attachment to gently remove dust and lint from the air inlet and outlet grilles. Do not use water or liquids on these areas.
- **Storage:** If storing the heater for an extended period, clean it thoroughly and store it in its original packaging or a protective cover in a cool, dry place.
- **No User-Serviceable Parts:** Do not attempt to open or repair the heater yourself. Refer all servicing to qualified service personnel.

TROUBLESHOOTING

If you encounter any issues with your Bestron fan heater, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Tip-over switch activated. Overheat protection activated.	Check if the heater is properly plugged into a working outlet. Ensure the heater is on a flat, stable surface. Unplug, let cool for 10-15 minutes, then plug back in.
No heat output.	Thermostat set too low. Only fan mode selected.	Increase the thermostat setting. Ensure the Power/Mode Selector is set to 'I' (Low Heat) or 'II' (High Heat).
Heater suddenly stops working.	Overheat protection activated. Tip-over switch activated.	Unplug the heater, allow it to cool down for 10-15 minutes, and check for any obstructions. Re-plug. Ensure the heater is upright on a stable surface.
Unusual smell or smoke.	Dust accumulation. Internal fault.	A slight odor may occur during first use. If persistent or strong, unplug immediately and contact customer support. Do not use.

TECHNICAL SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	Bestron
Model Number	AFH211B
Heat Output	1000 Watts / 2000 Watts
Voltage	240V
Amperage	8.33 Amps
Mounting Type	Floor Mount
Product Dimensions (L x W x H)	7.48 x 5.12 x 8.66 inches (19 x 13 x 22 cm)
Item Weight	1.98 pounds (0.9 kg)

WARRANTY AND CUSTOMER SUPPORT

Bestron products are designed for quality and reliability. This product comes with a**5-year warranty**, as indicated on the product packaging, covering manufacturing defects from the date of purchase.



Image: The Bestron fan heater displayed alongside its retail box. The box prominently features a '5 jaar garantie' (5-year warranty) logo, highlighting the product's extended warranty period.

For warranty claims, technical support, or any questions regarding your Bestron AFH211B fan heater, please contact Bestron customer service. Keep your proof of purchase (receipt or invoice) as it will be required for any warranty service.

Please refer to the official Bestron website or your product's original documentation for the most up-to-date contact information and detailed warranty terms and conditions.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question