

## Casio AE-1200WHD-1A

# Casio AE-1200WHD-1A Digital Watch User Manual


Model: AE-1200WHD-1A

[Introduction](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Casio AE-1200WHD-1A digital watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The Casio AE-1200WHD-1A features multiple functions including World Time, Stopwatch, Timer, and Alarms, all powered by a 10-year battery.



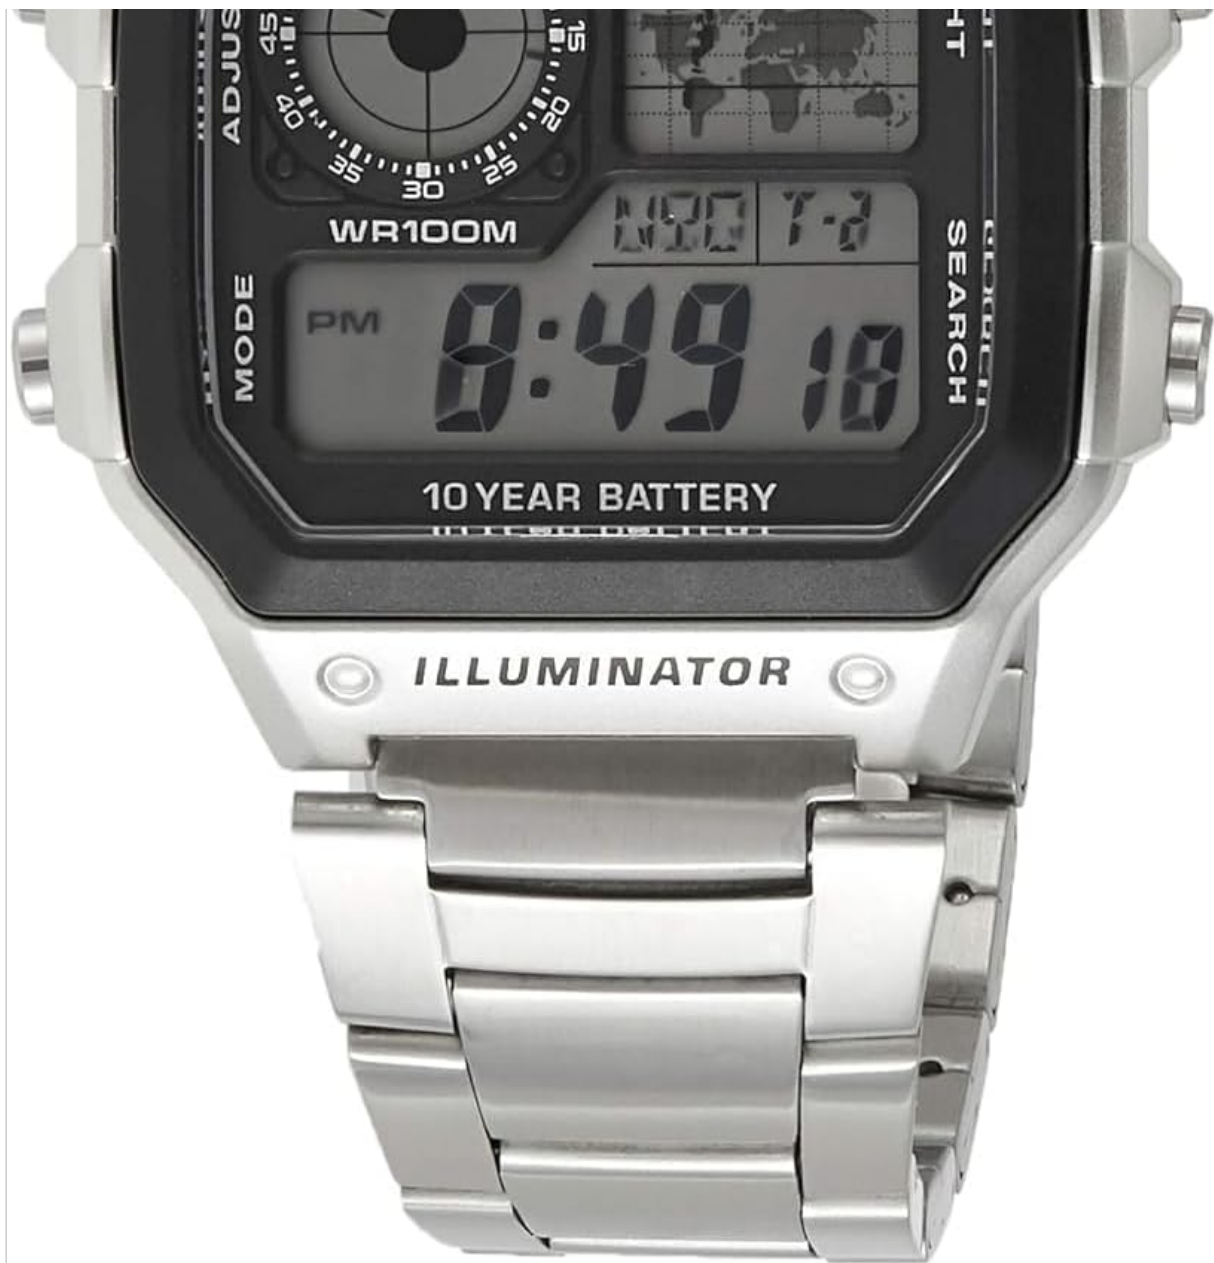

**Image 1.1:** Front view of the Casio AE-1200WHD-1A digital watch. This image displays the watch face with its digital display, including the time, date, and a small world map. The watch features a silver stainless steel case and band, with four control buttons visible on the sides.

## 2. INITIAL SETUP

### 2.1. Button Functions

Your watch has four buttons: **A** (Adjust), **B** (Mode), **C** (Search), and **D** (Light). Refer to the diagram below for their locations.



**Image 2.1:** Side view of the Casio AE-1200WHD-1A. This image highlights the two control buttons located on the left side of the watch case, labeled 'Adjust' and 'Mode' on the watch face.

## 2.2. Setting the Time and Date

1. In the Timekeeping Mode, hold down the **A** (Adjust) button until the city code starts to flash. This indicates the setting mode.
2. Press the **C** (Search) button to cycle through the settings: City Code → DST (Daylight Saving Time) → 12/24-hour format → Seconds → Hour → Minute → Year → Month → Day.
3. Use the **B** (Mode) button to increase the flashing value or the **D** (Light) button to decrease it. For city code, use **B** and **D** to select your desired city.
4. Once all settings are correct, press the **A** (Adjust) button to exit the setting mode.

## 2.3. Adjusting the Bracelet

The stainless steel bracelet can be adjusted for a comfortable fit. This typically involves removing or adding links. It is recommended to have this procedure performed by a qualified jeweler to prevent damage to the watch or bracelet. If adjusting yourself, use appropriate tools to carefully open the clasp and remove pins from links as needed.



**Image 2.2:** Rear view of the Casio AE-1200WHD-1A. This image shows the stainless steel case back with engraved details and the open clasp of the metal bracelet, illustrating how the band can be adjusted.

### 3. OPERATING MODES

Press the **B** (Mode) button to cycle through the different modes: Timekeeping → World Time → Stopwatch → Timer → Alarm.

#### 3.1. Timekeeping Mode

This is the default mode, displaying the current time, date, and day of the week. The small analog-style dial shows seconds, and the world map indicates the current time zone.

#### 3.2. World Time Mode

In World Time Mode, you can view the current time in 48 cities (31 time zones) around the globe. Press the **C** (Search) button to scroll through the city codes. The world map display will highlight the selected time zone.

#### 3.3. Stopwatch Mode

The stopwatch measures elapsed time, split times, and two finishes.

- Press **C** (Search) to start/stop the stopwatch.
- While the stopwatch is running, press **A** (Adjust) to record a split time. Press **A** again to release the split and continue timing.
- When the stopwatch is stopped, press **A** (Adjust) to reset it to zero.

#### 3.4. Timer Mode

The countdown timer can be set for up to 24 hours.

- In Timer Mode, hold down **A** (Adjust) to enter setting mode. The hour value will flash.
- Use **B** (Mode) to increase the value and **D** (Light) to decrease it. Press **C** (Search) to move between hours and minutes.
- Press **A** (Adjust) to exit setting mode.
- Press **C** (Search) to start or stop the countdown.

### 3.5. Alarm Mode

The watch features 5 independent daily alarms and an hourly time signal.

- In Alarm Mode, press **C** (Search) to cycle through the alarms (AL1, AL2, AL3, AL4, AL5, SIG).
- Hold down **A** (Adjust) to enter setting mode for the selected alarm. The hour value will flash.
- Use **B** (Mode) to increase and **D** (Light) to decrease the hour/minute. Press **C** (Search) to switch between hour and minute settings.
- Press **A** (Adjust) to exit setting mode.
- Press **D** (Light) to toggle the selected alarm ON/OFF. The alarm indicator will appear when an alarm is active.

### 3.6. Illuminator (Backlight)

Press the **D** (Light) button in any mode (except when setting) to illuminate the display for easy viewing in low light conditions.

### 3.7. Water Resistance

The Casio AE-1200WHD-1A is water resistant up to 100 meters (10 BAR). This means it is suitable for swimming, showering, and snorkeling. However, it is not recommended for scuba diving. **Do not operate the buttons while the watch is wet or submerged.**

## 4. MAINTENANCE

---

### 4.1. Battery Replacement

This watch is equipped with a 10-year battery (CR2025). When the display becomes dim or functions become erratic, it may be time for battery replacement. It is recommended to have the battery replaced by an authorized service center to ensure proper sealing and water resistance.

### 4.2. Cleaning

Wipe the watch and band with a soft, dry cloth to remove dirt and moisture. For stainless steel bands, a mild soap solution and a soft brush can be used, followed by thorough rinsing and drying. Avoid using harsh chemicals or abrasive cleaners.

### 4.3. Water Resistance Precautions

- Avoid operating buttons while the watch is submerged or wet.
- Do not expose the watch to extreme temperature changes (e.g., hot shower immediately followed by cold water).
- If the watch is exposed to saltwater, rinse it thoroughly with fresh water and dry it with a soft cloth.

## 5. TROUBLESHOOTING

---

- **Display is blank or dim:** The battery may be low. Replace the battery as described in the Maintenance section.
- **Time is incorrect:** Re-set the time and date using the instructions in the Initial Setup section. Ensure the correct city code and DST setting are selected.
- **Buttons are unresponsive:** Ensure the watch is not in a setting mode that locks out other buttons. If the issue persists, a battery reset or professional inspection may be required.
- **Water inside the watch:** Immediately take the watch to an authorized service center. Do not attempt to open the watch yourself, as this will void the warranty and can cause further damage.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	AE-1200WHD-1A
Movement	Quartz (Battery)
Display	Digital
Water Resistance	100 meters (10 BAR)
Battery Type	1 x LR44 (CR2025 equivalent)
Battery Life	Approximately 10 years
Dimensions	2.36 x 4.09 x 3.78 inches (Product); 1.48 ounces (Weight)
Features	World Time (48 cities), 5 Alarms, Stopwatch, Countdown Timer, LED Backlight (Illuminator), 12/24-hour format

## 7. WARRANTY AND SUPPORT






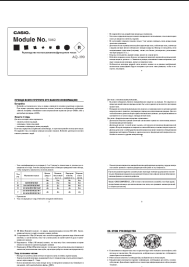
### 7.1. Warranty Information

Casio watches typically come with a limited manufacturer's warranty covering defects in materials and workmanship. The specific terms and duration of your warranty may vary by region and purchase date. Please refer to the warranty card included with your watch or visit the official Casio website for detailed warranty information.

### 7.2. Customer Support

For further assistance, technical support, or service inquiries, please contact Casio customer service. You can find contact information, including phone numbers and online support portals, on the official Casio website ([www.casio.com](http://www.casio.com)). When contacting support, please have your watch model number (AE-1200WHD-1A) and purchase details readily available.

Related Documents - AE-1200WHD-1A

	<p><a href="#">Casio LCF-10 (Module 4764) User Manual</a></p> <p>Comprehensive user manual for the Casio LCF-10 wristwatch, module 4764, covering features, operation, water resistance, world time, stopwatch, timer, and alarm functions.</p>
	<p><a href="#">Casio Module 3780 Watch User Manual</a></p> <p>Comprehensive user manual for the Casio Module 3780 watch, covering features, functions, water resistance, time setting, alarms, stopwatch, countdown timer, and technical specifications.</p>
	<p><a href="#">Casio LAW-21 Модуль 2789: Руководство пользователя и характеристики</a></p> <p>Полное руководство пользователя для часов Casio LAW-21 (Модуль 2789). Содержит инструкции по эксплуатации, уходу, описания режимов работы (текущее время, мировое время, таймер, секундомер, будильник) и технические характеристики.</p>
	<p><a href="#">CASIO MSG-140 Module 2495 User Manual - Operating Instructions and Features</a></p> <p>Comprehensive user manual for the CASIO MSG-140 watch with Module 2495. Learn about water resistance, world time, stopwatch, timer, alarm functions, and maintenance.</p>
	<p><a href="#">Casio G-7000 Digital Watch User Manual (Module 2804)</a></p> <p>This user manual provides detailed instructions for operating the Casio G-7000 digital watch, module 2804. It covers water resistance ratings, operational modes including timekeeping, world time, phone book, alarms, stopwatch, and timer, as well as battery care and specifications.</p>
	<p><a href="#">Casio Module No. 5082 AQ-190 User Manual</a></p> <p>Comprehensive user manual for the Casio AQ-190 watch, Module No. 5082, detailing features, functions, and operation including timekeeping, stopwatch, alarm, world time, and timer.</p>