

[Manuals.plus](#) /

› [Toastmaster](#) /

› Toastmaster TM-61MC 1.5 Cup One-Touch Mini Food Chopper User Manual

Toastmaster TM-61MC

Toastmaster TM-61MC 1.5 Cup One-Touch Mini Food Chopper User Manual

Model: TM-61MC

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- To protect against electrical shock, do not immerse the motor base, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended household use.

PARTS IDENTIFICATION

- Motor Base
- Chopping Bowl (1.5 Cup Capacity)
- Stainless Steel Blade Assembly
- Locking Lid



Figure 1: All components of the Toastmaster Mini Food Chopper.



Figure 2: Detailed view of the motor base and stainless steel blade.

BEFORE FIRST USE

Before using your new Toastmaster Mini Food Chopper for the first time, wash the chopping bowl, blade assembly, and lid in warm, soapy water. Rinse thoroughly and dry all parts completely. The motor base should only be wiped clean with a damp cloth.

SETUP

1. Place the motor base on a clean, dry, and stable surface.
2. Place the chopping bowl onto the motor base, ensuring it is seated correctly.
3. Carefully place the stainless steel blade assembly onto the shaft inside the chopping bowl.
4. Add your ingredients to the chopping bowl. Do not overfill; the maximum capacity is 1.5 cups.
5. Place the locking lid onto the chopping bowl. Align the tabs on the lid with the slots on the bowl and twist clockwise until you hear a distinct "click" sound. This indicates the lid is securely locked and the safety feature is engaged. The chopper will not operate if the lid is not properly locked.



Figure 3: The mini food chopper assembled and ready for use with ingredients.

OPERATING

Once the unit is assembled and the lid is securely locked, plug the power cord into a standard electrical outlet.

To operate, simply press down on the large pulse button located on the top of the motor base. The blades will begin to chop. Release the button to stop the chopping action. This pulse operation allows for precise control over the texture of your ingredients, from coarse to finely minced.



Figure 4: The one-touch pulse button for operation.

MAINTENANCE AND CLEANING

Always unplug the appliance from the electrical outlet before cleaning. Disassemble the chopping bowl, blade assembly, and lid from the motor base.

The chopping bowl, blade assembly, and lid are **not dishwasher safe** and should be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots and maintain blade sharpness.

The motor base should be wiped clean with a damp cloth. Do not immerse the motor base in water or any other liquid.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Unit does not turn on.	Ensure the power cord is securely plugged into a working electrical outlet. Verify that the locking lid is properly aligned and twisted until it clicks into place, engaging the safety mechanism.
Food is not chopping evenly.	Do not overfill the chopping bowl; ensure ingredients are below the maximum fill line. Use the pulse action (short bursts) rather than continuous operation for better control and more even chopping. For larger ingredients, pre-cut them into smaller, more manageable pieces before placing them in the chopper.

SPECIFICATIONS

- **Brand:** Toastmaster
- **Model:** TM-61MC
- **Bowl Capacity:** 1.5 Cups
- **Blade Material:** Stainless Steel
- **Product Dimensions:** 4.57"D x 6.73"W x 5.24"H
- **Item Weight:** 1.2 pounds
- **Power:** One-Touch Pulse Operation

WARRANTY AND SUPPORT

The Toastmaster TM-61MC 1.5 Cup One-Touch Mini Food Chopper carries a one year manufacturer's limited warranty from the date of purchase. This warranty covers defects in material and workmanship under normal household use.

For warranty claims, technical support, or to obtain a copy of the full user manual, please refer to the official Toastmaster website or contact their customer service department. A PDF version of the user manual may also be available for download at <https://manuals.plus/m/d74634db9bae7527cfe95ab1c0ceaf45d6bc964bbd403bc366efb2fa671535fb>.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00N43IOW6>

More documents and user manuals: <https://manuals.plus/>