

[manuals.plus](#) /› [Nintendo](#) /› [Nintendo Wii Remote Plus Black Instruction Manual \(Model RVLAPNK1\)](#)

Nintendo RVLAPNK1

Nintendo Wii Remote Plus Black Instruction Manual

Model: RVLAPNK1

1. PRODUCT OVERVIEW

The Nintendo Wii Remote Plus is a unique wireless controller designed for the Wii and Wii U video game systems. It integrates the enhanced sensitivity of Wii MotionPlus technology, allowing for natural and fluid motion control. This controller replaces traditional button pressing with intuitive hand movements, making gameplay more immersive.

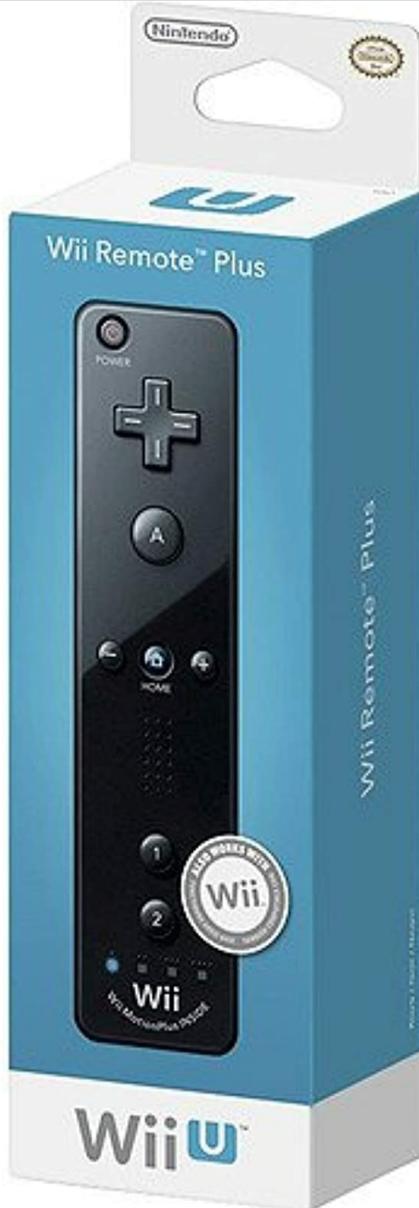


Figure 1: Nintendo Wii Remote Plus in Black, showcasing its ergonomic design and wrist strap. The controller features a D-pad, A button, Home button, Plus and Minus buttons, and 1 and 2 buttons, along with a Power button at the top.

2. SETUP INSTRUCTIONS

2.1. Battery Installation

1. Open the battery cover on the back of the Wii Remote Plus.
2. Insert two (2) AA batteries, ensuring correct polarity (+/-).
3. Close the battery cover securely.

2.2. Syncing with Your Console

To establish a wireless connection between your Wii Remote Plus and your Wii or Wii U console, follow these steps:

1. Turn on your Wii or Wii U console.
2. Open the SD Card slot cover on the front of the Wii console, or the sync button cover on the front of the Wii U console.
3. Press the red SYNC button inside the console's slot/cover. The Player LED on the console will flash.
4. On your Wii Remote Plus, open the battery cover and locate the small red SYNC button.

5. Press the red SYNC button on the Wii Remote Plus. The Player LED lights on the bottom of the remote will flash.
6. Once the syncing is complete, one of the Player LED lights on the remote will remain lit, indicating the player number.

Note: If the Player LED lights continue to flash or do not light up, repeat the syncing process.

3. OPERATING INSTRUCTIONS

The Wii Remote Plus offers intuitive control through its buttons and motion-sensing capabilities.

3.1. Button Functions

- **Power On/Off Button:** Turns the Wii Remote Plus and the console on or off.
- **A Button:** Primary action button, often used for selecting items or performing main actions.
- **D-Pad (Directional Pad):** Used for directional input in games and menu navigation.
- **Home Button:** Accesses the Home Menu during gameplay.
- **Minus (-) Button:** Often used for secondary actions or zooming out.
- **Plus (+) Button:** Often used for secondary actions or zooming in.
- **1 Button:** Context-sensitive button, varies by game.
- **2 Button:** Context-sensitive button, varies by game.

3.2. Motion Control

The integrated Wii MotionPlus technology provides 1:1 motion tracking. Tilt, twist, and swing the remote to interact with games. Ensure you have adequate space around you and always use the wrist strap to prevent accidental release of the controller.

4. MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Remove batteries if the controller will not be used for an extended period to prevent leakage.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the wrist strap is securely attached and in good condition before each use.

5. TROUBLESHOOTING

5.1. Controller Not Responding

- Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
- Ensure the controller is properly synced with the console (refer to Section 2.2).
- Verify that there are no obstructions between the controller and the console's sensor bar.

5.2. Motion Control Issues

- Recalibrate the controller in the Wii/Wii U system settings if motion tracking seems inaccurate.
- Ensure the sensor bar is positioned correctly and free from interference.

6. SPECIFICATIONS

Feature	Description
Model Number	RVLAPNK1
Brand	Nintendo
Color	Black
Connectivity Technology	Wireless
Buttons & Controls	A Button, Power On/Off Button, Minus Button, Plus Button, Home Button, 1 Button, 2 Button
Platform Supported	Nintendo Wii, Nintendo Wii U
Dimensions	2.52 x 2.05 x 8.47 inches
Item Weight	7.36 ounces
Batteries Required	2 AA batteries
Manufacturer	Nintendo of America
Release Date	October 31, 2014

7. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Nintendo Wii Remote Plus, please refer to the official Nintendo website or contact Nintendo customer support directly. Keep your proof of purchase for any warranty claims.

You can visit the official Nintendo Store for additional information and support resources: [Nintendo Store](#)