

Bosch PHD1151

Bosch PHD 1151 Hair Dryer User Manual

1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your Bosch PHD 1151 hair dryer. Please read all instructions carefully before use and retain for future reference. This appliance is designed for drying human hair only.



Image: Bosch PHD 1151 Hair Dryer, a compact black and green hair dryer with a foldable handle.

Safety Instructions

- Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Always unplug the appliance immediately after use and before cleaning.
- Keep the appliance out of reach of children.
- Do not block the air inlet or outlet grilles during operation.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. SETUP

1. Carefully unpack the hair dryer and all accessories from the packaging.
2. Ensure that the voltage indicated on the appliance (usually on the handle or body) corresponds to your

local mains voltage before connecting.

3. Plug the appliance into a suitable, grounded power outlet.

3. OPERATING INSTRUCTIONS

The Bosch PHD 1151 hair dryer is designed for ease of use with essential features for effective hair drying.

- **Power On/Off:** Locate the switch on the handle. Slide it to the 'ON' position to start the hair dryer and to the 'OFF' position to turn it off.
- **Speed/Heat Settings:** Your hair dryer features multiple settings. Adjust the switch to select your desired combination of airflow speed and heat level. Typically, higher settings provide faster drying and more heat, while lower settings are suitable for gentle drying or styling.
- **Folding Handle:** For compact storage and travel, the handle of the PHD 1151 can be folded. To fold, gently push the handle towards the body of the dryer until it locks into the folded position. To unfold, pull the handle away from the body until it clicks securely into the operating position.

4. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your hair dryer.

- **Cleaning the Exterior:** Always unplug the appliance before cleaning. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Air Inlet Filter:** Over time, lint and dust can accumulate on the air inlet filter, reducing airflow and potentially causing overheating. Regularly check and clean the filter by gently brushing away any debris. Ensure the filter is completely dry before using the appliance again.
- **Storage:** Allow the hair dryer to cool down completely before storing. Store it in a dry place, away from direct sunlight and extreme temperatures. Utilize the folding handle feature to save space when storing or traveling.

5. TROUBLESHOOTING

If you encounter any issues with your Bosch PHD 1151 hair dryer, please refer to the following table for common problems and solutions.

Problem	Possible Cause / Solution
Hair dryer does not turn on.	<ul style="list-style-type: none">• Ensure the power cord is securely plugged into a functional electrical outlet.• Check your household's circuit breaker or fuse box.
Reduced airflow or overheating.	<ul style="list-style-type: none">• The air inlet filter may be blocked with lint or dust. Clean the filter as described in the Maintenance section.• Ensure the air outlet grille is not obstructed.

Problem	Possible Cause / Solution
Unusual noise during operation.	<ul style="list-style-type: none"> • Immediately unplug the appliance. • Check for any foreign objects lodged in the air inlets or outlets. • If the noise persists after checking, discontinue use and contact customer support.

6. SPECIFICATIONS

Technical details for the Bosch PHD 1151 hair dryer.

Feature	Detail
Model Number	PHD1151
Brand	Bosch
Power	120 Watts
Dimensions (L x W x H)	26.01 x 11.51 x 7.49 cm
Weight	400 grams
Color	Black/Green
International Article Code (EAN/UPC)	04242002794402

7. WARRANTY AND SUPPORT

For detailed warranty information, terms, and conditions, please refer to the warranty card or documentation included with your purchase. In case of technical issues, repairs, or questions not covered in this manual, please contact Bosch customer support or visit the official Bosch website for assistance.

Please have your model number (PHD1151) and proof of purchase ready when contacting support.