

[Manuals.plus](#) /

› [Babymoov](#) /

› Babymoov A014201 Premium Care Digital Baby Monitor User Manual

Babymoov A014201

Babymoov A014201 Premium Care Digital Baby Monitor User Manual

Model: A014201

INTRODUCTION

Thank you for choosing the Babymoov A014201 Premium Care Digital Baby Monitor. This device is designed to provide reliable audio monitoring of your baby, ensuring peace of mind. Please read this manual carefully before using the product to ensure proper operation and to maintain the safety of your child.

IMPORTANT SAFETY INSTRUCTIONS

- Keep the baby unit and parent unit out of reach of children. Cords can pose a strangulation hazard.
- Do not place the baby unit within 1 meter (3 feet) of the baby's crib or playpen.
- Use only the power adapters supplied with the product. Using unauthorized adapters may damage the device and void the warranty.
- Do not expose the units to water, moisture, or extreme temperatures. This product is not water-resistant.
- Ensure proper ventilation for both units. Do not cover them with cloths or other materials.
- This product is not a medical device and should not be used as a substitute for responsible adult supervision.
- Dispose of batteries responsibly according to local regulations.

PACKAGE CONTENTS

The Babymoov A014201 Premium Care Digital Baby Monitor package includes the following items:

- 1 x Baby Unit (Transmitter)
- 1 x Parent Unit (Receiver)
- 2 x Power Adapters

- Rechargeable batteries for the Parent Unit (may be pre-installed)
 - User Manual (this document)
-

PRODUCT OVERVIEW

The Babymoov A014201 Premium Care Baby Monitor consists of two main units: the Baby Unit (transmitter) and the Parent Unit (receiver).

Baby Unit (Transmitter)

This unit is placed in your baby's room. It features a sensitive microphone to pick up sounds and a night light function. It transmits audio to the Parent Unit.



Image: The Babymoov A014201 Baby Unit, showing its compact design and integrated night light. This unit is placed near the baby to monitor sounds.

Parent Unit (Receiver)

The Parent Unit allows you to hear your baby and interact using the two-way talk function. It features an LCD screen displaying temperature, battery level, and other indicators. It also includes a belt clip for portability and various alarm functions.



Image: The Babymoov A014201 Parent Unit, highlighting its belt clip for easy carrying. This unit receives audio from the baby unit and provides various monitoring features.

Key Features:

- **Long Range:** Up to 1400 meters in an open field.
 - **Digital Green Technology:** Ensures low emission levels.
 - **Voice Activated (VOX) Mode:** Activates transmission only when sound is detected.
 - **Two-Way Talk Function:** Allows you to speak to your baby remotely.
 - **Night Light:** Integrated into the baby unit.
 - **LCD Screen:** Displays room temperature, battery level, and other settings.
 - **Multiple Alarms:** Acoustic, optical, and vibration alarms for out-of-range and low battery.
 - **Automatic Channel Search:** For optimal connection.
 - **Belt Clip:** For convenient portability of the parent unit.
-

SETUP GUIDE

1. Charging the Units

Before first use, fully charge both the Baby Unit and Parent Unit for approximately 8-10 hours. Connect the supplied power adapters to each unit and plug them into a wall outlet. The battery indicator on the Parent Unit will show charging status.

2. Placing the Baby Unit (Transmitter)

- Place the Baby Unit in your baby's room, on a flat surface, at least 1 meter (3 feet) away from the baby's crib or playpen.
- Ensure the microphone is not obstructed and is facing towards the baby.
- Plug the Baby Unit into a power outlet using its adapter.

3. Placing the Parent Unit (Receiver)

- Keep the Parent Unit with you. It can be powered by its rechargeable battery or by plugging it into a power outlet.
- Utilize the belt clip for hands-free portability around your home.

4. Powering On

Press and hold the power button on both the Baby Unit and Parent Unit until the display or indicator lights turn on. The units will automatically attempt to establish a connection.



Image: Both the Babymoov A014201 Baby Unit and Parent Unit displayed on a surface in a nursery, indicating their placement during use.

OPERATING INSTRUCTIONS

Volume Control

Adjust the listening volume on the Parent Unit using the dedicated volume buttons (usually '+' and '-').

VOX (Voice Activated) Mode vs. Continuous Transmission

- **VOX Mode:** The Baby Unit transmits only when it detects sound above a certain threshold. This conserves battery and reduces continuous emissions. You can usually adjust the sensitivity of the microphone.
- **Continuous Transmission:** The Baby Unit transmits audio constantly. Refer to your Parent Unit's menu or buttons to switch between these modes.

Night Light Function

The Baby Unit includes a gentle night light. This can often be activated manually from the Baby Unit or remotely from the Parent Unit, or set to activate with sound in VOX mode.

Two-Way Talk Function (Walkie-Talkie)

To speak to your baby, press and hold the talk button on the Parent Unit. Speak clearly into the microphone. Release the button to resume listening.

Alarms and Indicators

- **Out-of-Range Alarm:** The Parent Unit will alert you (acoustically, optically, or via vibration) if it loses connection with the Baby Unit. Move closer to the Baby Unit to re-establish connection.
 - **Low Battery Alarm:** An indicator on the Parent Unit will warn you when the battery is low. Recharge the Parent Unit promptly.
 - **Temperature Display:** The LCD screen on the Parent Unit displays the room temperature detected by the Baby Unit.
-

MAINTENANCE

- **Cleaning:** Wipe the units with a dry, soft cloth. Do not use cleaning sprays or liquid cleaners.
 - **Battery Care:** For optimal battery life, avoid fully discharging the Parent Unit's battery frequently. If storing the unit for an extended period, charge it periodically.
 - **Storage:** Store the monitor in a cool, dry place away from direct sunlight and extreme temperatures.
-

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from Parent Unit / Poor sound quality	Volume too low. Units are out of range. Baby Unit is in VOX mode and no sound is detected. Interference from other electronic devices.	Increase volume on Parent Unit. Move Parent Unit closer to Baby Unit. Check VOX sensitivity settings or switch to continuous transmission. Move units away from other electronics (Wi-Fi routers, cordless phones).
Parent Unit loses connection / Out-of-range alarm	Units are too far apart. Obstructions (walls, floors) blocking signal. Low battery on Baby Unit.	Move Parent Unit closer to Baby Unit. Try repositioning units to minimize obstructions. Ensure Baby Unit is plugged into power or has charged batteries.
Parent Unit battery drains quickly	Battery not fully charged. Old or worn-out battery. Continuous transmission mode uses more power.	Ensure Parent Unit is fully charged before use. Consider replacing the rechargeable battery if it no longer holds a charge. Use VOX mode to conserve battery life.
Night light not working	Not activated. Power issue.	Ensure night light function is enabled via the Baby Unit or Parent Unit controls. Check if the Baby Unit is properly powered.

TECHNICAL SPECIFICATIONS

Model Number	A014201
Brand	Babymoov
Frequency	865 MHz
Maximum Range	Up to 1400 meters (open field) / 900 meters (general)
Number of Channels	2
Power Supply	4.5 Volt (via supplied adapters)
Product Dimensions	6.5 x 3 x 9.5 cm
Weight	500 g
Water Resistance	Not water resistant
Special Features	Night light function, VOX mode, Two-way talk, LCD display with temperature

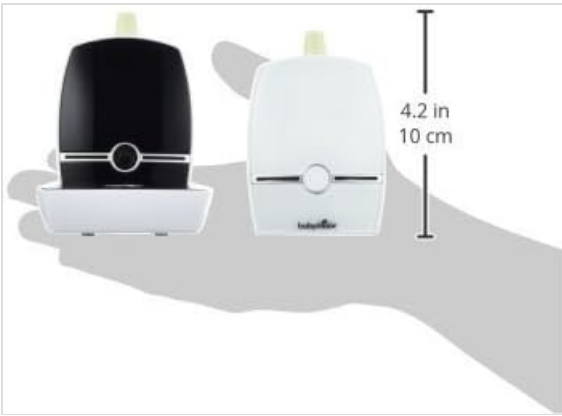


Image: The Babymoov A014201 Baby Monitor units shown in hand for a visual size comparison, indicating their compact dimensions.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or visit the official Babymoov website. Babymoov offers a limited warranty on its products against defects in materials and workmanship.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Babymoov customer service directly. Contact details can typically be found on their official website or on the product packaging.

Official Website: www.babymoov.com