



Manuals.plus /

› **Fisher-Price /**

› Fisher-Price Laugh & Learn Smart Stages Tablet User Manual

Fisher-Price CHC61

Fisher-Price Laugh & Learn Smart Stages Tablet User Manual

Model: CHC61

PRODUCT OVERVIEW

The Fisher-Price Laugh & Learn Smart Stages Tablet is an interactive learning toy designed for infants and toddlers aged 1-3 years. This pretend tablet features multi-color lights, music, sounds, and learning phrases to engage your child in educational play.

It includes 28 'app' buttons that activate various lights, sounds, and learning phrases. With over 100 songs, sounds, and phrases, the tablet teaches letters of the alphabet, colors, first words, and more. The unique Smart Stages technology allows you to adjust the learning content as your child grows, providing three distinct levels of play.



Image: Front view of the Fisher-Price Laugh & Learn Smart Stages Tablet in pink, with its screen displaying various colorful 'app' buttons and the border glowing with lights.

SETUP

Battery Installation

The Fisher-Price Laugh & Learn Smart Stages Tablet requires 3 AAA batteries for operation. These batteries are typically included with the product.

1. Locate the battery compartment on the back of the tablet.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 3 new AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the cover and tighten the screw.

Powering On

Once batteries are installed, locate the power switch, usually found on the side or bottom edge of the tablet. Slide the switch to the 'ON' position to activate the toy.



Image: The Fisher-Price Laugh & Learn Smart Stages Tablet shown inside its retail packaging, highlighting its features and age recommendations.

OPERATING INSTRUCTIONS

Smart Stages Technology

The tablet features Smart Stages technology, offering three levels of learning content that adapt as your child grows. Use the Smart Stages selector switch (often labeled 1, 2, 3) to choose the appropriate level:

- **Level 1 - Explore:** Focuses on first words and sounds to spark curiosity. When a button is pressed, it might say the letter and then the word associated with the image (e.g., "A, Apple").
- **Level 2 - Encourage:** Prompts the child with questions and simple directions. Pressing a button might only say the word (e.g., "Apple").
- **Level 3 - Pretend:** Encourages imaginative play and early role-playing. Pressing a button might only produce the sound associated with the image (e.g., the sound of an apple being crunched).

Interactive Buttons

The tablet has 28 'app' buttons, each corresponding to a letter of the alphabet or a special function. Pressing these buttons will activate lights, music, and learning phrases based on the selected Smart Stages level.

- **Alphabet Buttons:** Each button from A to Z features a letter and an associated image (e.g., 'A' for Apple, 'B' for Bear). Pressing these buttons will teach letters, first words, and animal sounds.
- **Music Button:** Located on the screen, this button plays various songs and tunes.
- **Sound Effects Button:** This button activates different fun noises.

Lights and Sounds

The tablet features multi-color lights around its border that illuminate when buttons are pressed, enhancing the interactive experience. The integrated speaker provides clear audio for all songs, sounds, and phrases.

Volume Control

A volume control switch is located on the tablet, allowing you to adjust the sound output to a comfortable level (low or high volume options are typically available).



Image: A detailed close-up of the tablet's screen, showing the individual 'app' buttons with letters and corresponding illustrations, along with the Smart Stages selector.



Image: A toddler's hand pressing one of the 'app' buttons on the Fisher-Price Laugh & Learn Smart Stages Tablet, demonstrating interaction.

MAINTENANCE

Cleaning

To clean the tablet, wipe it with a damp cloth using mild soap and water. Do not immerse the tablet in water or use harsh cleaning agents, as this may damage the electronic components.

Battery Care

- Remove batteries if the toy is not going to be used for an extended period.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries properly.

TROUBLESHOOTING

No Sound or Lights

- Check if the power switch is in the 'ON' position.
- Ensure batteries are installed correctly with proper polarity.
- Replace old or depleted batteries with new ones.

- Check the volume control to ensure it is not set to the lowest setting.

Buttons Not Responding

- Verify that the tablet is powered on and has fresh batteries.
- Ensure there is no debris or obstruction preventing the buttons from being fully pressed.
- If the issue persists, try turning the tablet off and on again to reset it.

SPECIFICATIONS

Feature	Detail
Brand	Fisher-Price
Model Number	CHC61
Item Weight	9.1 ounces
Product Dimensions	11.13 x 1.5 x 8 inches
Battery Type	3 AAA batteries (included)
Recommended Age	1-3 years

WARRANTY AND SUPPORT

For warranty information or further support, please refer to the official Fisher-Price website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

A digital version of the user manual may also be available for download from the manufacturer's website or via the following link: [User Manual \(PDF\)](#)