

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Werner](#) /

› [Werner 150B 2 Step Aluminum Step Stool Instruction Manual](#)

Werner 150B

Werner 150B 2 Step Aluminum Step Stool Instruction Manual

Model: 150B

[Introduction](#)

[Safety Information](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Werner 150B 2 Step Aluminum Step Stool. This manual provides essential information for the safe and effective use, setup, maintenance, and troubleshooting of your step stool. Please read this manual thoroughly before using the product and retain it for future reference.

The Werner 150B is designed to provide a stable and secure elevated platform for various tasks, featuring a lightweight aluminum construction and two steps for convenient access to higher areas.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in serious injury or death.

- Always inspect the step stool for damage or loose parts before each use. Do not use if damaged.
- Ensure all four feet are firmly on a level, stable, and non-slippery surface before climbing.
- Do not exceed the maximum load capacity specified for this step stool.
- Maintain three points of contact (two hands and one foot, or two feet and one hand) while climbing or descending.
- Do not stand on the top step or platform unless it is explicitly designed for standing. The Werner 150B is designed for standing on the top step.
- Do not overreach. Keep your body centered between the side rails.
- Do not use the step stool on soft ground, uneven surfaces, or near electrical wires.
- Keep children and pets away from the step stool during use.
- Wear appropriate footwear with good traction.
- Do not use the step stool as a bridge or scaffold.
- Clean any spills or debris from the steps before use.

3. SETUP

The Werner 150B 2 Step Aluminum Step Stool is designed for quick and easy deployment. Follow these steps to set up your stool:

1. **Unfold the Stool:** Grasp the top step or frame and gently pull the front and rear legs apart until the locking mechanism engages. Ensure the spreaders are fully extended and locked into place.
2. **Verify Stability:** Before climbing, lightly push down on the top step to confirm that the stool is stable and does not wobble. All four feet should be in full contact with the ground.



Image: A person safely using the Werner 150B step stool to reach a high area. The stool is fully extended and stable.

4. OPERATING INSTRUCTIONS

Using your Werner 150B step stool correctly ensures safety and efficiency.

1. **Placement:** Position the step stool directly in front of the task area. Avoid placing it on uneven or slippery surfaces.
2. **Climbing:** Face the steps when climbing. Use the lower step first, then proceed to the upper step. Always maintain three points of contact.
3. **Working Position:** Stand firmly on the steps. Keep your belt buckle (center of gravity) between the side rails. Do not lean too far to one side or overreach. If you cannot reach comfortably, descend and reposition the stool.
4. **Descending:** Face the steps when descending. Maintain three points of contact.



Image: Detail of the Werner 150B top step, highlighting the non-slip surface for secure footing.

5. MAINTENANCE

Proper maintenance extends the life of your step stool and ensures continued safe operation.

- **Cleaning:** Clean the step stool with a damp cloth and mild detergent. Avoid abrasive cleaners that could damage the aluminum finish or non-slip surfaces.

- **Inspection:** Regularly inspect all components, including steps, feet, hinges, and locking mechanisms, for wear, damage, or corrosion.
- **Storage:** Store the step stool in a dry place, away from extreme temperatures and direct sunlight. Fold the stool for compact storage.
- **Repairs:** Do not attempt to repair damaged parts yourself. Contact Werner customer support for authorized repairs or replacement parts.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stool wobbles or feels unstable.	Uneven surface; spreaders not fully locked.	Move to a level surface. Ensure spreaders are fully extended and locked.
Difficulty unfolding/folding.	Hinges may be stiff or obstructed.	Apply a small amount of lubricant to hinge points. Check for debris.
Non-slip feet are worn or missing.	Normal wear and tear; accidental loss.	Discontinue use. Contact Werner for replacement feet.

7. SPECIFICATIONS

Model: Werner 150B (150B-AGD)

Type: 2 Step Aluminum Step Stool

Material: Aluminum

Number of Steps: 2

Approximate Item Weight: 5.54 pounds

Product Dimensions (Folded): 17"W x 4.13"H

Maximum Working Height: Approximately 8 Feet (when user is standing on top step and reaching)

UPC: 051751029789

ASIN: B00NAHM9CW

8. WARRANTY & SUPPORT

For specific warranty information regarding your Werner 150B 2 Step Aluminum Step Stool, please refer to the documentation included with your purchase or visit the official Werner website. Werner products typically come with a limited warranty covering defects in material and workmanship.

If you require technical assistance, replacement parts, or have questions not covered in this manual, please contact Werner customer support:

- **Werner Official Website:** www.wernerco.com
- Refer to your product packaging for specific contact numbers or email addresses.



