

**Magimix CS 5200 XL Premium**

# Magimix CS 5200 XL Premium Multifunction Robot Instruction Manual

Model: CS 5200 XL Premium (148403)

Brand: Magimix

---

|            |       |           |             |                    |          |                 |                    |
|------------|-------|-----------|-------------|--------------------|----------|-----------------|--------------------|
| Components | Setup | Operation | Maintenance | Safety Information | Included | Troubleshooting | Warranty & Support |
|------------|-------|-----------|-------------|--------------------|----------|-----------------|--------------------|

## 1. INTRODUCTION

The Magimix CS 5200 XL Premium is a versatile multifunction robot designed to simplify your kitchen tasks. Featuring an 1100W motor, it comes with three vessels for various preparations, including mixing, juicing, and pureeing. This manual provides essential information for the safe and efficient use of your appliance.



Figure 1: Magimix CS 5200 XL Premium Multifunction Robot.

## 2. SAFETY INFORMATION

### **WARNING: Always read all safety warnings and instructions before using this appliance.**

- Ensure all parts are correctly assembled and locked into place before operation.
- Keep hands and utensils out of the processing bowl while operating to prevent injury.
- Avoid contact with moving parts.
- Do not immerse the motor unit in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Exercise caution when handling sharp blades.

## 3. INCLUDED COMPONENTS

Your Magimix CS 5200 XL Premium comes with a variety of components to enhance your food preparation experience:

- Motor Unit (Base)
- Main Bowl (3.6 Liters capacity)
- Midi Bowl
- Mini Bowl
- Lid with Pusher (XL Feed Tube)
- S Blade (Main Blade) - Stainless Steel
- Dough Blade
- Whisk
- Slicing Discs (various thicknesses)
- Grating Discs (various sizes)
- Spatula
- Storage Box for accessories



Figure 2: Overview of the Magimix food processor and its accessories, including different sized bowls and blades.

## 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash all removable parts (bowls, blades, lid, pusher) in warm, soapy water or place them in the dishwasher. Wipe the motor unit with a damp cloth.
3. **Assemble Bowl:** Place the main bowl onto the motor unit. Twist clockwise until it locks securely into place.
4. **Insert Blade/Disc:** Select the appropriate blade (e.g., S Blade for chopping) or disc (for slicing/grating) and carefully place it onto the central spindle in the bowl.
5. **Attach Lid:** Place the lid onto the bowl, ensuring the handle aligns with the bowl's handle. Twist the lid clockwise until it locks. The appliance will not operate if the lid is not securely locked.
6. **Insert Pusher:** Place the pusher into the feed tube of the lid.



# MAGIMIX 4200XL

## REVIEW + 2 TOP TIPS!





Figure 3: Disassembled Magimix food processor showing the main bowl, blade, and lid components.

## 5. OPERATING INSTRUCTIONS

The Magimix CS 5200 XL Premium features simple controls for efficient use.

### Control Panel:

- **ON Button:** Press to activate continuous operation.
- **PULSE Button:** Press and hold for short bursts of power. Release to stop. Ideal for chopping, mincing, or controlling texture.
- **OFF Button:** Press to stop the appliance.

### Basic Operation:

1. Ensure the appliance is correctly assembled and plugged into a power outlet.
2. Add ingredients to the bowl. For slicing or grating, feed ingredients through the feed tube using the pusher.
3. Select your desired function: press 'ON' for continuous processing or 'PULSE' for intermittent processing.
4. Once processing is complete, press 'OFF'. Wait for the blade to stop completely before disassembling.



Figure 4: Demonstrating the pulse function for chopping vegetables in the Magimix food processor.

## 6. MAINTENANCE AND CLEANING

- **Cleaning:** All removable parts (bowls, blades, lid, pusher) are dishwasher safe. For best results, rinse immediately after use. The motor unit should be wiped clean with a damp cloth. Do not immerse the motor unit in water.
- **Storage:** Store all accessories in the provided storage box to keep them organized and safe.



Figure 5: The accessory storage box for Magimix food processor blades and attachments.

## 7. SPECIFICATIONS

| Feature           | Detail             |
|-------------------|--------------------|
| Brand             | Magimix            |
| Model Name        | CS 5200 XL Premium |
| Item Model Number | 148403             |

|                           |   |
|---------------------------|---|
| Wattage                   | 1100 watts                                      |
| Bowl Capacity             | 3.6 Liters                                      |
| Product Dimensions        | 7.87"D x 7.87"W x 15.75"H                       |
| Item Weight               | 24.2 pounds                                     |
| Blade Material            | Stainless Steel                                 |
| Special Feature           | Adjustable Speed Control                        |
| Power Source              | Electric with cable                             |
| Product Care Instructions | Hand Wash (removable parts are dishwasher safe) |

## 8. TROUBLESHOOTING

If you encounter issues with your Magimix CS 5200 XL Premium, please refer to the following common solutions:

- **Appliance not starting:** Ensure the bowl and lid are correctly assembled and locked into place. Check that the power cord is securely plugged into a working outlet.
- **Motor stops during operation:** The appliance may be overloaded. Turn off, unplug, remove some ingredients, and restart.
- **Uneven processing:** Ensure ingredients are cut into similar-sized pieces before adding to the bowl. Use the pulse function for better control over consistency.

## 9. WARRANTY AND SUPPORT

The Magimix CS 5200 XL Premium comes with a **3-year warranty**, ensuring peace of mind for your purchase. For further assistance, technical support, or warranty claims, please contact Magimix customer service through their official website or the retailer where the product was purchased.

For more information, visit the official Magimix website: [www.magimix.com](http://www.magimix.com)