

[Manuals.plus](#) /

› [Lavish Home](#) /

› Lavish Home 4-Tier Wood Shoe Storage Rack Instruction Manual

Lavish Home 83-10-4

Lavish Home 4-Tier Wood Shoe Storage Rack Instruction Manual

Model: 83-10-4

INTRODUCTION

Thank you for choosing the Lavish Home 4-Tier Wood Shoe Storage Rack. This manual provides essential information for the safe assembly, proper use, and maintenance of your new shoe organizer. Please read these instructions carefully before assembly and retain them for future reference.



Image: The 4-Tier Wood Shoe Storage Rack, illustrating its overall dimensions of 26.25" H x 10" D x 25" W.

SAFETY INFORMATION

- Always assemble the product according to the instructions provided.
- Use the shelf on the floor only. Do not mount it on walls or other surfaces.
- Ensure the shelf is properly assembled and stable before use to prevent tipping or collapse.
- Do not exceed the maximum recommended load of 30 pounds.
- Keep small parts away from children during assembly to avoid choking hazards.
- Avoid using power tools for assembly, as this may damage the wood. Hand-tighten screws only.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. The package should contain:

- 4-Tier Wood Shoe Storage Rack components (Light Oak)
- All necessary hardware for assembly (screws, dowels)
- Assembly instructions



Image: A detailed view of the slatted wooden shelves, showing the construction and individual slats.

ASSEMBLY INSTRUCTIONS

The Lavish Home 4-Tier Shoe Storage Rack is designed for easy, tool-free assembly. Simply snap the components together in seconds. Follow these steps for quick setup:

1. Unpack all components and verify against the package contents list.
2. Identify the side frames and the four shelf panels.
3. Align the first shelf panel with the designated slots on the side frames. Gently press until it snaps into place.
4. Repeat for the remaining three shelf panels, ensuring each is securely fastened.

5. Once all shelves are in place, ensure the entire structure is stable and all connections are firm.

Note: While assembly is designed to be tool-free, some users have reported that screws may be included. If screws are present, hand-tighten them carefully to avoid splitting the wood. Do not use power tools.



Image: A side view of the shoe rack, highlighting the connection points where shelves attach to the frame.

OPERATING INSTRUCTIONS (USAGE)

This 4-tier shoe storage rack is designed to organize footwear and other small items efficiently. It can hold approximately 12 pairs of shoes, depending on their size and style.

- Place the rack on a flat, stable surface in your desired location, such as an entryway, closet, bedroom, or mudroom.
- Distribute items evenly across the shelves to maintain stability.
- The slatted design of the shelves allows for ventilation, which helps in air circulation for your footwear.
- The compact design makes it suitable for small spaces.



Image: The shoe rack neatly organized with different types of shoes, including sneakers, flats, and boots.



Image: The shoe rack positioned in a room, demonstrating its natural woodgrain finish complementing the decor.

MAINTENANCE

To ensure the longevity and appearance of your shoe rack, follow these simple maintenance guidelines:

- **Cleaning:** Dust the shoe rack regularly with a soft, dry cloth or duster. For more thorough cleaning, wipe with a damp cloth and immediately dry with a clean, soft cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or polishes that may damage the wood finish.
- **Moisture Control:** While the slatted design aids ventilation, avoid prolonged exposure to excessive moisture to prevent warping or damage to the wood.
- **Inspection:** Periodically check all connections to ensure they remain tight and secure. Re-tighten any loose screws by hand if necessary.



Image: A close-up of the slatted shelf design, emphasizing its role in providing ventilation for stored items.

TROUBLESHOOTING

If you encounter any issues with your shoe rack, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack is unstable or wobbly.	Uneven assembly; loose connections; uneven floor surface.	Ensure all components are fully snapped into place or screws are hand-tightened. Place the rack on a level surface.
Wood splitting during assembly.	Over-tightening screws; using power tools.	Always hand-tighten screws gently. Avoid power tools. If splitting occurs, wood glue may be used for minor repairs.
Missing parts.	Packaging error.	Contact Lavish Home customer support for replacement parts.

Problem	Possible Cause	Solution
Shelves appear warped or uneven.	Manufacturing defect; exposure to extreme moisture/temperature.	Ensure the rack is not exposed to high humidity or direct sunlight. If severe, contact customer support.

SPECIFICATIONS

- **Brand:** Lavish Home
- **Model Name:** Lavish Home 4-Tier Shoe Storage Rack
- **Model Number:** 83-10-4
- **Material:** Oak, Wood
- **Color:** Light Woodgrain
- **Number of Tiers:** 4
- **Product Dimensions (L x W x H):**25" x 10" x 26.25"
- **Item Weight:** 3.19 pounds
- **Maximum Recommended Load:** 30 pounds
- **Assembly Required:** Yes (Tool-free snap assembly)
- **Mounting Type:** Floor Mount (Freestanding)
- **Recommended Uses:** Shoe storage, general organization

WARRANTY AND SUPPORT

For any questions, concerns, or to report missing/damaged parts, please contact Lavish Home customer support. Refer to your purchase documentation for specific warranty details and contact information. Lavish Home is committed to providing quality products and customer satisfaction.

Note: This product is intended for residential use only. Any modifications to the product or use for purposes other than its intended design may void the warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question