

Image 1.1: Fully assembled Smoby Frozen Kitchen 24498.

Package Contents

The package includes the main kitchen unit components and 22 accessories. Please verify all parts are present before assembly.



Image 1.2: All 22 accessories included with the kitchen set.

- Main kitchen structure (various plastic panels and supports)
- Sink unit
- Oven door with glitter effect
- Clock
- Multiple shelves
- 22 themed accessories (e.g., plates, cups, cutlery, cooking utensils, play food items)

2. SETUP AND ASSEMBLY

Assembly of the Smoby Frozen Kitchen 24498 is required. Please follow these instructions carefully. Adult supervision is recommended during assembly.

Safety Precautions

- Keep small parts away from young children during assembly to prevent choking hazards.
- Ensure all connections are secure before allowing children to play.
- Do not use power tools for assembly as this may damage the plastic components.

Assembly Steps

1. Unpack all components and verify against the package contents list.
2. Identify the base and side panels. Connect them according to the diagrams provided in the separate assembly sheet (not included in this digital manual).
3. Attach the oven unit and secure the glitter-effect oven door.
4. Install the sink unit into its designated slot.
5. Mount the clock and any decorative elements.
6. Insert the shelves into their respective positions.
7. Place the 22 accessories in their designated storage areas or prepare them for play.

Note: A detailed assembly diagram is typically included in the product packaging. Refer to that document for specific part identification and connection points.

3. OPERATING INSTRUCTIONS

The Smoby Frozen Kitchen 24498 is designed for imaginative play. Children can engage in various role-playing scenarios using the kitchen features and accessories.

Using the Kitchen Features

- **Sink:** The integrated sink allows for pretend washing of dishes.
- **Oven:** The oven with its glitter door can be used for pretend baking. The door opens and closes.
- **Shelves:** Utilize the multiple shelves for storing accessories, play food, or other kitchen items.
- **Clock:** The clock can be used to teach time concepts during play.



Image 3.1: Detail of the oven and lower storage area.

Accessory Use

The 22 accessories are designed to complement the kitchen play. Encourage children to use the plates, cups, cutlery, and cooking utensils for various pretend cooking and serving activities.



Image 3.2: Detail of the sink area with accessories.

4. MAINTENANCE

Proper maintenance will extend the life of your Smoby Frozen Kitchen 24498.

Cleaning

- Wipe surfaces with a damp cloth and mild soap.
- Avoid abrasive cleaners or harsh chemicals, as these may damage the plastic or printed designs.
- Ensure all parts are dry before storage.

Storage

- Store the kitchen in a cool, dry place away from direct sunlight to prevent fading or material degradation.
- Keep accessories organized to prevent loss.

Inspection

- Periodically inspect all parts for signs of wear, damage, or loose connections.
- Discontinue use if any part is broken or damaged until it can be repaired or replaced.

5. TROUBLESHOOTING

If you encounter any issues with your Smoby Frozen Kitchen 24498, refer to the following common problems and solutions.

Common Issues

- **Loose Parts:** If parts become loose during play, gently re-attach them. Ensure they are properly clicked into place if applicable.
- **Accessories Not Fitting:** Verify that accessories are being placed in their correct storage slots or used as intended. Some accessories may have specific placements.
- **Oven Door Not Closing:** Check for any obstructions or if the door mechanism has become dislodged. Re-align if necessary.

If problems persist, please contact customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	24498
Brand	Smoby
Product Dimensions (L x W x H)	48 x 32 x 90 cm
Product Weight	2.19 kg
Material	Plastic
Recommended Age	36 months - 10 years
Number of Accessories	22
Theme	Frozen (Disney)



Image 6.1: Product manufactured in the EU (France).

7. WARRANTY AND SUPPORT

Warranty Information

For details regarding the product warranty, please refer to the documentation included with your purchase or contact your retailer. Warranty terms may vary by region and retailer.

Customer Support

If you require assistance, have questions about assembly, or need to report a missing or damaged part, please contact Smoby customer service. Contact information can typically be found on the product packaging or the official Smoby website.

You can also visit the [Smoby Brand Store on Amazon](#) for more information.

© 2024 Smoby. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question