

[Manuals.plus](#) /

› [Hurom](#) /

› Hurom GD-WWC04 Electric Juicer User Manual

Hurom GD-WWC04

Hurom GD-WWC04 Electric Juicer User Manual

Model: GD-WWC04

INTRODUCTION

Thank you for purchasing the Hurom GD-WWC04 Electric Juicer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the juicer.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Always ensure the juicer is properly assembled before operation.
- Do not put fingers or other objects into the feed chute while the appliance is operating. If food becomes lodged, use the food pusher provided.
- This appliance is for household use only.

PACKAGE CONTENTS

Please check the package contents upon unpacking. If any parts are missing or damaged, contact customer support.

- Motor Base
- Hopper
- Auger (Squeezing Screw)
- Fine Strainer
- Spinning Brush
- Juice Bowl
- Pulp Container
- Juice Container
- Food Pusher
- Cleaning Brush
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your Hurom GD-WWC04 Electric Juicer.



Image: Fully assembled Hurom GD-WWC04 Electric Juicer, showing the motor base, juice bowl, hopper, and containers.

1. **Hopper:** Where ingredients are fed into the juicer.
2. **Auger:** The slow-rotating screw that presses and extracts juice.
3. **Strainer:** Filters pulp from the juice.
4. **Spinning Brush:** Rotates around the strainer to clean it during operation.
5. **Juice Bowl:** Collects the extracted juice.
6. **Motor Base:** Contains the motor and control buttons.
7. **Pulp Outlet:** Where dry pulp is expelled.
8. **Juice Outlet:** Where fresh juice is dispensed.

SETUP

Follow these steps to assemble your juicer before first use:

1. **Place the Motor Base:** Position the motor base on a stable, flat surface. Ensure it is plugged into a grounded electrical outlet.

2. **Assemble the Juice Bowl:** Place the juice bowl onto the motor base, aligning the red dots on the bowl and base. Turn clockwise until it locks into place.
3. **Insert the Spinning Brush and Strainer:** Place the spinning brush inside the juice bowl, then insert the fine strainer into the spinning brush, ensuring it sits securely.
4. **Insert the Auger:** Place the auger into the center of the strainer, pushing down firmly until it clicks into place.
5. **Attach the Hopper:** Place the hopper onto the juice bowl assembly, aligning the red dots. Turn clockwise until it locks securely.
6. **Position Containers:** Place the pulp container under the pulp outlet and the juice container under the juice outlet.

Your Hurom GD-WWC04 Electric Juicer is now ready for operation.

OPERATING INSTRUCTIONS

Before juicing, prepare your ingredients:

- Wash all fruits and vegetables thoroughly.
- Remove pits, hard seeds, and thick peels (e.g., citrus, pineapple).
- Cut ingredients into pieces that fit easily into the feed chute.

To operate the juicer:

1. **Turn On:** Plug in the juicer and press the "ON" button. The auger will begin to rotate slowly.
2. **Feed Ingredients:** Slowly feed prepared ingredients into the hopper. Use the food pusher only if necessary to guide ingredients down. Do not force ingredients.
3. **Collect Juice and Pulp:** Fresh juice will flow into the juice container, and dry pulp will be expelled into the pulp container.
4. **Reverse Function:** If ingredients become jammed, press and hold the "REV" (Reverse) button for a few seconds to clear the blockage. Release the button, then press "ON" to resume juicing.
5. **Finish Juicing:** Once all ingredients are processed, allow the juicer to run for a few more seconds to extract any remaining juice.
6. **Turn Off:** Press the "OFF" button and unplug the appliance from the power outlet.

Note: For best results, alternate between soft and hard ingredients. Do not process frozen fruits or ingredients with excessive fiber that may clog the juicer.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your juicer.

1. **Disassembly:** Unplug the juicer. Disassemble the parts in reverse order of assembly: remove hopper, auger, strainer, spinning brush, and juice bowl.
2. **Rinse Immediately:** Rinse all removable parts under running water immediately after use to prevent pulp from drying and sticking.
3. **Clean with Brush:** Use the provided cleaning brush to remove any stubborn pulp from the strainer and other components. A small amount of dish soap can be used.
4. **Wipe Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water.
5. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing. Store the juicer in a clean, dry

place.

Dishwasher Safety: Some parts may be dishwasher safe (top rack only). Refer to the markings on individual parts or consult the manufacturer's website for specific guidance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; parts not assembled correctly; power outage.	Check power cord; ensure all parts are locked into place; check power supply.
Juicer stops during operation.	Overload protection activated; ingredients jammed.	Unplug, wait 30 minutes for motor to cool; use "REV" function to clear jam, then restart.
Low juice yield or wet pulp.	Ingredients too soft or overfed; strainer clogged.	Feed ingredients slowly; alternate soft/hard ingredients; clean strainer thoroughly.
Loud noise or vibration.	Parts not assembled correctly; hard ingredients.	Disassemble and reassemble parts, ensuring they are locked; cut hard ingredients into smaller pieces.

SPECIFICATIONS

Model: Hurom GD-WWC04

Type: Electric Slow Juicer

Color: White

Power: 150 Watts

Dimensions (L x W x H): Approximately 24.99 x 16.99 x 40.01 cm (9.84 x 6.69 x 15.75 inches)

Weight: Approximately 5 kg (11.02 lbs)

WARRANTY AND SUPPORT

Hurom products are manufactured with high-quality materials and craftsmanship. For warranty information, please refer to the warranty card included with your purchase or visit the official Hurom website. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact Hurom customer service through their official website or the contact information provided in your product packaging.

Official Hurom Website: www.hurom.com

