

Chord MD700

Medeli MD700 Keyboard Padded Carry Case User Manual

Model: MD700 | Brand: Chord

INTRODUCTION

This manual provides essential information for the proper use and care of your Chord Medeli MD700 Keyboard Padded Carry Case. Designed specifically for the Medeli MD700 keyboard, this case offers superior protection and convenient transport. Please read this manual thoroughly to ensure optimal performance and longevity of your product.

PRODUCT FEATURES

The Medeli MD700 Keyboard Padded Carry Case is engineered with several features to enhance protection and usability:

- **High-Quality Cordura Material:** Constructed from durable cordura fabric for robust exterior protection against wear and tear.
- **10mm Heavy Duty Padding:** Features thick 10mm internal padding to cushion your keyboard from impacts and scratches during transport.
- **Heavy Duty Zips:** Equipped with strong, reliable zippers for secure closure and easy access to the main compartment and pockets.
- **Sturdy Carrying Handles:** Integrated handles designed for comfortable and secure hand-carrying.
- **Adjustable Shoulder Straps:** Includes adjustable shoulder straps for versatile and comfortable over-the-shoulder transport.
- **Zippered Side Pocket:** A convenient external zippered pocket provides storage for music sheets, cables, pedals, and other accessories.
- **Tailored Fit:** Specifically designed to fit the Medeli MD700 keyboard, ensuring a snug and secure fit.



Image: The Chord Medeli MD700 Keyboard Padded Carry Case, showcasing its durable black cordura material, sturdy carrying handles, adjustable shoulder strap, and a prominent zipped side pocket for accessories. The Chord logo is visible on the front pocket.

SETUP

The Medeli MD700 Keyboard Padded Carry Case requires minimal setup before use.

1. **Unpack:** Carefully remove the carry case from its packaging.
2. **Inspect:** Check the case for any signs of damage from shipping. Ensure all zippers, handles, and straps are intact and functional.
3. **Adjust Shoulder Strap:** If you plan to use the shoulder strap, adjust its length to a comfortable position for carrying. The strap features a padded section for improved comfort.

OPERATING INSTRUCTIONS

Follow these steps to properly use your keyboard carry case:

1. **Open Main Compartment:** Unzip the heavy-duty zippers along the top and sides of the case to fully open the main compartment.
2. **Insert Keyboard:** Carefully slide your Medeli MD700 keyboard into the main padded compartment. Ensure it sits snugly and is centered within the case for even weight distribution and maximum protection.
3. **Secure Keyboard:** Once the keyboard is inside, zip up the main compartment completely. Ensure the zippers are fully closed to prevent the keyboard from shifting or falling out.
4. **Utilize Accessory Pocket:** Open the zipped side pocket to store accessories such as power adapters, cables, pedals, or sheet music. Close the pocket securely after placing items inside.
5. **Carrying the Case:**
 - **By Hand:** Use the sturdy carrying handles for short distances or when lifting the case.
 - **Over Shoulder:** Use the adjustable shoulder strap for hands-free transport, distributing the weight more evenly.

MAINTENANCE

Proper maintenance will extend the life of your carry case:

- **Cleaning:** For general cleaning, wipe the exterior with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely.
- **Spot Cleaning:** For stubborn stains, a gentle fabric cleaner designed for cordura or similar materials can be used. Test on an inconspicuous area first.
- **Zipper Care:** Periodically check zippers for debris. If they become stiff, a small amount of zipper lubricant or wax can be

applied.

- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use. Avoid storing heavy objects on top of the case.
- **Inspection:** Regularly inspect the handles, straps, and seams for any signs of wear or damage. Address minor issues promptly to prevent further deterioration.

TROUBLESHOOTING

Here are some common issues and their solutions:

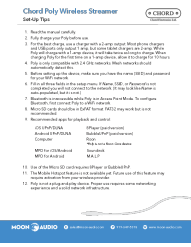
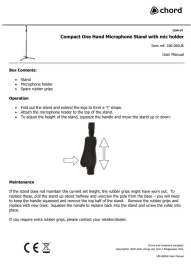
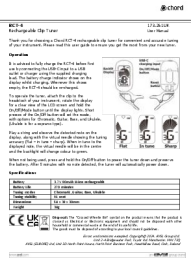
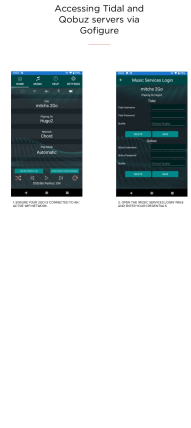
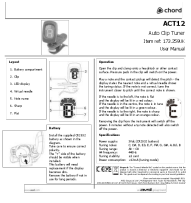
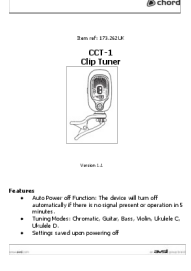
- **Zipper Sticking:** If a zipper is difficult to move, check for fabric caught in the teeth. Apply a small amount of graphite from a pencil or a specialized zipper lubricant to the teeth and work the zipper back and forth.
- **Case Odor:** If the case develops an odor, air it out in a well-ventilated area. You can also place a sachet of baking soda inside for a few days to absorb odors.
- **Strap or Handle Damage:** If a strap or handle shows significant wear or tearing, discontinue use and consider professional repair or replacement to avoid accidental drops of your keyboard.

SPECIFICATIONS

Feature	Detail
Model	MD700
Brand	Chord
Material	High-quality Cordura
Padding Thickness	10mm
External Dimensions (L x W x H)	102 cm x 42 cm x 15 cm (approximately)
Pockets	1 x Zipped side pocket for accessories
Carrying Options	Sturdy carrying handles, Adjustable shoulder strap

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the documentation provided at the time of purchase or contact your retailer. Chord products are designed for durability and performance. For any support inquiries or issues not covered in this manual, please contact the retailer where you purchased the product or visit the official Chord website for further assistance.
Note: Always retain your proof of purchase for warranty claims.

 <p>Chord Poly Wireless Streamer Setup Tips</p> <ol style="list-style-type: none">1. Read the manual carefully.2. Plug it into your PC/Mac.3. Connect your Wi-Fi router to the Chord Poly Wireless Streamer (using the supplied cable) and ensure it is connected to the internet.4. Plug the Chord Poly Wireless Streamer into your PC/Mac.5. Plug the Chord Poly Wireless Streamer into your PC/Mac.6. Plug the Chord Poly Wireless Streamer into your PC/Mac.7. Plug the Chord Poly Wireless Streamer into your PC/Mac.8. Plug the Chord Poly Wireless Streamer into your PC/Mac.9. Plug the Chord Poly Wireless Streamer into your PC/Mac.10. Plug the Chord Poly Wireless Streamer into your PC/Mac.11. Plug the Chord Poly Wireless Streamer into your PC/Mac.12. Plug the Chord Poly Wireless Streamer into your PC/Mac.13. Plug the Chord Poly Wireless Streamer into your PC/Mac.14. Plug the Chord Poly Wireless Streamer into your PC/Mac.15. Plug the Chord Poly Wireless Streamer into your PC/Mac. <p>CHORD AUDIO</p>	<p>Chord Poly Wireless Streamer: Setup and Charging Tips</p> <p>A concise guide to setting up and charging the Chord Poly Wireless Streamer, covering Wi-Fi connection, app recommendations, charging times, and status indicators.</p>
 <p>chord Compact One Hand Microphone Stand with mic holder Item ref: 180.060UK</p> <p>Key Features:</p> <ul style="list-style-type: none">• Compact design• Sturdy construction• Easy to use <p>Operation:</p> <ol style="list-style-type: none">1. Hold the stand and adjust the height to suit your needs.2. Place the microphone on the stand.3. Adjust the stand to the desired position. <p>Warnings:</p> <ul style="list-style-type: none">• Do not use the stand on a soft surface.• Do not use the stand on a hard surface. <p>CE</p>	<p>Chord COM-ST Compact One Hand Microphone Stand User Manual</p> <p>User manual for the Chord COM-ST Compact One Hand Microphone Stand with mic holder (Item ref: 180.060UK). Provides instructions for setup, operation, and maintenance.</p>
 <p>chord RCT-4 Rechargeable Clip Tuner Item ref: 180.060UK</p> <p>Key Features:</p> <ul style="list-style-type: none">• Rechargeable• Chromatic• Guitar• Bass• Ukulele <p>Operation:</p> <ol style="list-style-type: none">1. Turn on the tuner.2. Select the instrument mode.3. Clip the tuner to the instrument.4. Tune the instrument. <p>Warnings:</p> <ul style="list-style-type: none">• Do not use the tuner on a soft surface.• Do not use the tuner on a hard surface. <p>CE</p>	<p>Chord RCT-4 Rechargeable Clip Tuner User Manual</p> <p>User manual for the Chord RCT-4 rechargeable clip tuner, detailing its operation, specifications, and disposal guidelines. Features chromatic, guitar, bass, and ukulele tuning modes.</p>
 <p>Accessing Tidal and Qobuz servers via Gofigure</p> <p>Key Features:</p> <ul style="list-style-type: none">• Accessing Tidal and Qobuz servers• Gofigure app <p>Operation:</p> <ol style="list-style-type: none">1. Open the Gofigure app.2. Select the server mode.3. Connect to the server.	<p>Accessing Tidal and Qobuz Servers with Chord 2Go</p> <p>A step-by-step guide on how to connect your Chord 2Go streamer to Tidal and Qobuz music services using the Gofigure app.</p>
 <p>chord ACT12 Auto Clip Tuner Item ref: 180.060UK</p> <p>Key Features:</p> <ul style="list-style-type: none">• Auto Clip• Chromatic• Guitar• Bass• Ukulele <p>Operation:</p> <ol style="list-style-type: none">1. Turn on the tuner.2. Select the instrument mode.3. Clip the tuner to the instrument.4. Tune the instrument. <p>Warnings:</p> <ul style="list-style-type: none">• Do not use the tuner on a soft surface.• Do not use the tuner on a hard surface. <p>CE</p>	<p>Chord ACT12 Auto Clip Tuner User Manual - Accurate Tuning Guide</p> <p>Official user manual for the Chord ACT12 Auto Clip Tuner. Learn how to use, install batteries, and understand specifications for this portable musical instrument tuner.</p>
 <p>chord CCT-1 Clip Tuner Item ref: 180.060UK</p> <p>Key Features:</p> <ul style="list-style-type: none">• Auto Power Off Function• Chromatic• Guitar• Bass• Ukulele <p>Operation:</p> <ol style="list-style-type: none">1. Turn on the tuner.2. Select the instrument mode.3. Clip the tuner to the instrument.4. Tune the instrument. <p>Warnings:</p> <ul style="list-style-type: none">• Do not use the tuner on a soft surface.• Do not use the tuner on a hard surface. <p>CE</p>	<p>Chord CCT-1 Clip Tuner User Manual - Features, Operation, Specifications</p> <p>Detailed user manual for the Chord CCT-1 Clip Tuner, covering its features, operation, specifications, and disposal. Includes tuning modes for Chromatic, Guitar, Bass, Violin, and Ukulele.</p>

