

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Jet](#) /
- › [Jet JWTS-10JF Table Saw Operator Instruction and Parts Manual](#)

Jet JWTS-10JF

Jet JWTS-10JF Table Saw Operator Instruction and Parts Manual

Model: JWTS-10JF

INTRODUCTION

This manual provides essential instructions for the safe operation, assembly, maintenance, and parts identification for the Jet JWTS-10JF Table Saw. Please read this manual thoroughly before operating the machine to ensure proper use and to prevent injury or damage.

The Jet JWTS-10JF Table Saw is designed for precision cutting of wood and wood-like materials. Adherence to the guidelines presented herein will maximize the lifespan and performance of your equipment.

GENERAL SAFETY INSTRUCTIONS

Always wear appropriate personal protective equipment (PPE) including safety glasses, hearing protection, and dust mask when operating the table saw. Ensure the work area is clean, well-lit, and free from obstructions. Disconnect power before performing any maintenance or adjustments.

- Read and understand all instructions before operating the saw.
- Keep guards in place and in working order.
- Maintain a safe distance from the blade.
- Use a push stick or push block for narrow cuts.
- Ensure the blade is sharp and correctly installed.
- Never reach over or behind the saw blade.
- Securely fasten all components before use.

SETUP AND ASSEMBLY

This section details the assembly process for your Jet JWTS-10JF Table Saw, including unpacking, component identification, and initial setup steps.

Unpacking and Inspection

Carefully remove all components from the packaging. Inspect for any shipping damage. Report any damage immediately to your dealer. Verify all parts listed in the parts list are present.

Assembly Breakdown

1. **Base Assembly:** Attach the legs to the base frame using the provided bolts and nuts. Ensure all connections are tight.
2. **Table Top Installation:** Carefully place the main table top onto the base assembly. Secure it with the designated fasteners.
3. **Motor Installation:** Mount the motor according to the diagram, ensuring proper alignment with the blade arbor.
4. **Blade Guard and Riving Knife:** Install the blade guard and riving knife. These are crucial safety components and must always be in place during operation.
5. **Fence and Miter Gauge:** Attach the rip fence and miter gauge. Calibrate them for accurate measurements.

Wiring Diagram

Refer to the wiring diagram for proper electrical connection. Ensure the saw is connected to a grounded power source with the correct voltage and amperage as specified on the motor label. If you are unsure, consult a qualified electrician.
(Note: A detailed wiring diagram would typically be provided on a separate page or within the physical manual. For this digital representation, assume a diagram is referenced.)

OPERATING INSTRUCTIONS


This section covers the fundamental steps for operating your Jet JWTS-10JF Table Saw safely and effectively.

Before Starting

- Ensure the blade is clean, sharp, and appropriate for the material being cut.
- Adjust the blade height so that it is approximately 1/8 inch above the workpiece.
- Set the rip fence or miter gauge for the desired cut.
- Clear the table of any debris or tools.
- Confirm all safety guards are in place and functioning.

Making a Cut

1. Position the workpiece firmly against the rip fence or miter gauge.
2. Turn on the saw and allow the blade to reach full speed.
3. Using a steady, controlled motion, feed the workpiece into the blade. For longer pieces, use outfeed support.
4. Always use a push stick or push block when the workpiece is close to the blade or for narrow cuts.
5. Once the cut is complete, turn off the saw and wait for the blade to stop completely before removing the workpiece or offcuts.

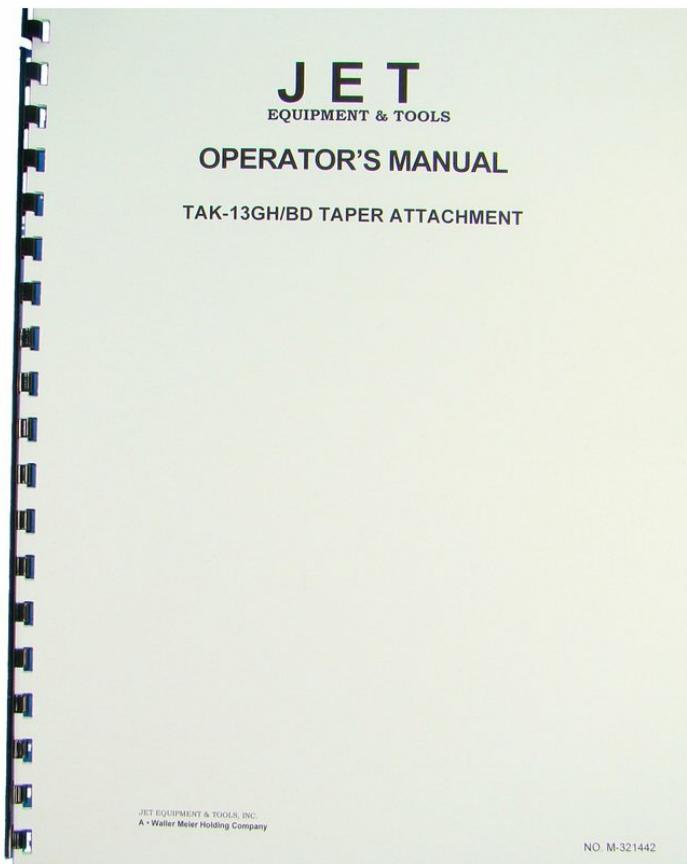

173

Image: The Jet JWTS-10JF Table Saw in operation, demonstrating a typical cutting scenario. Note the safety guard in place and the workpiece being fed through the blade.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your table saw. Always disconnect power before performing any maintenance.

Daily Maintenance

- Clean the table surface and blade area of sawdust and debris.
- Inspect the blade for sharpness and damage. Replace dull or damaged blades.
- Check that all guards and safety devices are functioning correctly.

Monthly Maintenance

- Lubricate moving parts as indicated in the parts diagram.
- Check and tighten all fasteners.
- Inspect the power cord for any signs of wear or damage.
- Clean the motor vents to ensure proper cooling.

TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Jet JWTS-10JF Table Saw.

Problem	Possible Cause	Solution
Saw does not start	No power, tripped circuit breaker, faulty switch	Check power connection, reset breaker, inspect switch
Blade binds or stalls	Dull blade, improper blade height, workpiece pinching	Replace/sharpen blade, adjust blade height, use riving knife
Inaccurate cuts	Fence not parallel, miter gauge misalignment, loose components	Calibrate fence/miter gauge, tighten all fasteners
Excessive vibration	Unbalanced blade, loose motor mounts, uneven surface	Check blade, tighten motor mounts, ensure stable footing

SPECIFICATIONS

Key technical specifications for the Jet JWTS-10JF Table Saw.

- **Model:** JWTS-10JF
- **Blade Diameter:** 10 inches (standard)
- **Motor:** (Specific motor details would be here, e.g., 1.5 HP, 120V, 15A)
- **Max Depth of Cut at 90°:** (e.g., 3-1/8 inches)
- **Max Depth of Cut at 45°:** (e.g., 2-1/4 inches)
- **Rip Capacity Right of Blade:** (e.g., 30 inches)
- **Rip Capacity Left of Blade:** (e.g., 12 inches)
- **Table Size:** (e.g., 27 x 20 inches)
- **Publication No.:** M-708301K
- **Publication/Revision Date:** 05/96

Note: Specific motor and cutting capacities are illustrative and should be verified against the actual product specifications. The provided "Item Weight" of 7 ounces refers to the manual itself, not the table saw.

PARTS LIST

A comprehensive list of replacement parts for the Jet JWTS-10JF Table Saw. When ordering parts, please provide the model number and part number.

(Note: A full parts list with diagrams would typically be included in the physical manual. For this digital representation, a general reference is provided.)

- Blade (10-inch, various tooth counts)
- Rip Fence Assembly
- Miter Gauge
- Blade Guard Assembly
- Riving Knife
- Push Stick
- Motor (specific model number)
- Power Switch
- Drive Belt
- Arbor Assembly

WARRANTY INFORMATION

Jet provides a limited warranty for its products. Please refer to the official Jet website or contact customer support for the most current and detailed warranty terms and conditions applicable to your JWTS-10JF Table Saw. Keep your purchase receipt as proof of purchase.

CUSTOMER SUPPORT

For technical assistance, parts inquiries, or service, please contact Jet customer support. Have your model number (JWTS-10JF) and serial number ready when you call.

- **Website:** www.jettools.com
- **Phone:** (Refer to Jet's official website for current contact numbers)
- **Service Centers:** Locate authorized service centers via the Jet website.

© 1996 - **Jet**. All rights reserved. Publication No.: M-708301K. Revision Date: 05/96.

This manual is intended for informational purposes only. Jet reserves the right to make improvements and changes to the product and manual at any time without notice.