

[Manuals.plus](#) /

› [GE](#) /

› GE WB56T10187 Oven Door Replacement Manual

GE WB56T10187

GE WB56T10187 RanGlass Oven Door Instruction Manual

Genuine OEM Replacement Part

1. PRODUCT OVERVIEW

The GE WB56T10187 RanGlass Oven Door is a genuine OEM replacement part designed for specific GE oven models. This part ensures proper function and appearance of your oven door, maintaining the oven's insulation and cooking efficiency.

Compatibility: This replacement part is compatible with the following GE oven models: EER2000M01WW, EER2000M02WW, EER3000L01TW, EER3000L02TW, EER4000NWW. It also replaces part numbers: 1166039, AH1016178, EA1016178, PS1016178.



Image showing the GE WB56T10187 RanGlass Oven Door, a clear glass panel designed for oven door replacement.

2. SAFETY INFORMATION

- Always disconnect power to the oven by unplugging it or turning off the circuit breaker before attempting any repairs or replacements.
- Wear appropriate safety gear, such as work gloves and eye protection, when handling glass components to prevent cuts or injuries.
- Oven doors can be heavy and awkward to handle; seek assistance from another person if needed during removal or installation to prevent injury or damage.
- Handle the glass panel carefully to prevent breakage. Even small impacts can cause glass to shatter.
- Ensure the work area is clean, dry, and well-lit.

3. SETUP AND INSTALLATION

This section provides general guidance for replacing an oven door glass. Specific steps may vary slightly depending on your exact oven model. Always refer to your oven's original service manual for detailed instructions if available.

Tools Required:

- Screwdriver set (Phillips and Flathead)
- Work gloves
- Safety glasses
- Soft cloth or blanket

Installation Steps:

1. **Preparation:** Ensure the oven is completely cool. Disconnect power to the oven as described in the safety section.
2. **Remove Oven Door:** Open the oven door fully. Locate the hinge locks (usually small clips or levers) on each hinge. Flip or pull these locks into the locked position. Carefully lift the oven door straight up and off the hinges. Place the door on a clean, soft, and flat surface (like a blanket on a table) to prevent scratching.
3. **Disassemble Door:** Depending on your oven model, you may need to remove screws along the top, bottom, or sides of the inner door panel to access the glass. Carefully separate the inner and outer door panels.
4. **Remove Old Glass:** Locate the clips, brackets, or screws holding the existing glass panel in place. Carefully remove these fasteners and lift out the broken or old glass. Dispose of broken glass safely.
5. **Clean Door Frame:** Clean any debris, grease, or old sealant from the door frame where the new glass will sit.
6. **Install New Glass:** Carefully place the new GE WB56T10187 RanGlass Oven Door into the designated slot within the oven door frame. Ensure it is seated correctly and evenly.
7. **Secure Glass:** Reinstall any clips, brackets, or screws that hold the glass panel in place. Do not overtighten screws, as this can stress the glass.
8. **Reassemble Door:** Carefully reassemble the inner and outer door panels, ensuring all components align correctly. Reinstall all screws removed in step 3.
9. **Reattach Door to Oven:** Align the door hinges with the hinge slots on the oven frame. Slide the door down onto the hinges until it is fully seated. Unlock the hinge locks by flipping or pushing them back into their original position.
10. **Test Operation:** Gently open and close the oven door several times to ensure it operates smoothly and closes securely. Reconnect power to the oven.

4. OPERATING

Once installed correctly, the GE WB56T10187 RanGlass Oven Door will function identically to the original part. It will maintain the oven's insulation properties, allowing for normal oven operation and temperature retention. No special operating procedures are required for the replacement glass itself.

5. MAINTENANCE

Proper maintenance will help prolong the life and appearance of your oven door glass.

- **Cleaning:** Clean the oven door glass with a non-abrasive glass cleaner and a soft cloth. Avoid harsh chemicals, abrasive pads, or metal scrapers that could scratch or damage the glass surface.
- **Inspection:** Regularly inspect the oven door for any signs of damage, such as cracks or chips in the glass, or loose components. Address any issues promptly.
- **Avoid Impact:** Prevent hard impacts to the oven door glass, as this can cause it to shatter.

6. TROUBLESHOOTING

If you encounter issues after installing the replacement oven door glass, consider the following:

- **Door not closing properly:** Check for proper alignment of the door hinges and ensure all screws are securely tightened. Verify that no obstructions are preventing the door from closing fully. Ensure the hinge locks are disengaged after reattaching the door.
- **Glass appears loose or rattles:** Ensure all retaining clips, brackets, or screws holding the glass panel are correctly installed and tightened. Avoid overtightening.
- **New glass breaks shortly after installation:** Inspect for uneven pressure points during installation or overtightening of screws. Ensure the oven door frame is not warped or damaged, which could put undue stress on the glass.
- **Oven not heating efficiently:** While unlikely to be directly caused by the glass itself if properly installed, ensure the door seals (gaskets) are intact and creating a tight seal when the door is closed.

7. SPECIFICATIONS

Specification	Detail
Manufacturer	GE
Part Number	WB56T10187
Item Weight	10 pounds
Product Dimensions	34.2 x 26.3 x 3.6 inches
Item Model Number	WB56T10187
Item Package Quantity	1

8. WARRANTY AND SUPPORT

Warranty: This GE WB56T10187 RanGlass Oven Door comes with a 1-year limited manufacturer's warranty. Please retain your proof of purchase for warranty claims.

Customer Support: For technical assistance, warranty claims, or further inquiries, please contact GE customer support directly or the retailer from whom you purchased this part. Refer to your original oven manual for specific model-related support and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00NI0TOX8>

More documents and user manuals: <https://manuals.plus/>