

[Manuals.plus](#) /

> [AEG](#) /

> AEG Dishwasher Cutlery Basket User Manual

AEG 1525593008

AEG Dishwasher Cutlery Basket User Manual

Model: 1525593008

INTRODUCTION

This manual provides instructions for the AEG 1525593008 replacement plastic cutlery basket. This basket is designed to securely hold cutlery during the dishwasher cycle, ensuring thorough cleaning. It is a genuine AEG spare part.



Image: The AEG replacement cutlery basket, shown closed with its handle, ready for placement in a dishwasher.

SETUP

The AEG 1525593008 cutlery basket is designed for easy integration into compatible AEG dishwashers. Follow these steps for proper setup:

1. **Unpacking:** Carefully remove the cutlery basket from its packaging. Inspect for any damage during transit.

2. **Placement:** Locate the designated area for the cutlery basket in your dishwasher's lower rack. This is typically a flat section or a specific slot designed to hold the basket securely.
3. **Orientation:** Ensure the basket is placed with the handle facing upwards or in a position that allows for easy access and removal.



Image: The cutlery basket viewed from above, showing the internal compartments designed to separate different types of cutlery.

OPERATING

Proper loading of the cutlery basket is essential for effective cleaning and to prevent damage to your cutlery or dishwasher.

- **Loading Cutlery:** Place cutlery items into the individual compartments of the basket. For best results, mix different types of cutlery (e.g., forks, spoons, knives) to prevent nesting.

- **Knives and Sharp Objects:** For safety, place knives and other sharp objects with their handles pointing upwards. This reduces the risk of injury when unloading.
- **Spoons and Forks:** Place spoons and forks with their handles pointing downwards to ensure the eating surfaces are thoroughly cleaned.
- **Avoid Overloading:** Do not overcrowd the basket. Overloading can hinder water circulation and lead to poorly cleaned cutlery.
- **Lid Usage:** The basket includes a perforated lid. This lid can be used to secure smaller items or to provide additional separation for cutlery, preventing them from moving excessively during the wash cycle.



Image: The cutlery basket with its perforated lid detached, illustrating the internal structure and how the lid can be removed for loading or cleaning.

MAINTENANCE

To ensure the longevity and hygiene of your cutlery basket, regular maintenance is recommended.

- **Regular Cleaning:** Periodically rinse the basket under running water to remove any food debris that may accumulate in the compartments or perforations.
- **Deep Cleaning:** If stubborn stains or residue appear, the basket can be washed by hand with warm soapy water and a soft brush. Ensure all soap residue is thoroughly rinsed off.
- **Inspection:** Regularly inspect the basket for any signs of wear, cracks, or damage. A damaged basket may not hold cutlery securely or could potentially scratch the dishwasher interior.



Image: A detailed view of the perforated lid, highlighting the design that allows water circulation and secures cutlery.

TROUBLESHOOTING

If you encounter issues related to the cutlery basket, consider the following:

- **Cutlery Not Clean:**
 - Ensure the basket is not overloaded.
 - Check that cutlery items are not nesting together, blocking water spray.
 - Verify that the dishwasher spray arms are not obstructed by the basket or other items.

• **Basket Not Fitting Securely:**

- Confirm that the basket is placed in the correct position within the lower rack.
- Ensure your dishwasher model is listed as compatible with this replacement part (refer to the Specifications section).

• **Damage to Basket:**

- If the basket is cracked or broken, it may need to be replaced to prevent further issues or potential damage to the dishwasher.

SPECIFICATIONS

Brand	AEG
Model Number	1525593008
Product Type	Replacement Cutlery Basket for Dishwasher
Material	Plastic
Color	Light Grey
Package Dimensions	25.7 x 25 x 14.3 cm
Item Weight	350 grams
Compatible Models	• f64085il-m, f86080il-a, f86080il-m, f44080vil, f64080vil, f64085vil, f65080vil, f65060ilw, f86080vil, f88080vil, f88070vil • f65060ilm, f65060ilw, f65060ilb, f44060vil, f65060vil, f45000 W0, f45000 m0, f45010 W0, f45002 m0, f45013 W0, f45002 W0, f45502 W0, f55000 W0, f55000 m0, f55010 W0, f55010 m0, f55033 W0, f55033 m0, f55022 W0, f55022 m0, f5502pm0, f5502pw0, f55011 W0, f55011 m0, f55021 m0, f55519 W0, f55529 W0, f55502 W0, f55500 W0, f55500 m0, f55512 W0, f55512 m0, f55522 W0, f55522 m0, f55513 W0, f55513 m0, f56312 W0, f56312 m0, f54000im0, f55060im0, f55062im0, f55040im0, f50012iw0, f50012id0, f50012ido, f50012im0, f54030im0, f55032im0, f55030im0, f50012um0, gs60ais222, f50502iw0, f50502id0, f50502im0, f50502um0, f55502im0, f56052um0, f56052im0, f56052iw0, f56052id0, f56052uw0, f56052ud0, f56059um0, f56059im0, f55500im0, f55510im0, f56512id0, f56512im0, f56512iw0, f56512ud0, f56512um0, f56512uw0, f56529im0, f56529iw0, f56529id0, f56529um0, f56529uw0, f56529ud0, f56509im0, f56509um0, f56528im0, f55310im0, f34030im0, f34500im0, f34300im0, f54000vi0, f55051vi0, f54052vi0, f55040vi0, f54030vi0, f54032vi0, f55042vi0, f50012vi0, f5403pvi0, f55062vi0, f55060vi0, f55030vi0, f55063vi0, f54500vi0, f55500vi0, f55510vi0, f50502vi0, f55502vi0, f55522vi0, f55505vi0, f55512vi0, f55524vi0, f55533vi0, f55310vi0, f34030vi0, f34032vi0, f34500vi0, f34502vi0, f34300vi0, f45010 m0, f45015 W0, f45015 m0, f45500 W0, f55034 W0, f55034 m0, f55502 m0, f55520 W0, f55525 W0, f55520 m0, f55525 m0, f56302 m0, f56302 W0, f44070ilm, f44070ila, f64070ilm, f64070ila, f86070ilm, f86070ila, f44070vil, f64075vil, f64070vil, f86070vil, f88070vil, favg330, favg340, f45000 W0, f45000 m0, f45010 W0, f45001 W0, f45001 m0, f55040 W0, foptimaaa, f50742, fperfectaa, faaaauto, f55000 W0, f55000 m0, f55010 W0, f55010 m0, f54000im0, f50002im0, f50002iw0, f50002id0, f55060im0, f55062im0, f55042im0, f55040im0, gs60ais221, f34030im0, f35020im, f54000vi0, f55051vi0, f54052vi0, f50002vi0, f55040vi0, f55062vi0, f55060vi0, f34030vi0, f34032vi0, f45010 m0, f45011 W0, f45011 m0, f45015 W0, f45015 m0, f44080il-a, f44080il-m, f64080il-a, f64080il-m, f64080ilm, f64080ilw, f64080ilb

WARRANTY INFORMATION

Specific warranty details for this replacement part are not provided in the product information. Please refer to your original dishwasher's warranty documentation or contact AEG customer support for information regarding replacement parts.

SUPPORT

For further assistance, technical support, or to inquire about other genuine AEG spare parts, please visit the official AEG website or contact their customer service department. Contact information can typically be found on the AEG brand website or in your dishwasher's main instruction manual.

© 2023 AEG. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

