

## Bose RC-PWS II

# Bose RC-PWS II Universal Remote Control User Manual

Model: RC-PWS II

## INTRODUCTION

The Bose RC-PWS II Universal Remote Control is designed to operate your Bose CineMate home theater speaker systems and Bose Solo TV sound systems. It can also be programmed to control various other connected devices, reducing the need for multiple remotes. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your remote control.

## PACKAGE CONTENTS

- Bose RC-PWS II Universal Remote Control
- Two AA batteries
- User Manual (this document)

## SETUP

### 1. Battery Installation

The remote control requires two AA batteries (included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards and lift it off.
3. Insert the two AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

### 2. Programming the Remote for Other Devices

The Bose RC-PWS II remote can be programmed to control various audio/video components. Refer to the separate code list pamphlet (if provided) or the Bose support website for specific programming instructions and device codes.

### General Programming Steps (may vary by device):

1. Turn on the device you wish to program (e.g., TV, DVD player).
2. Press and hold the corresponding device button on the remote (e.g., **TV**, **BD-DVD**, **CBL-SAT**) until the button lights up.
3. Enter the 4-digit code for your device's brand.
4. Test the remote's functions (e.g., Power, Volume, Channel). If the device responds, the programming is successful.
5. If the device does not respond, try the next code listed for your brand or use the auto-search method (refer to Bose support for details).

## OPERATING THE REMOTE CONTROL

The Bose RC-PWS II remote features a contoured design for comfortable handling and clearly labeled buttons for intuitive control.



Image: The Bose RC-PWS II Universal Remote Control. This image displays the remote from an angled perspective, highlighting its ergonomic shape and the layout of its numerous buttons. Key sections visible include the device selection buttons at the top (CBL-SAT, BD-DVD, TV, AUX 1, GAME, AUX 2), the central navigation cluster with MENU, INFO, OK, GUIDE, and EXIT, and the numerical keypad below. Also visible are volume, channel, DVR, and media playback controls. The Bose logo is prominently displayed at the bottom.

## Button Functions Overview

- **Device Buttons (CBL-SAT, BD-DVD, TV, AUX 1, GAME, AUX 2):** Select the device you wish to control.
- **Power Button (with circle icon):** Turns the selected device on or off.
- **TV Input:** Cycles through input sources on your television.
- **MENU:** Accesses the menu of the selected device.
- **INFO:** Displays information about the current program or content.
- **OK:** Confirms selections within menus.
- **Arrow Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **GUIDE:** Opens the program guide (for TV/Cable/Satellite).
- **EXIT:** Exits menus or returns to the previous screen.
- **DVR:** Accesses DVR functions.
- **CH (+/-):** Changes channels.
- **VOL (+/-):** Adjusts volume.
- **Mute (speaker icon with slash):** Mutes or unmutes audio.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Control media playback.
- **Numerical Keypad (0-9):** Direct channel entry or numerical input.
- **ENTER:** Confirms numerical entries.
- **CC (Closed Captioning):** Toggles closed captioning on/off.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by device and context, often used for interactive features or specific menu options.

## MAINTENANCE

---

### Battery Replacement

When the remote's performance degrades or buttons become unresponsive, it may be time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace both batteries with new AA alkaline batteries.

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's finish or internal components.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are correctly installed and not depleted. Replace if necessary.
  - Ensure there are no obstructions between the remote and the device's sensor.
  - Verify that the correct device button (e.g., TV, BD-DVD) is selected.
- **Device not controlling after programming:**
  - Re-enter the programming code for the device.
  - Try alternative codes listed for your device brand.
  - Ensure the device is powered on and within range.
- **Some buttons not working for a programmed device:**
  - Not all functions of an original remote may be supported by a universal remote.

- Try different codes for your device, as some codes may offer better compatibility.

## SPECIFICATIONS

<b>Brand</b>	Bose
<b>Model Name</b>	RCPWS II
<b>Model Number</b>	714924-0010
<b>Connectivity Technology</b>	Infrared
<b>Compatible Devices</b>	Bose CineMate home theater speaker systems, Bose Solo TV sound systems, various other home theater components
<b>Maximum Number of Supported Devices</b>	Multiple (universal functionality)
<b>Battery Type</b>	2 AA batteries
<b>Maximum Range</b>	30 Feet
<b>Color</b>	Black
<b>Item Weight</b>	1.76 ounces

## WARRANTY AND SUPPORT

For warranty information, technical support, or to access the latest device codes for programming, please visit the official Bose website or contact Bose customer service directly.

**Visit Bose Official Website**