

Manuals.plus /

› **Bosch Home Appliances** /

› Bosch Styline TWK8611P Electric Kettle Instruction Manual

Bosch Home Appliances TWK8611P

Bosch Styline TWK8611P Electric Kettle Instruction Manual

Model: TWK8611P | Brand: Bosch Home Appliances

1. INTRODUCTION

Thank you for choosing the Bosch Styline TWK8611P Electric Kettle. This appliance is designed for efficient and safe water heating. Please read this instruction manual carefully before first use and keep it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your kettle.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent accidents and damage to the appliance:

- Read all instructions before using the kettle.
- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the rating label matches your mains supply voltage.
- Keep the appliance out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Do not operate the kettle if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Place the kettle on a stable, flat, heat-resistant surface, away from hot surfaces or open flames.
- Do not fill the kettle above the maximum fill line to avoid boiling water overflowing.
- Always ensure the lid is securely closed before operating the kettle.
- Exercise caution when pouring hot water to prevent scalding.
- Unplug the kettle from the power outlet when not in use and before cleaning.

- This appliance is for household use only. Do not use outdoors.
- The kettle features automatic shut-off upon boiling, when the lid is opened, when lifted from the base, and overheat protection.

3. PRODUCT OVERVIEW



Figure 1: Bosch Styline TWK8611P Electric Kettle. A white and stainless steel electric kettle with a black handle and lid, sitting on its white and black power base. The base features temperature selection buttons (70°, 80°, 90°, 100°) and a 'keep warm' function.

The Bosch Styline TWK8611P electric kettle is designed for ease of use and safety. Key components include:

- **Kettle Body:** Double-walled housing (white exterior, stainless steel interior).
- **Lid:** Push-button opening mechanism.
- **Spout:** Designed for controlled pouring.
- **Water Level Indicator:** Visible window for precise filling.
- **Handle:** Ergonomically designed for comfortable grip.
- **Power Base:** 360° rotational base with cord storage.
- **Control Panel:** Integrated into the power base, featuring power button, temperature selection (70°C, 80°C, 90°C, 100°C), and 'Keep Warm' function.
- **Concealed Heating Element:** For easy cleaning and extended lifespan.
- **Removable Anti-Limescale Filter:** Located in the spout.

4. SETUP

Before using your new kettle for the first time, please follow these steps:

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Initial Cleaning:** Fill the kettle with cold water up to the MAX mark. Boil the water (select 100°C). Discard the boiled water. Repeat this process twice to remove any manufacturing residues.
3. **Positioning:** Place the power base on a dry, stable, and heat-resistant surface. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Connect Power:** Plug the power cord into a suitable grounded wall outlet.

5. OPERATING INSTRUCTIONS

5.1 Filling the Kettle

1. Press the lid release button to open the lid.
2. Fill the kettle with the desired amount of fresh cold water. Observe the water level indicator to ensure the water is between the MIN and MAX marks (1.5 Liters capacity).
3. Close the lid firmly until it clicks into place.

5.2 Boiling Water

1. Place the filled kettle securely onto the power base.
2. Press the power button (I) on the control panel. The default temperature setting is usually 100°C.
3. To select a different temperature, press the desired temperature button (70°C, 80°C, 90°C, 100°C). The selected temperature indicator will illuminate.
4. The kettle will begin heating. Once the selected temperature is reached, the kettle will automatically switch off, and an audible signal may sound.

5.3 Keep Warm Function

The 'Keep Warm' function maintains the water at the selected temperature for up to 30 minutes.

1. After selecting your desired temperature (e.g., 80°C), press the 'keep warm' button.
2. The 'keep warm' indicator will illuminate.

3. The kettle will heat the water to the selected temperature and then maintain it for 30 minutes.
4. To deactivate the 'keep warm' function, press the power button or lift the kettle from its base.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and hygiene of your kettle.

6.1 Exterior Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle and the power base with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.

6.2 Descaling

Limescale buildup can affect performance and taste. Descale your kettle regularly, especially in hard water areas.

- Use a commercially available descaling agent suitable for kettles, following the manufacturer's instructions.
- Alternatively, you can use a solution of white vinegar and water (1:2 ratio). Fill the kettle with the solution, boil it, and let it stand for 30-60 minutes.
- After descaling, empty the kettle and rinse it thoroughly several times with fresh water to remove any residue.

6.3 Cleaning the Anti-Limescale Filter

- The removable filter in the spout can be cleaned under running water with a soft brush.
- Ensure the filter is properly re-inserted before using the kettle.

7. TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following table before contacting customer service:

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power outage; kettle not properly seated on base; dry-boil protection activated.	Check power connection; ensure kettle is correctly placed on base; allow kettle to cool if dry-boil protection was activated.
Water does not reach boiling point (100°C).	Lid not closed properly; incorrect temperature selected; limescale buildup.	Ensure lid is closed; select 100°C; descale the kettle.
Kettle switches off too soon.	Limescale buildup; lid opened during operation.	Descal the kettle; ensure lid remains closed during heating.
Unpleasant taste in water.	New appliance residue; limescale buildup.	Perform initial cleaning steps again; descale the kettle.

8. SPECIFICATIONS

Feature	Specification
Brand	Bosch Home Appliances
Model Number	TWK8611P
Color	White/Anthracite
Capacity	1.5 Liters
Power	2400 Watts
Voltage	240 Volts
Material	Metal
Product Dimensions (L x W x H)	21 x 17.5 x 26.3 cm
Item Weight	1.59 Kilograms
Noise Level	62 dB
Special Features	Keep warm function, Adjustable thermostat, Overheat safety shut-off, Water level indicator, Dry-boil protection, Filter, Automatic power cut-off, Cordless, 360° base
Country of Origin	China

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Bosch Home Appliances website. Keep your proof of purchase for any warranty claims.

If you require further assistance or have questions not covered in this manual, please contact Bosch customer service.