

Banshee A24PX

Banshee 532 Battery Replacement Instruction Manual

Model: A24PX | Brand: Banshee

1. INTRODUCTION

Welcome to the instruction manual for your Banshee 532 Battery Replacement. This 3-volt alkaline battery is designed to provide reliable power for a range of compatible devices, particularly vintage Polaroid camera models. Please read this manual carefully to ensure proper installation, operation, and maintenance, which will help maximize the battery's performance and lifespan.

2. PRODUCT OVERVIEW

The Banshee 532 Battery is a high-quality 3-volt alkaline power source, engineered for consistent performance. It serves as a direct replacement for several battery types and is compatible with numerous classic camera models.



Image: The Banshee 532 Battery, a 3-volt alkaline replacement battery.

Key Features:

- 3 Volt Alkaline Battery
- Reliable power source for compatible devices
- Compact and durable design

Compatibility:

This battery is compatible with and replaces the following part numbers:

- V24PX
- RPX24
- A24PX
- EPX24
- 2LR50
- 1308AP

It can be used with various Polaroid camera models, including but not limited to:

- 103, 104, 125, 135
- 210, 215
- 315, 320, 330
- 420, 430, 440
- M60, Countdown 70

These camera models typically require only one 532 (3 volt) alkaline battery for operation.

3. INSTALLATION (SETUP)

1. **Identify Battery Compartment:** Locate the battery compartment on your device. Refer to your device's original manual if unsure.
2. **Remove Old Battery (if applicable):** Carefully remove any existing battery, noting its orientation.
3. **Insert New Battery:** Insert the Banshee 532 Battery into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the device's markings. The battery's pronged end is typically the positive terminal.
4. **Secure Compartment:** Close the battery compartment securely.

Important Installation Tip:

When inserting the battery, ensure the pronged positive end makes a firm and stable connection with the device's terminal. Avoid excessive force or bending of the prongs, as this can lead to a poor connection and prevent the device from powering on. If you experience connectivity issues, gently inspect the prongs for proper shape and contact.

4. OPERATION

Once correctly installed, the Banshee 532 Battery will provide the necessary 3 volts of power to operate your compatible device. The battery functions automatically upon proper insertion and compartment closure, allowing your device to power on and perform its intended functions.

5. MAINTENANCE & STORAGE

- **Clean Contacts:** Periodically clean the battery contacts and the device's terminals with a dry cloth or cotton swab to ensure optimal conductivity.
- **Proper Storage:** Store unused batteries in a cool, dry place away from direct sunlight and extreme temperatures. Keep them in their original packaging or a non-conductive container to prevent short-circuiting.
- **Avoid Extreme Temperatures:** Do not expose the battery to very high or very low temperatures, as this can affect performance and lifespan.
- **Remove for Long Storage:** If the device will not be used for an extended period, remove the battery to prevent potential leakage and damage to the device.

6. TROUBLESHOOTING

Device Not Powering On:

- **Check Installation:** Ensure the battery is inserted with correct polarity (+/-) and is fully seated in the compartment.
- **Inspect Contacts:** Verify that the battery's prongs and the device's terminals are clean and making proper contact. If the prongs appear spread or bent, carefully and gently reshape them to ensure a secure connection.
- **Battery Condition:** If the battery has been in use for a long time or stored improperly, it may be depleted. Replace it with a new Banshee 532 Battery.
- **Device Malfunction:** If the issue persists after checking the battery and contacts, the problem may lie with the device itself. Consult your device's manual or a qualified technician.

7. SPECIFICATIONS

Specification	Value
Model Number	A24PX
Battery Cell Composition	Alkaline
Voltage	3 Volts
Number of Batteries	1 (Nonstandard Battery required)
Recommended Uses	Camera
Unit Count	1.0 Count
Manufacturer	BatteryJack Inc

8. WARRANTY & SUPPORT

Your Banshee 532 Battery Replacement comes with an **18-month warranty**. This warranty covers

defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your Banshee battery, please refer to the contact information provided with your purchase or visit the official Banshee website. Please have your purchase details and the battery's model number (A24PX) ready when contacting support.

9. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage:

- **Do Not Disassemble:** Never attempt to open, disassemble, or modify the battery.
- **Avoid Short Circuits:** Do not short-circuit the battery terminals with metal objects.
- **Keep Away from Heat:** Do not expose the battery to fire, direct sunlight, or high temperatures.
- **Proper Disposal:** Dispose of used batteries according to local regulations. Do not dispose of batteries in household waste or by incineration.
- **Keep Out of Reach of Children:** Store batteries away from small children and pets. If swallowed, seek immediate medical attention.
- **Avoid Water:** Do not immerse the battery in water or allow it to get wet.
- **Handle with Care:** Avoid dropping or subjecting the battery to strong impacts.