

Ariete 732

Ariete Churrasco 732 Electric Grill Instruction Manual

Model: 732 | Brand: Ariete

1. INTRODUCTION

Thank you for choosing the Ariete Churrasco 732 Electric Grill. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the grill.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors. This grill is designed for indoor use only.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the drip tray is always filled with water before use to minimize smoke and collect grease.

3. PRODUCT OVERVIEW

The Ariete Churrasco 732 is a lightweight and easy-to-use electric grill featuring a dual grid and a non-stick surface for efficient indoor grilling. It includes a removable aluminum drip tray.

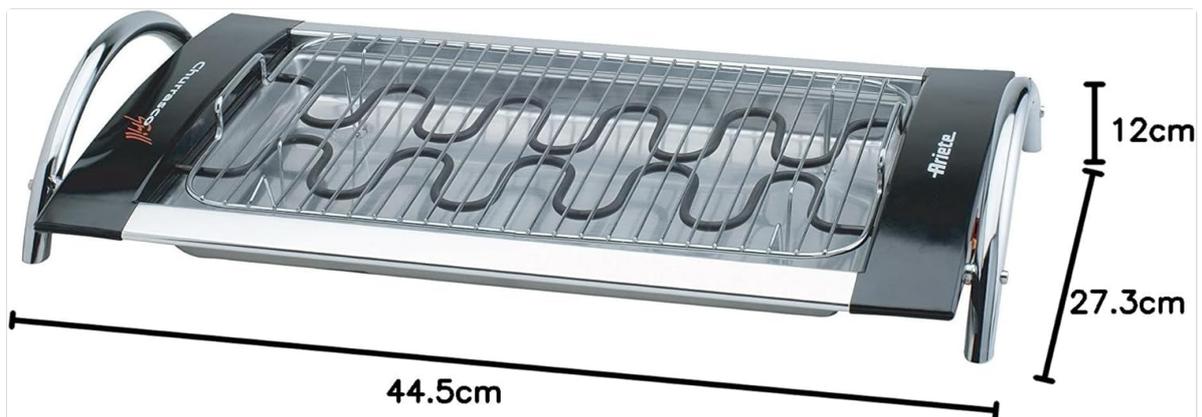


Image 1: Ariete Churrasco 732 Electric Grill with dimensions. The image shows the full grill with measurements: 44.5cm length, 27.3cm width, and 12cm height.

Components:

- **Grill Rack:** The cooking surface where food is placed.
- **Heating Element:** Located beneath the grill rack, responsible for heating.
- **Drip Tray:** An aluminum tray positioned below the heating element to collect grease and requires water for smoke reduction.
- **Main Unit Body:** Houses the electrical components and supports the grill rack and drip tray.
- **Power Cord:** For connecting the grill to an electrical outlet.

4. SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present and undamaged.
2. **Placement:** Place the grill on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the appliance.
3. **Prepare Drip Tray:** Slide the aluminum drip tray into its designated slot beneath the heating element. Fill the drip tray with water up to the indicated maximum level. This helps to reduce smoke and makes cleaning easier by preventing grease from burning onto the tray.

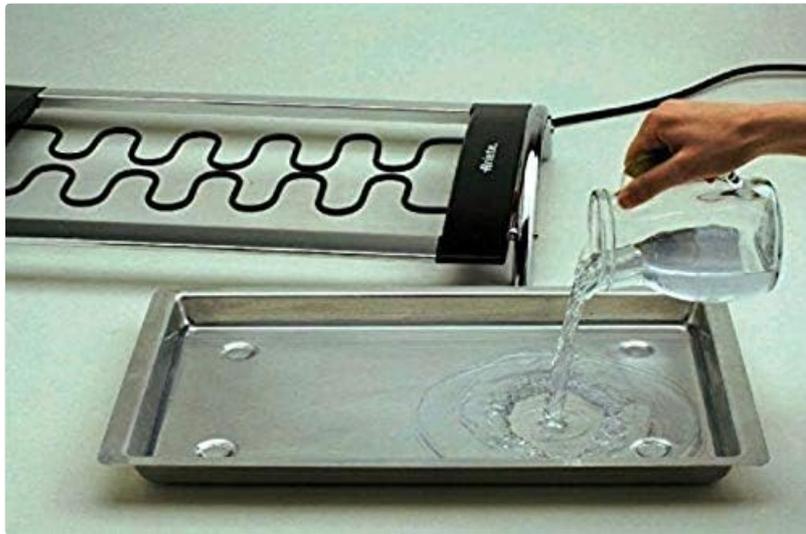


Image 2: A hand pouring water into the drip tray of the Ariete Churrasco 732 Electric Grill. This step is crucial for smoke reduction and grease collection.

4. **Assemble Grill Rack:** Place the grill rack securely over the heating element.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet. Ensure the outlet matches the voltage requirements of the grill (120V).

5. OPERATING INSTRUCTIONS

1. **Preheat:** Once plugged in, the grill will begin to heat up. Allow 5-10 minutes for the grill to reach its optimal cooking temperature. There is no specific temperature control knob; the grill operates at a fixed high temperature.
2. **Place Food:** Carefully place food items directly onto the hot grill rack. Avoid overcrowding the grill to ensure even cooking.
3. **Grilling:** Cook food according to desired doneness, turning as necessary. The non-stick surface helps prevent food from sticking.
4. **Monitor Water Level:** During extended cooking, check the water level in the drip tray and refill if necessary. Always unplug the grill before adding water.
5. **Finish Cooking:** Once cooking is complete, unplug the grill from the power outlet.



Image 3: The Ariete Churrasco 732 Electric Grill in use, showing meat and vegetable skewers cooking on the grill rack.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your grill.

1. **Cool Down:** Always unplug the grill and allow it to cool completely before cleaning.
2. **Remove Components:** Carefully remove the grill rack and the drip tray.
3. **Clean Grill Rack:** Wash the grill rack with warm, soapy water and a non-abrasive sponge. For stubborn residue, soak the rack before cleaning. The non-stick surface should be handled gently.
4. **Clean Drip Tray:** Empty any remaining water and grease from the drip tray. Wash it with warm, soapy water.
5. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit or power cord in water or any other liquid.
6. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the grill.
7. **Storage:** Store the clean and dry grill in a cool, dry place.

7. TROUBLESHOOTING

- **Grill not heating:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the outlet has power by plugging in another appliance.
- **Excessive smoke:**
 - Verify that the drip tray contains sufficient water.
 - Ensure the grill and drip tray are clean from previous cooking residues.
 - Avoid using excessive oil or fatty foods that can cause more smoke.
- **Food sticking to the grill:**
 - Ensure the grill is properly preheated before placing food.
 - Lightly brush the grill rack with cooking oil before use, if desired, for extra non-stick properties.

8. SPECIFICATIONS

Brand	Ariete
Model Number	732
Power	2000 Watts
Voltage	120 Volts
Material	Aluminum
Special Features	Non-stick surface
Product Dimensions (L x W x H)	44.5 x 27.3 x 12 cm
Item Weight	2.46 Kilograms
Recommended Use	Indoor
Fuel Type	Electric

Assembly Required	Yes
--------------------------	-----

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Ariete website. You can also visit the [Ariete Brand Store](#) for more product information and assistance.