#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Casio /
- > Casio Enticer MTD-1075BK-9AVDF Analog Watch User Manual

#### Casio MTD-1075BK-9AVDF

# Casio Enticer MTD-1075BK-9AVDF Analog Watch User Manual

Your guide to setting up, operating, and maintaining your Casio timepiece.

# 1. PRODUCT OVERVIEW

The Casio Enticer MTD-1075BK-9AVDF is a robust analog watch designed for men, featuring a black ion-plated stainless steel band and case, complemented by a gold ion-plated bezel. It offers regular timekeeping with three hands (hour, minute, second) and three functional dials indicating 24-hour time, date, and day of the week. This model is equipped with a screw lock crown and an anti-reverse bezel, ensuring durability and functionality.



Figure 1: Front view of the Casio Enticer MTD-1075BK-9AVDF watch.

Key features include 100-meter water resistance, a mineral glass crystal for scratch resistance, and a one-touch 3-fold clasp for secure wearing. The watch operates on a quartz movement, providing an accuracy of approximately ±20 seconds per month.

## 2. SETUP AND INITIAL ADJUSTMENT

# 2.1 Setting the Time

- 1. **Unscrew the Crown:** Locate the crown on the right side of the watch case. Rotate the crown counter-clockwise until it loosens and can be pulled out.
- 2. Pull the Crown to Position 2: Gently pull the crown out to the second click position. The second hand will

stop.

- 3. **Adjust Time:** Rotate the crown to move the hour and minute hands. Advance the hands past 12 o'clock to ensure the AM/PM setting is correct for the 24-hour dial.
- 4. **Push and Screw Crown:** Once the desired time is set, push the crown back in to the normal position and screw it clockwise firmly against the case to maintain water resistance.

## 2.2 Setting the Date and Day

- 1. Unscrew the Crown: Rotate the crown counter-clockwise until it loosens.
- 2. **Pull the Crown to Position 1:** Gently pull the crown out to the first click position.
- 3. Adjust Date: Rotate the crown clockwise to change the date.
- 4. Adjust Day: Rotate the crown counter-clockwise to change the day.
- 5. **Push and Screw Crown:** Once the desired date and day are set, push the crown back in to the normal position and screw it clockwise firmly against the case to maintain water resistance.

Note: Avoid setting the date and day between 9:00 PM and 4:00 AM, as this may interfere with the automatic date change mechanism.



Figure 2: Side view illustrating the crown for time and date adjustments.

# 3. OPERATING THE WATCH

# 3.1 Timekeeping

- The watch displays time using three central hands: hour, minute, and second.
- A sub-dial indicates the 24-hour format, synchronizing with the main hour hand.
- Separate sub-dials display the current date and day of the week.

#### 3.2 Anti-Reverse Bezel

The watch features an anti-reverse rotating bezel. This bezel can be rotated counter-clockwise to mark

elapsed time. Align the bezel's zero mark with the minute hand at the start of an event, then read the elapsed time by noting the minute hand's position relative to the bezel's markings. The anti-reverse mechanism prevents accidental clockwise rotation, ensuring accurate measurement of elapsed time.

## 4. MAINTENANCE AND CARE

#### 4.1 Water Resistance

This watch is rated for 100-meter water resistance. This means it is suitable for swimming, snorkeling, and showering. However, it is not recommended for scuba diving. Ensure the crown is always screwed in tightly to maintain water resistance.

- · Do not operate the crown or pushers while the watch is wet or submerged.
- Avoid exposing the watch to hot water or steam, as this can compromise the seals.
- After exposure to saltwater, rinse the watch with fresh water and wipe it dry with a soft cloth.

## 4.2 Cleaning

Wipe the watch case and band periodically with a soft, dry cloth to remove dirt and moisture. For stainless steel bands, a soft brush with mild soapy water can be used, followed by thorough rinsing and drying.

### 4.3 Battery Replacement

The approximate battery life for this model is 3 years on an SR920SW battery. When the watch stops or the second hand moves erratically, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

## 5. TROUBLESHOOTING

- Watch Not Moving: Check if the crown is pushed in and screwed down completely. If the watch still does not move, the battery may need replacement.
- Incorrect Time/Date: Refer to Section 2 for instructions on how to correctly set the time, date, and day. Ensure the crown is fully screwed in after adjustment.
- Condensation Inside Crystal: If condensation appears inside the watch crystal, it may indicate a loss of water resistance. Contact a service center immediately.



Figure 3: Back view of the watch, showing the stainless steel case back and the one-touch 3-fold clasp.

# 6. SPECIFICATIONS

Feature	Specification
Model Number	MTD-1075BK-9AVDF
Case Material	Stainless Steel (Black ion plated)
Band Material	Stainless Steel (Black ion plated)

Feature	Specification
Bezel Material	Gold ion plated
Glass Type	Mineral Glass
Water Resistance	100 meters (10 BAR)
Case Dimensions (H×W×D)	49.9 × 44.6 × 11 mm
Total Weight	146 g
Movement Type	Quartz
Accuracy	±20 seconds per month
Battery Life	Approx. 3 years on SR920SW
Display Type	Analog (3 hands, 3 dials)

# 7. WARRANTY AND SUPPORT

## 7.1 Warranty Information

This Casio watch comes with a 2-year domestic manufacturer's warranty. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

# 7.2 Customer Support

For warranty claims, service, or technical assistance, please contact your authorized Casio dealer or visit the official Casio website for service center locations and contact information. When contacting support, please have your watch model number (MTD-1075BK-9AVDF) and proof of purchase readily available.

© 2023 Casio Computer Co., Ltd. All rights reserved.

#### Related Documents - MTD-1075BK-9AVDF



#### CASIO 3502 Watch User Manual

Comprehensive user manual for CASIO watches, model 3502. Learn about water resistance, setting time and date, alarms, stopwatch, timer, backlight, and proper care.

Control   Cont	Casio GW-600 Watch User Manual   Module 2972/2973 Instructions  Comprehensive user manual for the Casio GW-600 watch (Module 2972/2973). Learn about water resistance, world time, alarms, stopwatch, timer, solar charging, power saving, and maintenance.
Models No. 100.  See See See See See See See See See Se	Руководство пользователя часов CASIO BEM-304 (Модуль 5086) Подробное руководство пользователя для часов CASIO BEM-304, включая информацию о водостойкости, настройке времени и даты, уходе за часами, технические характеристики и информацию о производителе.
The state of the	Casio WVA-420 Watch User Manual - Module 3309  Comprehensive user manual for the Casio WVA-420 watch (Module 3309), covering setup, features, water resistance, care, calibration, world time, alarms, stopwatch, power saving, and technical specifications.
■ 1985 Medium	Casio LAW-21 Модуль 2789: Руководство пользователя и характеристики Полное руководство пользователя для часов Casio LAW-21 (Модуль 2789). Содержит инструкции по эксплуатации, уходу, описания режимов работы (текущее время, мировое время, таймер, секундомер, будильник) и технические характеристики.
	Casio EFA-124 Watch User Manual User manual for the Casio EFA-124 watch, module 4398. Provides instructions on setting time, using world time, stopwatch, alarm, and care instructions.