

[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy 88093 Outdoor LED Spotlight User Manual

Gemmy 88093

Gemmy 88093 Outdoor LED Spotlight User Manual

Model: 88093

INTRODUCTION

Thank you for purchasing the Gemmy 88093 Outdoor LED Spotlight. This manual provides important information regarding the safe installation, operation, and maintenance of your product. Please read these instructions thoroughly before use and retain them for future reference.



Image: Gemmy 88093 Outdoor LED Spotlight. This image displays the red LED spotlight, featuring a decorative wreath design encircling the light source. The spotlight is designed for outdoor use and is shown in a typical operational state.

SAFETY INFORMATION

- Always ensure the product is unplugged before any installation, maintenance, or cleaning.
- This product is designed for outdoor use but is **not water resistant**. Protect it from direct heavy rain or standing water.
- Do not attempt to modify or repair the unit. Refer all servicing to qualified personnel.
- Keep away from flammable materials.
- Ensure the power cord is not damaged or pinched.
- Operate only with a 120 Volt power source.
- This product is UL Listed, indicating compliance with safety standards.

PACKAGE CONTENTS

- 1 x Gemmy 88093 Outdoor LED Spotlight
- 1 x Remote Control

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Inspect the spotlight and remote control for any signs of damage.
2. **Placement:** This spotlight is designed for floor mounting. Choose a suitable outdoor location where the spotlight can be securely placed on the ground. Ensure the location provides adequate protection from heavy rain or standing water, as the unit is not water resistant.
3. **Positioning:** The spotlight features a swivel mechanism, allowing you to adjust the light direction. Position the spotlight to illuminate your desired area.
4. **Power Connection:** Connect the power cord to a standard 120 Volt outdoor electrical outlet. Ensure the outlet is protected from weather elements.

OPERATING INSTRUCTIONS

Using the Remote Control

The Gemmy 88093 spotlight is operated using the included remote control. Ensure the remote has working batteries (if applicable, check battery compartment for type and installation). Point the remote directly at the spotlight for optimal response.

- **Power ON/OFF:** Press the **ON** button to turn the spotlight on, and the **OFF** button to turn it off.
- **Color Selection:** This model emits a red light. The remote control primarily manages power and potentially other modes if available (refer to remote specific markings).
- **Energy Efficiency:** The spotlight utilizes energy-saving LED technology.

Note: If using multiple Gemmy spotlights, a single remote control may operate all units within range simultaneously due to strong signal transmission. To adjust individual lights, it may be necessary to power off other units or adjust them one by one out of range of each other.

MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Wipe the exterior of the spotlight with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the spotlight in a cool, dry place, away from direct sunlight and moisture.
- **Inspection:** Periodically inspect the power cord and plug for any damage. If damage is found, discontinue use and contact customer support.
- **Water Exposure:** As the product is not water resistant, ensure it is protected from heavy rain, sprinklers, or standing water to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Spotlight does not turn on.	No power to the outlet. Remote control batteries are dead or incorrectly inserted. Spotlight is unplugged.	Check the power outlet with another device. Replace remote control batteries or ensure correct polarity. Ensure the spotlight is securely plugged into a working outlet.
Light output is dim.	Dirt or debris on the lens. Unit malfunction.	Clean the lens with a soft, dry cloth (ensure power is off). Contact customer support if cleaning does not resolve the issue.
Spotlight falls over easily.	Unstable placement. High winds.	Ensure the spotlight is placed on a flat, stable surface. Consider securing the base if used in windy conditions, ensuring not to obstruct ventilation.

SPECIFICATIONS

Model Number	88093
Brand	Gemmy
Light Source Type	LED
Light Color	Red
Brightness	200 Lumens
Power Source	Corded Electric
Voltage	120 Volts
Control Method	Remote Control
Material	Plastic
Product Dimensions	4"L x 4"W x 8"H
Item Weight	1.1 Pounds
Indoor/Outdoor Usage	Outdoor
Water Resistance Level	Not Water Resistant
Installation Type	Floor Mount
Assembly Required	No

WARRANTY INFORMATION

Gemmy products are manufactured to high-quality standards. Specific warranty details may vary. Please retain your proof of purchase for any warranty claims. For information regarding product warranty, please

contact Gemmy customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact Gemmy customer support. Contact information can typically be found on the product packaging or the official Gemmy website.

For more information, you may visit the official Gemmy store:[Gemmy Industries Store](#)