

- Manuals.plus /
- › KitchenAid /
- › KitchenAid 9-Cup Food Processor User Manual

KitchenAid RKFP0922CU

KitchenAid 9-Cup Food Processor User Manual

Model: RKFP0922CU | Brand: KitchenAid

INTRODUCTION

The KitchenAid 9-Cup Food Processor with Exact Slice System is designed to simplify your food preparation tasks. It features an adjustable slicing disc and a 3-in-1 Ultra Wide Mouth Feed Tube, allowing for precise slicing of various foods from thick to thin. This manual provides essential information for the safe and effective use of your appliance.

SETUP

Before first use, ensure all parts are clean. Assemble the food processor by placing the work bowl onto the base, then inserting the desired blade or disc. Secure the lid by twisting it into place until it locks. The appliance will not operate unless properly assembled.



Image: The KitchenAid 9-Cup Food Processor in Contour Silver, fully assembled and ready for use. It features a clear work bowl, lid with feed tube, and control panel with 'Off', 'Low', 'High', and 'Pulse' buttons.



Image: All components of the KitchenAid 9-Cup Food Processor laid out, including the motor base, work bowl, lid, multi-purpose blade, and reversible slicing/shredding disc. This illustrates the various parts included with the appliance.



Image: A close-up view of the KitchenAid 9-Cup Food Processor with the lid removed, showing the central drive shaft and the interior of the work bowl. This view highlights the design for easy blade insertion.

Setup Overview Video

Your browser does not support the video tag.

Video: An official product video demonstrating the basic setup and features of the KitchenAid RKFP0922CU Food Processor. This video provides a visual guide to assembling the unit and highlights its key functionalities.

OPERATING INSTRUCTIONS

The KitchenAid 9-Cup Food Processor offers versatile operation with its three power settings: Low, High, and Pulse. The Exact Slice System allows for precise control over slicing thickness, while the reversible shredding disc provides options

for fine or medium shredding.

Control Panel

The control panel features clearly marked buttons for 'Off', 'Low', 'High', and 'Pulse'. Use 'Low' for softer ingredients or lighter tasks, 'High' for harder ingredients or more intensive processing, and 'Pulse' for quick bursts of power to chop or mix ingredients without over-processing.



Image: A detailed view of the control panel on the KitchenAid Food Processor, showing the 'Off', 'Low', 'High', and 'Pulse' buttons. The 'Low' button is illuminated, indicating an active setting.

Slicing and Shredding

To slice or shred, select the appropriate disc and attach it to the drive adapter. The adjustable slicing disc allows you to change thickness by simply sliding a lever on the base. The reversible shredding disc offers both fine and medium shredding options by flipping the disc over. Use the 3-in-1 Ultra Wide Mouth Feed Tube to guide ingredients into the processor.



Image: The KitchenAid Food Processor actively slicing zucchini, demonstrating its capability to process ingredients for various culinary uses, such as preparing toppings for mini pizzas shown in the background.

Multi-Purpose Blade

The multi-purpose blade is ideal for chopping, mixing, and pureeing. Insert it into the work bowl before adding ingredients. Ensure the lid is securely locked before operating.

MAINTENANCE AND CLEANING

For optimal performance and longevity, regular cleaning is essential. All removable parts, including the work bowl, lid, blades, and discs, should be hand washed. Avoid abrasive cleaners or scouring pads that could damage the surfaces. The motor base can be wiped clean with a damp cloth.

TROUBLESHOOTING

If your KitchenAid Food Processor is not operating, please check the following:

- Ensure the work bowl and lid are correctly assembled and securely locked into place. The appliance has safety interlocks that prevent operation if not properly assembled.
- Verify that the power cord is securely plugged into a functional electrical outlet.
- Check if the selected speed setting (Low, High, or Pulse) is engaged.
- If the motor overheats due to prolonged use, the unit may automatically shut off. Allow it to cool down for approximately 30 minutes before attempting to use it again.

For further assistance, please refer to the official user guide or contact KitchenAid customer support.

SPECIFICATIONS

Brand	KitchenAid
Model Number	RKFP0922CU
Color	Contour Silver
Product Dimensions	10 x 10 x 14.5 inches
Item Weight	8 pounds
Included Components	Chopping Blade, Container, Lid
Product Care Instructions	Hand Wash
UPC	883049264646

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user guide provided by KitchenAid. A digital version of the user guide can be accessed via the following link:

[Download Official User Guide
\(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00NPZHN9S>

More documents and user manuals: <https://manuals.plus/>