

Beper 90.602

Beper Waffle Maker Model 90.602 Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and supervise them when the appliance is in use.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid touching hot surfaces. Use the heat-insulating handle.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before putting on or taking off parts, and before cleaning.
- Do not use the appliance outdoors.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not use abrasive cleaners or sharp objects to clean the non-stick plates, as this may damage the coating.
- This appliance is for household use only.

PRODUCT OVERVIEW

Components

- Non-stick cooking plates (18 cm diameter)
- Heat-insulating handle
- Power indicator light (red)
- Ready indicator light (green)
- Integrated cable reel
- Anti-slip feet



**1000
W**

**POTENZA
POWER**



**5 PORZIONI
5 PORTIONS**




**ANTIADERENTE
NON STICK**



**FACILE DA PULIRE
EASY TO CLEAN**

Beper Waffle Maker with five heart-shaped waffles, berries, and jam.

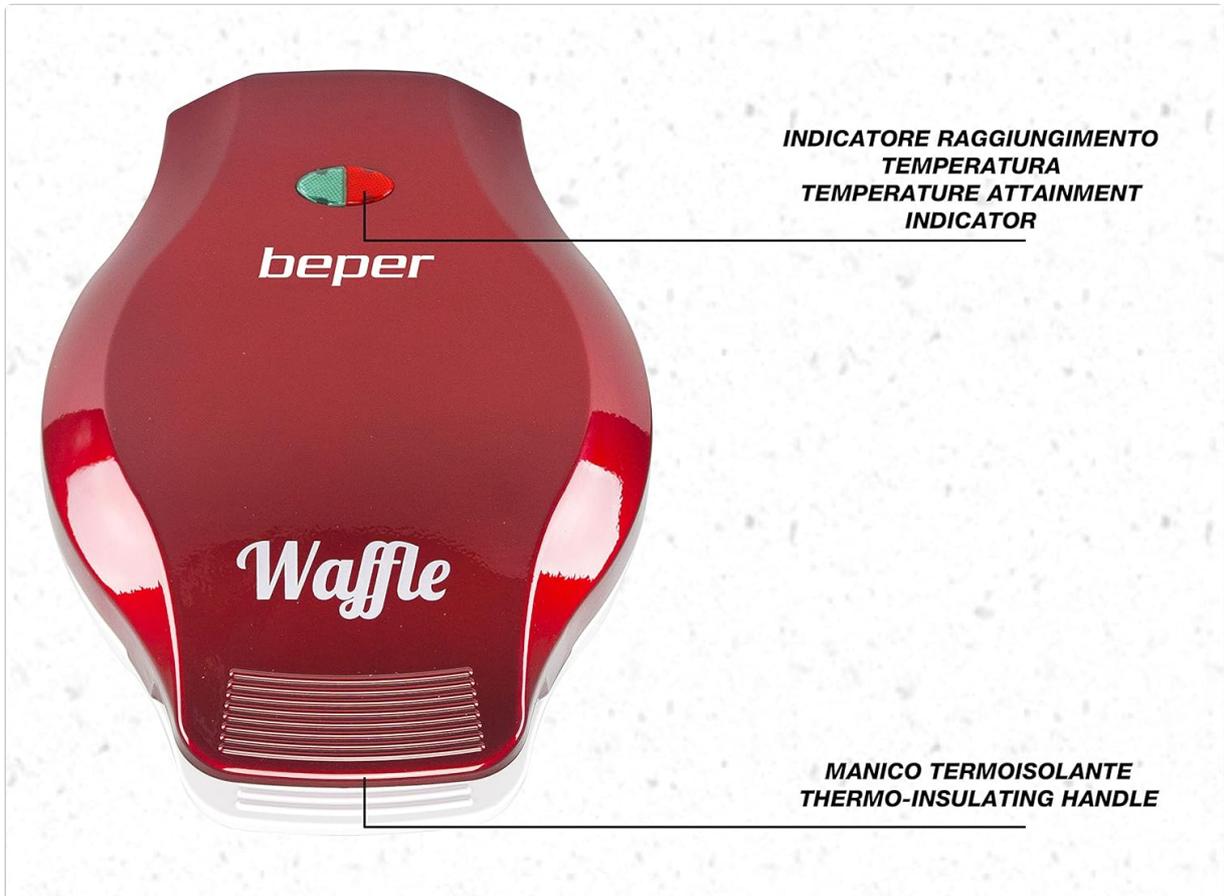

**INDICATORE RAGGIUNGIMENTO
TEMPERATURA
TEMPERATURE ATTAINMENT
INDICATOR**

**MANICO TERMOISOLANTE
THERMO-INSULATING HANDLE**

Top view of the Beper Waffle Maker showing the temperature attainment indicator light and the heat-insulating handle.

SETUP

Before First Use

1. Unpack the waffle maker and remove all packaging materials.
2. Wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly.
3. For the first use, it is recommended to lightly grease the plates with a small amount of cooking oil or butter.

Connecting to Power

Place the waffle maker on a stable, heat-resistant surface. Ensure the power cord is fully extended and plug it into a suitable 220V electrical outlet. The appliance is equipped with a German plug.



SALVASPAZIO - SPACE SAVING

Side and bottom view of the Beper Waffle Maker, highlighting the integrated cable reel for space-saving storage.

OPERATING INSTRUCTIONS

Preheating

1. Close the waffle maker and plug it into the power outlet.
2. The red power indicator light will illuminate, indicating the appliance is heating up.
3. Wait for the green ready indicator light to illuminate. This indicates that the waffle maker has reached the optimal cooking temperature.

Making Waffles

1. Once the green light is on, open the waffle maker using the heat-insulating handle.
2. Pour your waffle batter evenly onto the lower cooking plate. Be careful not to overfill, as the batter will expand. The appliance is designed to make 5 heart-shaped waffles simultaneously.
3. Carefully close the lid.

4. Cook for approximately 3-5 minutes, or until the waffles are golden brown and cooked to your desired crispness. The green light may cycle on and off during cooking to maintain temperature.
5. Once cooked, open the lid and carefully remove the waffles using a heat-resistant, non-metallic utensil (e.g., wooden or silicone spatula) to avoid damaging the non-stick coating.
6. Close the lid to maintain heat for subsequent waffles, or unplug the appliance if you are finished.



The Beper Waffle Maker open, revealing a freshly cooked heart-shaped waffle on the non-stick plate.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your waffle maker.

Cleaning the Non-Stick Plates

1. Always unplug the waffle maker and allow it to cool completely before cleaning.
2. Wipe the cooking plates with a soft, damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used.
3. Do not use abrasive pads, steel wool, or harsh chemical cleaners, as these will damage the non-stick coating.
4. Never immerse the appliance in water or other liquids.
5. Wipe the exterior of the appliance with a damp cloth.

Storage

Once clean and completely dry, the waffle maker can be stored. Utilize the integrated cable reel on the bottom of the appliance to neatly wrap the power cord, saving space.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction.	Ensure the appliance is securely plugged into a working outlet. Check the circuit breaker.
Waffles stick to the plates.	Plates not greased; too much sugar in batter; plates not preheated enough.	Lightly grease plates before each use. Ensure the green light is on before adding batter. Adjust batter recipe if necessary.
Waffles are not evenly cooked.	Uneven batter distribution; appliance not fully preheated.	Ensure batter is spread evenly. Wait for the green light to indicate full preheating.
Smoke or odor during first use.	Protective oils burning off.	This is normal for the first use. Ensure good ventilation. It should dissipate quickly.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	BEPER
Model	90.602 (also BT.603Y)
Color	Red/White
Power	1000 W
Voltage	220 V
Material	Plastic
Plate Diameter	18 cm
Waffle Capacity	5 heart-shaped waffles
Product Dimensions (approx.)	24 x 18 x 11 cm (L x W x H)
Weight (approx.)	1.18 kg
Special Features	Compact design, non-stick plates, heat-insulating handle, integrated cable reel, anti-slip feet.
Automatic Shutdown	No

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer. For technical support or service inquiries, please contact Beper customer service through their official website or the contact details provided in your product packaging.

