

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch TDA3026110 Steam Iron User Manual

Bosch TDA3026110

Bosch TDA3026110 Steam Iron User Manual

Model: TDA3026110 | Brand: Bosch

INTRODUCTION

Thank you for choosing the Bosch TDA3026110 Steam Iron. This appliance is designed for efficient and effective ironing of various fabrics. Featuring a powerful 2600W motor, a CeraniumGlissée multi-directional soleplate, and an advanced steam system, this iron ensures optimal steam distribution and smooth gliding. Please read this manual carefully before first use to ensure safe operation and to achieve the best results from your iron. Keep this manual for future reference.

SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the rating plate matches your mains supply voltage.
- Do not leave the iron unattended while it is switched on or connected to the mains supply.
- Keep the iron and its cord out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Never immerse the iron, cord, or plug in water or any other liquid.
- Do not operate the iron if it has been dropped, if there are visible signs of damage, or if it is leaking. Contact authorized service personnel for repair.
- Always place the iron on a stable, heat-resistant surface when resting.
- Exercise caution when filling the water tank or emptying it, as hot water or steam may be present.
- Unplug the iron from the power outlet before filling with water, cleaning, or after each use.
- The soleplate becomes very hot during use. Avoid direct contact with the hot soleplate.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Bosch TDA3026110 Steam Iron:

1. Water spray nozzle
2. Water tank filling inlet with cover
3. Steam control slider (Dry, Eco, Max Steam)
4. Spray button
5. Steam shot button
6. Temperature control dial

- 7. LED indicator light
- 8. Handle
- 9. Cord tidy / Flexible cord joint
- 10. CeraniumGlissée soleplate
- 11. Water tank (320ml capacity)



Figure 1: Front view of the Bosch TDA3026110 Steam Iron, highlighting its sleek design and controls.



Figure 2: Various angles of the Bosch TDA3026110 Steam Iron, showcasing its ergonomic handle and soleplate design.



Figure 3: The Bosch TDA3026110 Steam Iron in operation, demonstrating steam emission for effective wrinkle removal.



Figure 4: Detailed view of the CeraniumGlissée soleplate, designed for smooth gliding and even heat distribution.

SETUP

Before First Use

- Remove any stickers or protective film from the soleplate.
- It is normal for a slight odor or smoke to be emitted during the first few minutes of use. This will disappear after a short period.
- To clean the steam channels, iron an old piece of fabric for a few minutes using the steam function.

Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Set the steam control slider to the 'Dry' position (no steam).
3. Open the water tank filling inlet cover.
4. Fill the transparent water tank (320ml capacity) with tap water up to the 'MAX' mark. Do not overfill.
5. Close the water tank filling inlet cover securely.

OPERATING INSTRUCTIONS

Temperature Setting

- Plug the iron into a suitable power outlet.
- Turn the temperature control dial to the desired setting according to the fabric type. Refer to the fabric care labels on your garments.
- The LED indicator light will illuminate, indicating the iron is heating up. It will turn off when the set temperature is reached.

Steam Ironing

- Ensure the water tank is filled.
- Set the temperature control dial to a steam-suitable setting (usually 2 dots or 3 dots on the dial). Steam is not recommended for low-temperature settings.
- Once the iron reaches the set temperature (LED light off), adjust the steam control slider to your desired steam level (Eco or Max Steam). The iron will produce continuous steam at approximately 40g/min.
- For stubborn creases, press the steam shot button for an extra burst of steam. Wait a few seconds between bursts.

Vertical Steam

- This function is ideal for removing creases from hanging garments, curtains, or delicate fabrics.
- Hold the iron vertically, close to the fabric (but not touching).
- Press the steam shot button repeatedly to release bursts of vertical steam.

Spray Function

- The spray function can be used with or without steam.
- Press the spray button to lightly moisten the fabric, which helps in smoothing out creases.

Dry Ironing

- For dry ironing, ensure the water tank is empty or set the steam control slider to the 'Dry' position.
- Select the appropriate temperature for your fabric.

Automatic Safety Shut-off

The iron is equipped with an automatic safety shut-off feature. If the iron is left stationary on its heel for approximately 8 minutes, or on its soleplate for approximately 30 seconds, it will automatically switch off to prevent accidents and save energy. The LED indicator light will flash to indicate this mode. To reactivate, simply move the iron.

MAINTENANCE

Cleaning the Iron

- Always unplug the iron and allow it to cool completely before cleaning.
- Wipe the exterior of the iron with a damp cloth. Do not use abrasive cleaners or solvents.
- To clean the soleplate, use a damp cloth and a non-abrasive liquid cleaner specifically designed for iron soleplates. Avoid scratching the CeraniumGlissée surface.

Descaling

Regular descaling helps maintain optimal steam performance. The frequency depends on the hardness of your water and how often you use the iron.

- Consult your local Bosch service center or refer to specific descaling solutions recommended for steam irons.
- Never use vinegar or other chemical descaling agents not approved for irons, as they can damage the appliance.

Storage

- After use, empty any remaining water from the tank.
- Allow the iron to cool down completely.
- Wrap the power cord neatly around the cord tidy.
- Store the iron upright on its heel in a safe, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outage; automatic shut-off activated.	Check power connection; check circuit breaker; move the iron to reactivate.
No steam or insufficient steam.	Water tank empty; temperature too low; steam control set to 'Dry'; steam vents blocked.	Fill water tank; set higher temperature; adjust steam control; descale iron.
Water drips from soleplate.	Temperature too low for steam; water tank overfilled.	Increase temperature setting; do not overfill water tank.
White flakes or brown stains on fabric.	Mineral deposits (limescale) in water tank/steam channels.	Descale the iron; use distilled water if tap water is very hard.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model Number:** TDA3026110
- **Power:** 2600 Watt
- **Voltage:** 240 Volt
- **Frequency:** 50 Hz
- **Soleplate Material:** Ceramic (CeranumGlissée)
- **Continuous Steam Output:** 40 g/min
- **Water Tank Capacity:** 320 ml
- **Special Features:** Vertical steam, Spray function, Automatic safety shut-off, Variable temperature control, LED control light, 2-meter extra-long cord.
- **Color:** Blue
- **Item Weight:** Approximately 3.26 pounds (1.48 kg)

WARRANTY AND SUPPORT

This Bosch TDA3026110 Steam Iron comes with a **two-year warranty** from Bosch agent Egypt - MTi. For any service, repair, or warranty claims, please contact the official service center.

Service Center Hotline: 19460

Please have your model number (TDA3026110) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00NUZUVRY>

More documents and user manuals: <https://manuals.plus/>