

SUMMER INFANT 21930A

Summer Infant 3Dlite Convenience Stroller User Manual

Model: 21930A

1. INTRODUCTION

Thank you for choosing the Summer Infant 3Dlite Convenience Stroller. This lightweight and feature-rich stroller is designed for ease of use, whether for daily errands or travel. Please read this manual thoroughly before assembly and use to ensure safe operation and proper maintenance of your stroller.

2. SAFETY INFORMATION

Your child's safety is paramount. Always follow these guidelines:

- Always secure your child with the 5-point safety harness.
- Do not exceed the maximum weight capacity of 50 pounds (22.7 kg) or a child height of 43 inches (109 cm).
- Do not overload the storage basket; maximum capacity is 10 pounds (4.5 kg).
- Ensure the stroller is fully locked in the open position before placing a child inside.
- Never leave your child unattended in the stroller.
- Engage the rear wheel locks when the stroller is stationary.
- Keep fingers clear of moving parts when folding or unfolding the stroller.

3. PACKAGE CONTENTS

Verify that all components are present:

- Summer Infant 3Dlite Convenience Stroller Frame with Seat
- Extra-large storage basket (pre-attached)
- Rear storage pocket (pre-attached)
- Cup holder

4. SETUP

4.1 Unfolding the Stroller

To unfold the stroller, release the auto-lock mechanism and extend the frame until it clicks securely into place. Ensure all locking mechanisms are engaged before use.



Figure 1: The 3Dlite Stroller in its fully unfolded position.

lightweight (13 lbs.)
compact fold



Figure 2: Comparison of the stroller in its compact folded and unfolded states.

4.2 Attaching the Cup Holder

Locate the designated attachment point on the stroller handle or frame. Slide the cup holder onto the attachment point until it is firmly secured.

5. OPERATING INSTRUCTIONS

5.1 Folding the Stroller

The 3Dlite features an easy compact fold with a carry strap and auto-lock. To fold, ensure the seat is in an upright position, then follow the instructions on the frame to collapse the stroller. The auto-lock will engage, and you can use the carry strap for portability.

5.2 Adjusting the Seat Recline

The stroller offers a 4-position recline to ensure your child's comfort. Locate the recline mechanism on the back of the seat. Squeeze the levers or press the button to adjust the seat to the desired angle. Ensure the seat is securely locked in place after adjustment.



Figure 3: The 4-position recline feature for optimal comfort.

5.3 Canopy Operation

The adjustable and removable canopy includes a flip-out sun visor for added protection. Extend the canopy fully for maximum shade. The visor can be flipped out for extra coverage on sunny days.



canopy with pop
out sun visor



Figure 4: Canopy with pop-out sun visor for sun protection.

5.4 Storage Features

The stroller is equipped with an extra-large storage basket under the seat, a rear storage pocket, and a cup holder. These provide convenient storage for essentials during outings.

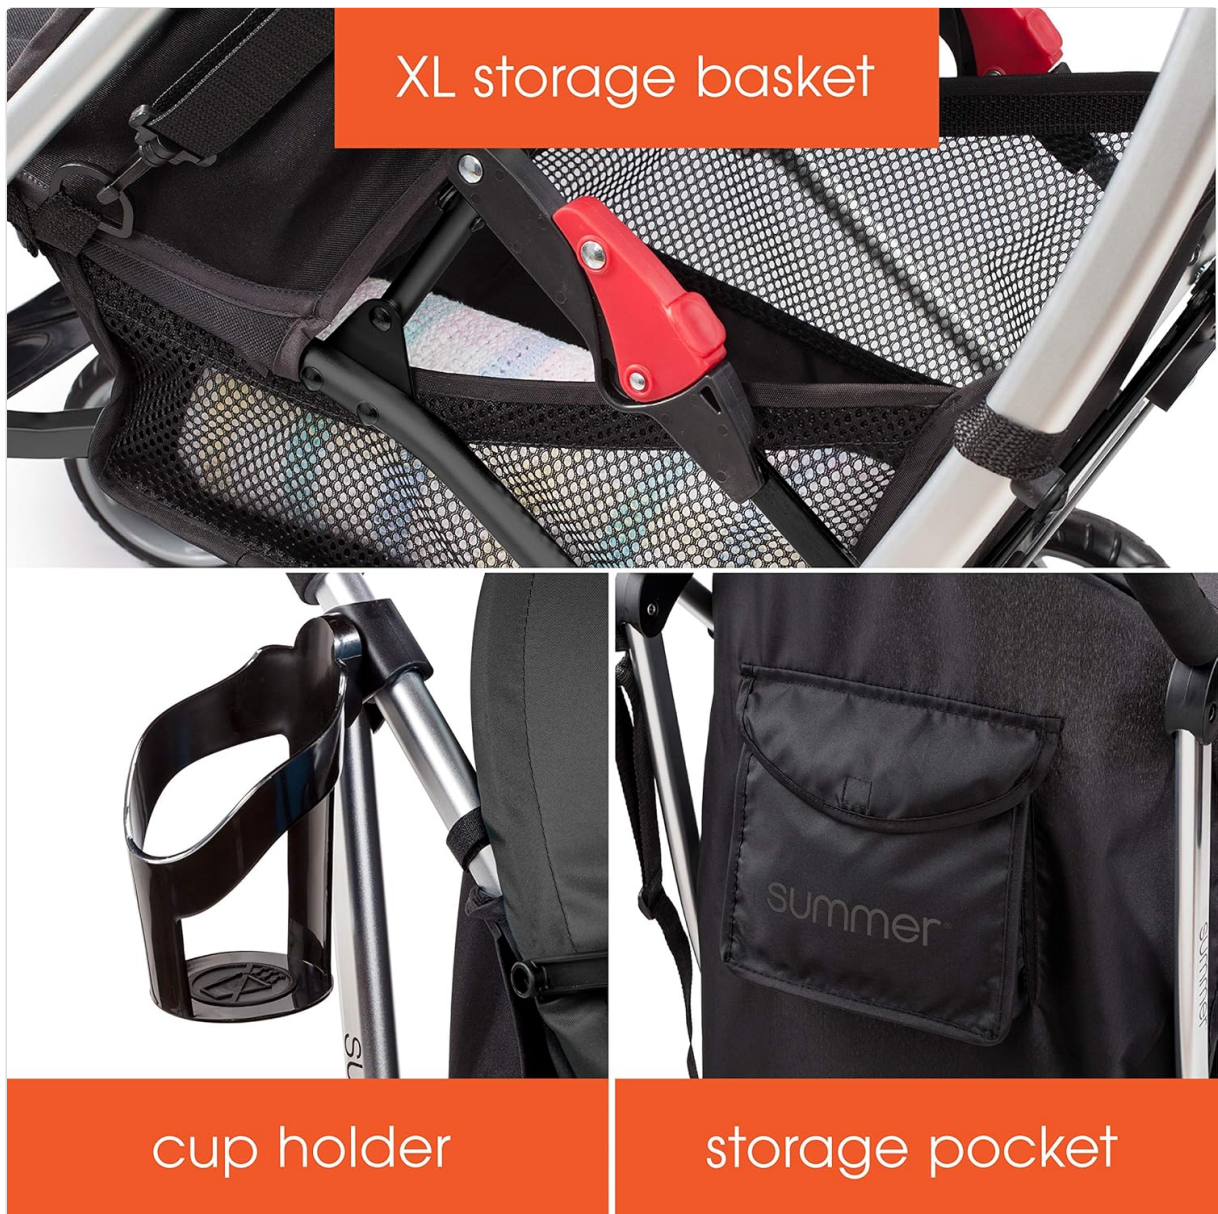


Figure 5: Ample storage options including the XL storage basket, cup holder, and storage pocket.

5.5 Wheel Locks

The rear wheels feature lockable mechanisms to keep the stroller stationary. Press down on the lock levers located near the rear wheels to engage the brakes. Lift the levers to release.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your stroller:

- **Cleaning:** Wipe down the frame with a soft, damp cloth and mild soap. Allow to air dry completely. The fabric seat can be spot cleaned.
- **Wheels:** Periodically check wheels for debris and clean as necessary. If wheels begin to squeak, a small amount of silicone-based lubricant can be applied to the axle points. Avoid oil-based lubricants.
- **Storage:** Store the stroller in a dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your stroller, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stroller does not fold easily.	Seat not fully upright; locking mechanism obstructed.	Ensure seat is in the most upright position. Check for any fabric or items obstructing the folding mechanism.
Wheels squeak.	Lack of lubrication; dirt/debris in axle.	Clean wheels and axles. Apply a small amount of silicone-based lubricant to the axle points.
Cup holder does not fit certain bottles.	Cup holder designed for standard bottle sizes.	Use bottles or cups that fit within the cup holder's dimensions.
Cannot see child through canopy.	Canopy design does not include a plastic window.	This model's canopy does not feature a viewing window. Periodically check on your child by looking around the canopy.

8. SPECIFICATIONS

Feature	Detail
Brand	SUMMER INFANT
Model Number	21930A
Color	Black
Material	100% Polyester, Aluminum Frame
Item Weight	13 Pounds (5.9 kg)
Maximum Weight Recommendation	50 Pounds (22.7 kg)
Item Dimensions (L x W x H)	33.5" x 19.5" x 42.5" (85.1 cm x 49.5 cm x 108 cm)
Folded Size (H x W x L)	11.0" x 12.0" x 42.8" (27.9 cm x 30.5 cm x 108.7 cm)
Harness Type	5 Point
Number of Cup Holders	1

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Summer Infant website or contact their customer service department. You can also find a digital version of this user manual and other helpful resources via the following link:

[Download User Manual \(PDF\)](#)

Protection plans may be available for purchase separately to extend coverage beyond the standard manufacturer's warranty. Please check with your retailer for details.

© 2024 SUMMER INFANT. All rights reserved.