

[Manuals.plus](#) /

› [ARTERO](#) /

› Artero Premium 2-Speed Professional Pet Clipper User Manual

## ARTERO ART-M339

# Artero Premium 2-Speed Professional Pet Clipper

Model: ART-M339

### INTRODUCTION

Thank you for choosing the Artero Premium 2-Speed Professional Pet Clipper. This manual provides essential information for the safe and effective use, maintenance, and care of your new grooming tool. Please read these instructions thoroughly before first use and keep them for future reference.



Image: The Artero Premium 2-Speed Professional Pet Clipper, featuring a black body with an orange top section and a visible power cord.

## SAFETY INFORMATION

**General warning about sharp blades. Keep out of reach of children and pets. Do not use on human babies or infants. Always ensure the clipper is unplugged before cleaning or attaching/detaching accessories.**

## PACKAGE CONTENTS

Your Artero Premium 2-Speed Professional Pet Clipper package includes:

- Artero Premium 2-Speed Professional Pet Clipper
- Cleaning brush
- Carrying case
- Blade #10 (1.6 mm height)
- 6 Guide combs (3/6/9/12/15/18 mm)
- Blade oil

# Cuchillas fáciles de reemplazar

Compatible con marcas profesionales



Artero

Andis

Moser

Oster

Image: The Artero Premium 2-Speed Professional Pet Clipper shown with its complete set of accessories, including the carrying case, various guide combs, a cleaning brush, and blade oil.

## SETUP

1. **Unpack:** Carefully remove all components from the packaging. Inspect the clipper and accessories for any damage.
2. **Initial Blade Check:** Ensure the blade is securely attached to the clipper. If not, refer to the 'Blade Installation/Removal' section under Maintenance.
3. **Lubricate Blades:** Before first use, apply a few drops of the provided blade oil to the teeth and sides of the blade. This ensures smooth operation and prolongs blade life.
4. **Attach Guide Comb:** Select the desired guide comb (3mm, 6mm, 9mm, 12mm, 15mm, or 18mm) based on the desired hair length. Align the comb with the clipper blade and slide it on until it clicks securely into place. Ensure it is firmly attached before use.

# Controla cada zona

Suave o potente según necesidad



Image: A visual guide demonstrating the three steps for achieving precise cuts: selecting the appropriate guide comb, attaching it to the clipper, and then proceeding with grooming.

## OPERATING INSTRUCTIONS

1. **Preparation:** Ensure the pet's coat is clean, dry, and free of tangles. Brush the coat thoroughly before clipping.
2. **Power Connection:** Plug the clipper into a suitable power outlet.
3. **Select Speed:** The clipper features two speeds. Use the switch to select the desired speed. Lower speed is suitable for sensitive areas or finer coats, while higher speed is for thicker coats or faster grooming.
4. **Clipping Technique:** Hold the clipper firmly and move it gently against the direction of hair growth. Maintain an even pressure and avoid pressing too hard against the pet's skin. Work in small sections.
5. **Monitor Blade Temperature:** Periodically check the blade temperature. If it becomes too hot, turn off the clipper, remove the blade, and allow it to cool. Using a hot blade can cause discomfort to the pet.
6. **Completion:** After grooming, unplug the clipper from the power outlet.

# ARTERO PREMIUM 2 SPEED

Potencia profesional  
para cada tipo de pelaje.



Image: The clipper's two-speed control is highlighted, demonstrating how to adjust between gentle and powerful settings for different grooming needs and body zones.

# Se adapta al manto

Más control en cada tipo



Image: The clipper is shown adapting to different coat types, emphasizing its versatility for various hair textures and densities.

## MAINTENANCE

### Cleaning the Blades

Regular cleaning and oiling are crucial for optimal performance and longevity of your clipper.

1. **Unplug:** Always ensure the clipper is unplugged before cleaning.
2. **Remove Hair:** Use the provided cleaning brush to remove any hair trapped between the blades and within the clipper head.
3. **Blade Oiling:** After each use, apply 2-3 drops of blade oil across the top of the blade teeth and one drop on each side of the blade. Run the clipper for a few seconds to distribute the oil evenly. This reduces friction, prevents rust, and keeps the blades sharp.
4. **Blade Installation/Removal:** To remove the blade, gently push the blade forward until it detaches. To install, align the blade with the clipper housing and push it back until it clicks into place.

# Kit completo profesional

Abre, conecta y empieza



Image: The clipper blade is shown, emphasizing its easy replacement and compatibility with professional brands like Artero, Andis, Moser, and Oster.

## Storage

Store the clipper and its accessories in the provided carrying case in a dry, cool place, away from direct sunlight and moisture. Ensure the cord is not tightly wrapped or kinked.

## TROUBLESHOOTING

| Problem                    | Possible Cause                                                   | Solution                                                                                       |
|----------------------------|------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| Clipper is not turning on. | Not plugged in correctly;<br>Power outlet issue; Internal fault. | Check power connection. Try a different outlet. If problem persists, contact customer support. |

| Problem                                              | Possible Cause                                                                                     | Solution                                                                                                                                                                                           |
|------------------------------------------------------|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blades are pulling hair or not cutting effectively.  | Blades are dull; Blades are dirty/clogged with hair; Insufficient oiling; Incorrect blade tension. | Clean and oil blades thoroughly. Replace dull blades. Ensure blade tension is correct (refer to blade manufacturer instructions if applicable).                                                    |
| Clipper or blades become excessively hot during use. | Lack of lubrication; Excessive friction; Prolonged continuous use; Dirty blades.                   | Apply blade oil frequently. Clean blades to remove trapped hair. Take breaks during extended grooming sessions to allow the clipper and blades to cool down. Consider using a blade coolant spray. |
| Unusual noise or vibration.                          | Loose blade; Internal component issue.                                                             | Ensure blade is securely attached. If noise persists, discontinue use and contact customer support.                                                                                                |

## SPECIFICATIONS

| Feature                | Detail                                                                               |
|------------------------|--------------------------------------------------------------------------------------|
| Model Number           | ART-M339 Premium                                                                     |
| Brand                  | ARTERO                                                                               |
| Power Source           | Corded Electric                                                                      |
| Speeds                 | 2 Speeds                                                                             |
| Blade Material         | Stainless steel or other high-quality material                                       |
| Minimum Cutting Length | 3 mm (with guide comb)                                                               |
| Maximum Cutting Length | 18 mm (with guide comb)                                                              |
| Dimensions (L x W x H) | 33 x 26 x 7.1 cm                                                                     |
| Weight                 | 1 kg                                                                                 |
| Special Feature        | Ergonomic design                                                                     |
| Included Components    | Cleaning brush, carrying case, #10 blade (1.6 mm), 6 guide combs (3/6/9/12/15/18 mm) |

## WARRANTY AND SUPPORT

### Warranty

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package or visit the official ARTERO website for detailed warranty terms and conditions. The warranty is provided by the manufacturer.

### Customer Support

For technical assistance, replacement parts, or any questions regarding your Artero Premium Pet Clipper, please contact ARTERO customer support. Contact information can typically be found on the product packaging, the official ARTERO website, or through your retailer.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question