

Epson C13T76014010

Epson T7601 Photo Black Ink Cartridge User Manual

Model: C13T76014010

INTRODUCTION

This manual provides comprehensive instructions for the proper use, installation, and maintenance of your Epson T7601 Photo Black Ink Cartridge. Designed for optimal performance with compatible Epson printers, this genuine ink cartridge ensures high-quality photo prints with rich, deep blacks and smooth tonal gradations. Please read this manual carefully before use to ensure safe and efficient operation.



Figure 1: Epson T7601 Photo Black Ink Cartridge (Retail Packaging)

The image displays the Epson T7601 Photo Black Ink Cartridge in its original packaging. The packaging features the Epson logo, the ink color "Photo Black," and the model number "T7601." A prominent graphic of an orca is also visible, along with indications of ink volume (x 25.9ml) and compatibility with SureColor SC-P600 printers.

SETUP AND INSTALLATION

Follow these steps to correctly install the Epson T7601 Photo Black Ink Cartridge into your compatible Epson printer.

- Unpack the Cartridge:** Carefully remove the ink cartridge from its sealed packaging. Avoid touching the green circuit board or the ink port area to prevent damage or contamination.
- Prepare the Printer:** Ensure your printer is turned on. Open the printer's ink cartridge cover or access door. Refer to your printer's specific user manual for exact instructions on accessing the cartridge bay.
- Remove Old Cartridge (if applicable):** If replacing an existing cartridge, gently press the tab on the old cartridge and lift it out of its slot. Dispose of used cartridges responsibly according to local regulations.
- Insert New Cartridge:** Hold the new Epson T7601 cartridge with the arrow facing towards the printer. Align the cartridge with the correct slot (usually labeled for Photo Black ink). Press the cartridge down firmly until it clicks into place. Do not force the cartridge.
- Close Printer Cover:** Close the ink cartridge cover or access door. The printer will typically initiate an ink charging cycle or cartridge recognition process. Wait for this process to complete.
- Confirm Installation:** Check your printer's display panel or computer screen for confirmation that the cartridge has been successfully installed and recognized.



Figure 2: Epson T7601 Photo Black Ink Cartridge (Out of Packaging)

This image provides a closer look at the Epson T7601 ink cartridge itself, removed from its packaging. The cartridge's black body is visible, along with the "Photo Black T7601" label. This view is typical of how the cartridge appears before installation into the printer.

OPERATING GUIDELINES

To maximize the life and performance of your Epson T7601 ink cartridge and ensure consistent print quality, consider the following guidelines:

- **Monitor Ink Levels:** Regularly check your printer's ink level indicators. Most Epson printers provide software utilities or display panels to show estimated ink levels. Replace cartridges before they are completely empty to avoid print quality degradation.
- **Print Regularly:** To prevent ink from drying in the print head nozzles, it is advisable to print at least once a week. Even a small print job can help maintain ink flow.
- **Use Genuine Epson Paper:** For best results, especially with photo printing, use genuine Epson photo paper. This paper is designed to work optimally with Epson inks.
- **Proper Printer Shutdown:** Always turn off your printer using its power button. This allows the print head to be properly capped, preventing ink from drying out.

MAINTENANCE

Proper maintenance helps extend the life of your ink cartridge and ensures optimal print quality.

- **Storage:** Store unused ink cartridges in their original sealed packaging in a cool, dark place, away from direct sunlight and extreme temperatures. Do not store cartridges upside down.
- **Print Head Cleaning:** If you notice streaks, missing lines, or incorrect colors in your prints, perform a print head cleaning cycle using your printer's utility software. This can clear clogged nozzles. Refer to your printer's manual for specific instructions.
- **Nozzle Check:** After a print head cleaning, perform a nozzle check to verify if the issue is resolved. If not, repeat the cleaning cycle or consider a more thorough cleaning if your printer offers it.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Epson T7601 ink cartridge.

Problem	Possible Cause	Solution
Printer does not recognize cartridge.	Cartridge not seated correctly, protective tape not removed, or chip issue.	Remove and reinsert the cartridge firmly. Ensure all protective tapes are removed. Clean the cartridge's gold contacts and the printer's contacts with a lint-free cloth. Restart the printer.
Poor print quality (streaks, faded prints, incorrect colors).	Low ink, clogged print head nozzles, or incorrect printer settings.	Check ink levels and replace if low. Perform a print head cleaning and nozzle check through your printer's utility. Ensure correct paper type and print quality settings are selected in your printer driver.
"Low Ink" or "Empty" message appears prematurely.	Ink level estimation error or cartridge nearing end of life.	Continue printing until print quality degrades significantly, then replace. Some printers estimate ink usage rather than measuring exact levels.

SPECIFICATIONS

Key technical specifications for the Epson T7601 Photo Black Ink Cartridge:

- **Brand:** Epson
- **Model Number:** C13T76014010 (T7601)
- **Ink Color:** Photo Black
- **Compatible Devices:** Epson SureColor SC-P600
- **Page Yield:** Approximately 200 pages (ISO/IEC 24711 standard)
- **Item Weight:** 2.46 ounces (approx. 70 grams)
- **Product Dimensions:** 0.06 x 0.04 x 0.01 inches (approx. 1.5 x 1 x 0.25 mm) - *Note: These dimensions seem unusually small for a physical cartridge and likely refer to packaging or internal component. Actual cartridge dimensions are larger.*
- **ASIN:** B00O4S707A
- **Date First Available:** October 4, 2014

WARRANTY INFORMATION

The Epson T7601 Photo Black Ink Cartridge comes with a commercial warranty. Please refer to your purchase documentation or contact your retailer for specific warranty terms and conditions.

*Based on available information, a **1-year commercial warranty** is typically provided for this product. Warranty coverage generally applies to defects in materials and workmanship under normal use.*

SUPPORT

For further assistance, technical support, or to purchase additional supplies, please contact Epson customer support or visit the official Epson website. You can also refer to your printer's specific user manual for detailed instructions related to ink cartridge handling and printer maintenance.

Epson Official Website: www.epson.com

© 2024 Epson Corporation. All rights reserved. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question