

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Clarisonic](#) /

› [Clarisonic Mia 2 Sonic Facial Cleansing Brush System User Manual](#)

Clarisonic Mia 2

Clarisonic Mia 2 Sonic Facial Cleansing Brush System User Manual

Model: Mia 2 (S2651800)

Brand: Clarisonic

1. INTRODUCTION

The Clarisonic Mia 2 Sonic Facial Cleansing Brush System utilizes patented micro-massage oscillation technology to cleanse the skin. This device is designed to gently remove impurities, preparing the skin for better absorption of creams, serums, and moisturizers. It offers two different speeds and a one-minute pulsing T-timer for customized cleansing.

Regular use can help improve skin texture, tone, and contribute to healthier-looking skin. This manual provides instructions for the proper setup, operation, and maintenance of your Clarisonic Mia 2 device.

2. PACKAGE CONTENTS

Verify that all items are present in your Clarisonic Mia 2 package:

- Mia 2 Cleansing Device
- Charger
- Radiance Cleansing Brush Head
- Refreshing Trial Size Gel Cleanser, 1 fl. oz.



Image 2.1: Clarisonic Mia 2 device, charger, and two brush heads. This image displays the main components included in the product package, ensuring users can verify their contents.

ZIPPER PACKAGING



Image 2.2: Clarisonic Mia 2 product packaging. This image shows the retail box, which may include a zipper opening for easy access.

3. SAFETY INFORMATION

Please read and understand all safety precautions before using the Clarisonic Mia 2 device.

- Always remove eye makeup by hand before using the device.
- Do not use the device on broken or irritated skin.
- Keep the device out of reach of children.
- Avoid direct contact with eyes during operation.
- Do not use the device with harsh chemicals or abrasive cleansers.
- Allow the device to dry completely after each use.
- Store the device in a dry place when not in use.

4. SETUP

4.1 Initial Charging

Before first use, fully charge your Clarisonic Mia 2 device. A full charge typically takes approximately 18 hours. A fully charged device provides approximately 80-100 minutes of use, depending on the selected speed setting.

1. Connect the charger to a power outlet.
2. Place the bottom of the Mia 2 device onto the magnetic charging cradle. Ensure the device is securely seated and the charging indicator light (if present) illuminates.
3. Allow the device to charge for the recommended duration.



Image 4.1: Close-up of the bottom of the Clarisonic Mia 2 device, showing the charging contacts. This area connects to the magnetic charger for power replenishment.

4.2 Attaching the Brush Head

To attach a brush head, align the three tabs on the back of the brush head with the three slots on the device handle. Push down and twist clockwise until it locks into place. To remove, twist counter-clockwise and pull up.

5. OPERATING INSTRUCTIONS

Follow these steps for effective facial cleansing with your Clarisonic Mia 2:

1. **Prepare Skin:** If you wear makeup, remove eye makeup by hand before using the device.
2. **Wet Skin and Brush Head:** Wet your skin and the brush head with warm water.
3. **Apply Cleanser:** Apply your preferred cleanser directly to your skin or to the wet brush head.
4. **Power On and Cleanse:** Turn your Clarisonic Mia 2 on. Gently move the brush using a small circular motion across your face. The device features a T-timer that prompts you to move to different areas of your face:
 - 20 seconds on the forehead
 - 20 seconds on the nose/chin area
 - 10 seconds on each cheek
5. **Maintain Contact:** Ensure the brush head remains flush against your skin. The outer bristles are designed to contain any residual mist from the brush oscillation.
6. **Automatic Shut-off:** The Mia 2 will automatically shut off after one minute, indicating the completion of a full cleansing cycle.

5.1 Speed Settings

The Clarisonic Mia 2 offers two speed settings for personalized cleansing. Press the power button to cycle through the available speeds. The device will remember your last used speed setting for the next use.



Image 5.1: Clarisonic Mia 2 device with brush head attached. This image highlights the main body of the device and the brush head, ready for use.

6. MAINTENANCE

6.1 Cleaning the Device

After each use, rinse the brush head and the device handle with warm water. Ensure no cleanser residue remains. Allow the device to air dry completely before storing.

6.2 Replacing the Brush Head

For optimal performance and hygiene, it is recommended to replace your Clarisonic brush head every three months. To replace, twist the old brush head counter-clockwise and pull it off. Align the new brush head with the device and twist clockwise until it locks into place.

7. TROUBLESHOOTING

If you encounter issues with your Clarisonic Mia 2, refer to the following common solutions:

- **Device Not Turning On:** Ensure the device is fully charged. Connect it to the charger for at least 18 hours for a complete charge.
- **Device Not Charging:** Verify that the charger is properly connected to a power outlet and that the device is correctly seated on the magnetic charging cradle. Check for any debris on the charging contacts of both the device and the charger.
- **Reduced Performance/Vibration:** This may indicate a low battery. Recharge the device. If the issue persists, the brush head might be worn out and require replacement.
- **Water Leakage:** While the device is designed to be water-resistant, ensure the brush head is securely attached. Avoid submerging the entire device in water for extended periods. If water ingress is suspected, discontinue use and contact customer support.

For further assistance, please contact Clarisonic customer support.

8. SPECIFICATIONS

Model Name	Clarisonic Mia 2
Item Model Number	S2651800
Brand	Clarisonic
Power Source	Battery Powered
Dimensions	3 x 2.5 x 8 inches
Weight	1 Pound
Material	Silicone

9. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Clarisonic website. For technical support, replacement parts, or any other inquiries, please contact Clarisonic customer service.

You can find more information and support resources by visiting the [Clarisonic Brand Store](#).

10. AUTHENTICITY VERIFICATION

To ensure you have a genuine Clarisonic product, check for the anti-fake label on the seals of the packaging. A genuine product will have an intact anti-fake label. If the label is scrapped off, the product may be used. If there is no label, the product may be counterfeit.

IDENTIFY AUTHENTICITY



There is an anti-fake label on the seals

GENUINE



The anti-fake label is scrapped off

USED



Nothing on the seals

FAKE

Image 10.1: Guide to identifying authentic Clarisonic products by checking the anti-fake label on the seals. This helps users confirm the originality of their device.