

parts-quick 8541639353

parts-quick 32MB SmartMedia Card Instruction Manual

For Korg ToneWorks PXR4

1. INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of your parts-quick 32MB SmartMedia Card. This card is specifically designed for compatibility with the Korg ToneWorks PXR4 digital recorder, enabling expanded storage for your audio projects.

Please read this manual thoroughly before using the SmartMedia card to ensure optimal performance and longevity.

2. SETUP AND INSTALLATION

Follow these steps to correctly install the 32MB SmartMedia card into your Korg ToneWorks PXR4.

1. **Power Off Device:** Ensure your Korg ToneWorks PXR4 is completely powered off and disconnected from any power source before attempting installation.
2. **Locate SmartMedia Slot:** Identify the SmartMedia card slot on your Korg ToneWorks PXR4. Refer to your PXR4's user manual for the exact location.
3. **Insert Card:** Gently insert the 32MB SmartMedia card into the slot with the metal contacts facing the correct direction, as indicated by the device's slot design. Do not force the card. It should slide in smoothly until it clicks into place.
4. **Verify Installation:** Once inserted, the card should be flush or nearly flush with the device's surface.
5. **Power On Device:** Reconnect power and turn on your Korg ToneWorks PXR4. The device should recognize the newly installed SmartMedia card.



Figure 1: An example of a SmartMedia card. Ensure proper orientation when inserting into the device slot.

3. OPERATING INSTRUCTIONS

Once the SmartMedia card is installed, you can use it with your Korg ToneWorks PXR4 for data storage. Refer to your Korg ToneWorks PXR4's user manual for detailed instructions on specific functions such as:

- **Formatting the Card:** It is recommended to format a new SmartMedia card using your PXR4 before initial use. This ensures compatibility and optimal performance.
- **Saving Projects/Data:** Learn how to save your recorded audio tracks, settings, and other project data to the SmartMedia card.
- **Loading Projects/Data:** Instructions on how to load previously saved projects or data from the SmartMedia card back into your PXR4.
- **Deleting Files:** How to manage and delete unwanted files from the card.
- **Transferring Data:** If your PXR4 supports it, instructions for transferring data to or from a computer using the SmartMedia card.

Always ensure that data transfer operations are complete before removing the card or powering off the device to prevent data corruption.

4. MAINTENANCE AND CARE

Proper care will extend the life of your SmartMedia card and protect your data.

- **Handle with Care:** Avoid bending, dropping, or applying excessive force to the card.
- **Keep Clean:** Keep the metal contacts clean and free from dust, dirt, or moisture. Use a soft, dry, lint-free cloth if cleaning is necessary. Do not use liquids or abrasive materials.
- **Storage:** Store the card in a protective case when not in use to prevent physical damage and exposure to static electricity.
- **Temperature and Humidity:** Avoid exposing the card to extreme temperatures, direct sunlight, or high humidity.
- **Static Electricity:** Be mindful of static electricity, which can damage flash memory. Handle the card in an environment free from static discharge.

5. TROUBLESHOOTING

If you encounter issues with your SmartMedia card, consider the following common solutions:

Problem	Possible Cause	Solution
Card not recognized by PXR4	Incorrect insertion, dirty contacts, card not formatted, or card damage.	1. Power off and re-insert the card correctly. 2. Clean contacts with a soft, dry cloth. 3. Try formatting the card (if recognized by another device). 4. Test with another compatible SmartMedia card if available.
Data corruption or errors	Card removed during operation, power loss during write, or card damage.	1. Always ensure operations are complete before removal. 2. Reformat the card (data will be lost). 3. If issues persist, the card may be faulty.
Slow performance	Card fragmentation or nearing end of life.	1. Format the card (data will be lost). 2. If performance remains slow, consider replacing the card.

If these steps do not resolve the issue, please contact parts-quick technical support.

6. SPECIFICATIONS

- **Capacity:** 32MB
- **Flash Memory Type:** SmartMedia
- **Hardware Interface:** SmartMedia card
- **Compatibility:** Korg ToneWorks PXR4 (and other compatible devices)
- **Voltage:** 3.3V
- **Model Number:** 8541639353

7. SUPPORT

For technical assistance or further inquiries regarding your parts-quick 32MB SmartMedia Card, please contact parts-quick Toll Free Technical Support. Refer to the packaging or the official parts-quick website for current contact information.

When contacting support, please have your product model number (8541639353) and details of your Korg ToneWorks PXR4 device readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question