

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Kikkerland](#) /

› Kikkerland Copper String Lights Battery Operated Instruction Manual

Kikkerland LT00

Kikkerland Copper String Lights Battery Operated

Model: LT00

INTRODUCTION

Thank you for choosing Kikkerland Copper String Lights. These battery-operated LED lights are designed to add a warm and decorative glow to your indoor or outdoor spaces. The flexible copper wire allows for versatile placement and creative arrangements. Please read this manual carefully before use to ensure proper setup and operation.



Image: Kikkerland Copper String Lights, showing the product coiled next to its retail packaging. The packaging indicates 'Copper String Lights' and '6ft 1.80m'.

SAFETY INFORMATION

- **Battery Safety:** Use only the specified battery type (2 AA batteries). Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity (+/-). Remove batteries if the product is not used for an extended period. Dispose of used batteries responsibly.
- **LED Lights:** Do not stare directly into the LED lights, as this may cause temporary eye discomfort.
- **Water Resistance:** This product is not water resistant. Avoid direct exposure to water or extreme moisture to prevent damage.
- **Children and Pets:** Keep the product out of reach of small children and pets to prevent accidental ingestion of small parts or batteries.
- **Overheating:** Do not cover the battery pack or lights with flammable materials. Ensure adequate ventilation.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Kikkerland Copper String Lights (Model LT00)
- 1 x Battery Pack (integrated with string lights)

SETUP

1. **Install Batteries:** Locate the battery compartment on the battery pack. Open the cover and insert 2 AA batteries, ensuring correct polarity. Close the battery compartment securely.
2. **Uncoil Lights:** Carefully uncoil the copper string lights. The flexible wire allows for easy shaping and positioning.
3. **Position Lights:** Place the string lights in your desired location. They can be draped over furniture, hung on walls, wrapped around plants, or placed inside decorative containers.



Image: The copper string lights coiled neatly on a rustic wooden surface, demonstrating their flexible nature and warm light output.

OPERATING INSTRUCTIONS

The Kikkerland Copper String Lights are simple to operate:

- Power On:** Locate the switch on the battery pack. Slide the switch to the 'ON' position to illuminate the lights. The lights will display a bright white, twinkling effect.
- Power Off:** To turn off the lights, slide the switch on the battery pack to the 'OFF' position.

MAINTENANCE

- Battery Replacement:** When the lights become dim or stop working, it is time to replace the batteries. Follow the steps in the 'Setup' section to install new AA batteries.
- Cleaning:** To clean the lights, gently wipe them with a soft, dry cloth. Do not use liquid cleaners or immerse the product in water.
- Storage:** When not in use, carefully coil the string lights and store them in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries before long-term storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with fresh AA batteries.
Lights are dim.	Batteries are low.	Replace with fresh AA batteries.
Lights flicker inconsistently.	Loose battery connection or low batteries.	Ensure batteries are seated correctly. Replace with fresh AA batteries if needed.

SPECIFICATIONS

- Model Number:** LT00
- Light Source Type:** LED
- Number of Light Sources:** 20
- Light Color:** Bright White
- Special Feature:** Twinkling
- Power Source:** Battery Powered
- Batteries Required:** 2 AA batteries (not included)
- Voltage:** 3 Volts
- Material Type:** Copper
- Item Length:** 6 Feet (1.8 meters)
- Indoor/Outdoor Usage:** Outdoor (Note: Not water resistant, protect battery pack from moisture)
- Control Method:** Switch on battery pack

WARRANTY AND SUPPORT

Kikkerland products are designed for quality and durability. For specific warranty information or technical support, please visit the official Kikkerland website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Kikkerland Website: www.kikkerland.com

© 2024 Kikkerland Design Inc. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question