

## Bosch BT 150

# Bosch Professional Tripod BT 150 Instruction Manual

Model: BT 150 | Brand: Bosch

## INTRODUCTION

This manual provides essential information for the safe and efficient use of your Bosch Professional Tripod BT 150. Designed for stability and precision, this aluminum tripod is compatible with various Bosch lasers and levels featuring a 1/4-inch thread. Please read these instructions carefully before initial operation and keep them for future reference.

## 1. SETUP

### 1.1 Unfolding the Tripod

1. Place the tripod on a flat, stable surface.
2. Gently spread the tripod legs outwards until they are fully extended and stable.
3. Ensure the leg braces are securely locked into position to prevent accidental collapse.





Image: Bosch BT 150 Tripod in its unfolded state, ready for use.

## 1.2 Adjusting Tripod Height

1. **Leg Extension:** Unlock the clamps on each leg section. Extend the legs to the desired height (between 55 cm and 157 cm). Securely close the clamps to lock the legs in place.
2. **Center Column Adjustment:** Use the crank handle to precisely raise or lower the center column for fine height adjustments.



Image: Hands adjusting the leg clamps to extend the tripod legs.



Image: Hands operating the crank handle to adjust the height of the tripod's center column.

### **1.3 Mounting a Device**

1. The tripod head features a 1/4-inch mounting screw.
2. Attach your laser or level securely to the mounting screw on the tripod head. Ensure it is tightened firmly to prevent movement.



Image: A hand securing a device onto the 1/4-inch mounting screw of the tripod head.

## **2. OPERATING THE TRIPOD**

### **2.1 Leveling the Device**

- The tripod head includes a circular vial (bubble level) for accurate leveling.
- Adjust the tripod legs and/or the center column until the bubble in the circular vial is centered, indicating a level surface for your laser or level.





Image: Bosch BT 150 Tripod with a Bosch laser level mounted, demonstrating its use.

## 2.2 Pan and Tilt Adjustments

- Use the pan handle to smoothly rotate the mounted device horizontally (panning).
- Loosen the tilt knob to adjust the vertical angle of the device (tilting). Tighten the knob to secure the desired angle.

## 3. MAINTENANCE

- **Cleaning:** Wipe the tripod with a soft, damp cloth after each use to remove dust and debris. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the tripod in a dry, clean environment. Collapse the legs and center column fully for compact storage.
- **Inspection:** Regularly inspect all clamps, screws, and moving parts for wear or damage. Ensure all components are functioning correctly before use.

## 4. TROUBLESHOOTING

### 4.1 Center Column Crank Not Adjusting Height

If the crank handle turns but the center column does not adjust, the internal gear may be stripped. This often occurs if the thumb screw (which locks the telescoping pole) is tightened before attempting to adjust the height with the crank. Always loosen the thumb screw before using the crank for height adjustment. If the gear is stripped, replacement parts may not be readily available, and manual adjustment of the pole might be necessary.

## 5. SPECIFICATIONS

Brand	Bosch
Model Name	BT 150 Professional
Item Model Number	0601096B10
Material	Aluminum
Item Weight	2.8 pounds (1.27 kg)
Maximum Weight Capacity	1.27 Kilograms
Minimum Height	55 Centimeters
Maximum Height	157 Centimeters
Compatible Devices	Lasers and Levels with 1/4 Inch thread
Tripod Head Type	Pan Heads
Product Dimensions	23.15 x 4.57 x 4.25 inches

## 6. WARRANTY AND SUPPORT

The Bosch Professional Tripod BT 150 comes with a **3-year warranty** if registered. For detailed warranty information, product support, or service inquiries, please visit the official Bosch website or contact Bosch customer service. For additional information and product registration, please refer to the official Bosch website: [www.bosch-professional.com](http://www.bosch-professional.com)