

## Betty Crocker BC-1544C

# Betty Crocker 5-Quart Slow Cooker with Travel Bag (Model BC-1544C) Instruction Manual

[Overview](#)   [Setup](#)   [Operation](#)   [Introduction](#)   [Maintenance](#)   [Safety Information](#)   [Troubleshooting](#)   [Product](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides important information for the safe and efficient use of your Betty Crocker 5-Quart Slow Cooker with Travel Bag, Model BC-1544C. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

The Betty Crocker slow cooker is designed for convenient meal preparation, offering a 5-quart capacity suitable for various dishes such as roasts, stews, and chili. Its removable crock facilitates easy serving and cleaning, and the included insulated travel bag allows for secure transportation of your cooked meals.

## 2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The removable crock is designed for use only in this appliance. It must never be used on a stovetop or in an oven.
- Always ensure the lid is properly seated during operation.

### 3. PRODUCT OVERVIEW

---

The Betty Crocker 5-Quart Slow Cooker consists of several key components designed for ease of use and durability.

#### Components:

- **Base Unit:** The outer housing that contains the heating element and control knob.
- **Removable Ceramic Crock:** The inner cooking pot where food is placed. This is removable for serving and cleaning.
- **Glass Lid:** A transparent lid with a handle and stainless steel protector rim, allowing you to monitor cooking progress.
- **Control Knob:** Located on the front of the base unit, used to select cooking settings (OFF, LOW, HIGH, KEEP WARM).
- **Power-On Indicator Light:** Illuminates when the slow cooker is powered on.
- **Insulated Travel Bag:** Designed to transport the slow cooker and its contents, featuring a lid strap for secure carrying.

## 5.0 quart capacity



Image 1: The Betty Crocker 5-Quart Slow Cooker with its removable crock and glass lid, shown in a kitchen setting. This image highlights the appliance's 5.0 quart capacity and its metallic red exterior.



Image 2: A detailed view of the Betty Crocker 5-Quart Slow Cooker, illustrating its dimensions. The appliance measures approximately 10 inches in width, 5.71 inches in depth, and 7.86 inches in height.

## 4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels from the slow cooker.

2. **Initial Cleaning:** Before first use, wash the removable ceramic crock and glass lid in warm, soapy water. Rinse thoroughly and dry completely. The base unit can be wiped clean with a damp cloth. Do not immerse the base unit in water.
3. **Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Assembly:** Place the clean ceramic crock into the base unit.

## 5. OPERATING INSTRUCTIONS

---

Follow these steps for proper operation of your slow cooker:

1. **Prepare Food:** Place your ingredients into the removable ceramic crock. Do not overfill; leave at least one inch of space from the top rim of the crock to allow for steam and expansion.
2. **Secure Lid:** Place the glass lid onto the ceramic crock, ensuring it is seated properly.
3. **Connect Power:** Plug the power cord into a standard 220V electrical outlet. The power-on indicator light will illuminate.
4. **Select Setting:** Turn the control knob to your desired cooking setting:
  - **LOW:** For slow cooking over a longer period.
  - **HIGH:** For faster cooking.
  - **KEEP WARM:** To maintain food temperature after cooking is complete. This setting is not for cooking raw food.
5. **Cooking:** Allow the food to cook for the recommended time for your recipe. Avoid lifting the lid frequently, as this releases heat and can extend cooking times.
6. **After Cooking:** Once cooking is complete, turn the control knob to the "OFF" position and unplug the slow cooker from the outlet.
7. **Serving:** Carefully remove the lid, using oven mitts as steam will be hot. The removable crock can be taken out of the base unit for serving.
8. **Using the Travel Bag:** To transport your slow cooker, ensure the lid is securely fastened (a lid strap is included for this purpose). Place the entire slow cooker (with the crock inside) into the insulated travel bag. The bag helps maintain food temperature during transit.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your slow cooker.

- **Before Cleaning:** Always unplug the slow cooker and allow it to cool completely before cleaning.
- **Removable Crock and Lid:** The ceramic crock and glass lid are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. For stubborn food residue, soak the crock in warm water before cleaning. Avoid using abrasive cleaners or scouring pads that could scratch the surface.
- **Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the base unit, cord, or plug in water or any other liquid.
- **Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker with the lid inverted on the crock to prevent moisture buildup and odors. Store in a cool, dry place.

## 7. TROUBLESHOOTING

---

If you encounter issues with your slow cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Slow cooker does not turn on.	Not plugged in; power outlet malfunction; control knob not set.	Ensure the unit is securely plugged into a working outlet. Check the circuit breaker. Turn the control knob to a cooking setting (LOW, HIGH, or KEEP WARM).
Food is not cooking properly.	Lid not sealed; incorrect setting; insufficient cooking time; too much liquid.	Ensure the lid is properly sealed. Verify the correct temperature setting for your recipe. Allow adequate cooking time. Reduce liquid if recipe calls for less. Avoid lifting the lid frequently.
Food is sticking to the crock.	Lack of liquid; cooking at too high a temperature for too long.	Ensure there is sufficient liquid in the crock. Consider using a slow cooker liner for easier cleanup. Adjust cooking time or temperature if food consistently sticks.
Exterior of the unit is hot.	Normal operation.	This is normal. Always use oven mitts or handles when moving the unit. Do not touch hot surfaces.

## 8. SPECIFICATIONS

- **Brand:** Betty Crocker
- **Model Number:** BC-1544C
- **Capacity:** 5 Quarts
- **Color:** Red
- **Material:** Steel (exterior), Ceramic (crock)
- **Product Dimensions:** 5.71"D x 10"W x 7.86"H
- **Item Weight:** 11.2 Pounds
- **Voltage:** 220V
- **Control Type:** Mechanical Knob
- **Number of Settings:** 3 (High, Low, Keep Warm)
- **Dishwasher Safe Parts:** Removable Crock, Glass Lid

## 9. WARRANTY AND SUPPORT

This Betty Crocker appliance includes a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or general inquiries, please refer to the contact information provided on the Betty Crocker official website or your purchase receipt. Please have your model number (BC-1544C) and proof of purchase available when contacting customer service.

