

[Manuals.plus](#) /

› [SIMMONS](#) /

› Simmons 4MP Whitetail Trail Camera w/Night Vision User Manual

SIMMONS 119234C

Simmons 4MP Whitetail Trail Camera w/Night Vision

User Manual

INTRODUCTION

The Simmons 4MP Whitetail Trail Camera is engineered to be a dependable tool for wildlife observation and security. It combines an astounding seven months of battery life with a quick trigger speed and up to 32GB of memory capacity, offering a blend of reliability and value. This camera is equipped with a motion-activated sensor that detects movement up to 45 feet away, and its infrared night vision LEDs capture clear images from the same distance, remaining virtually invisible to game.

Key Features

- IR LED night vision for clear nighttime captures.
- Adjustable image resolution from 3 to 7 MP.
- Dedicated video mode for capturing motion.
- Rugged and field-ready design for outdoor use.

PRODUCT OVERVIEW



Figure 1: Front view of the Simmons 4MP Whitetail Trail Camera. The camera features a dark grey, rugged casing. At the top, a dark rectangular motion sensor is visible. Below it, the main camera lens is centrally located. The lower half of the camera front houses a clear panel revealing 16 infrared LEDs arranged in a grid pattern, essential for night vision. The Simmons logo is embossed below the LEDs.

SETUP

Battery Installation

1. Locate the battery compartment on the camera.
2. Open the latch or cover to access the compartment.
3. Insert the required number of AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment securely to ensure water resistance.

Memory Card Insertion

1. Identify the SD card slot, typically located near the battery compartment or on the side.
2. Insert a compatible SD card (up to 32GB, not included) into the slot until it clicks into place.
3. Ensure the card is inserted correctly to avoid damage.

Mounting the Camera

1. Choose a suitable location, such as a tree or post, that provides a clear view of the desired area.
2. Use the included mounting strap or a compatible mounting accessory to secure the camera firmly.
3. Adjust the camera's angle to optimize the field of view and motion detection range.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on, slide the power switch to the 'ON' position. The indicator light will briefly illuminate.
- To power off, slide the power switch to the 'OFF' position.

Mode Selection

The camera typically features different modes (e.g., Photo, Video, Photo+Video). Use the mode switch or buttons to select your desired capture mode.

Setting Date and Time

Refer to the camera's internal menu (if available) to set the correct date and time. This ensures accurate timestamps on your captured images and videos.

Capturing Images/Videos

Once powered on and in the desired mode, the camera will automatically capture images or videos when motion is detected within its sensor range. Ensure the area in front of the camera is clear of obstructions.

MAINTENANCE

Cleaning

- Gently wipe the camera lens and motion sensor with a soft, lint-free cloth to remove dust or smudges.
- Do not use abrasive cleaners or solvents, as they may damage the camera's surface or components.

Battery Replacement

Replace batteries when the low battery indicator appears or when performance degrades. Always replace all batteries at once with new ones of the same type.

Storage

When not in use for extended periods, remove the batteries and store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Cause	Solution
Camera not powering on	Dead or incorrectly inserted batteries	Replace batteries; check polarity.
No images/videos captured	Full or faulty SD card; incorrect mode; no motion detected	Format/replace SD card; check mode settings; verify motion sensor range.
Poor image quality at night	Low batteries; obstructed IR LEDs	Replace batteries; clean IR LED panel.
False triggers	Moving branches; heat sources	Adjust camera position; clear obstructions.

SPECIFICATIONS

Feature	Detail
Product Dimensions	22.86 x 10.16 x 22.86 cm
Item Weight	907 g
Manufacturer Reference	119234C
Brand	SIMMONS
First Available	August 18, 2016
Image Resolution	3 to 7 MP
Night Vision	IR LED (up to 45 feet)
Motion Sensor Range	Up to 45 feet
Battery Life	Up to 7 months (approximate)
Memory Support	Up to 32GB SD card

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Simmons website. If you encounter any issues or require technical assistance, please contact Simmons customer support through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may visit the [SIMMONS Store on Amazon](#).