

## Hamilton Beach 64654

# Hamilton Beach Classic Stand and Hand Mixer

**Brand:** Hamilton Beach

**Model:** 64654

## 1. INTRODUCTION

---

The Hamilton Beach® Classic Stand and Hand Mixer is a versatile kitchen appliance designed to simplify your mixing tasks. This innovative mixer functions as both a robust stand mixer for heavier doughs and batters, and easily converts into a portable hand mixer for quick, lighter jobs. It features a powerful 290-watt peak power motor, 6 speeds with a QuickBurst™ button, and a unique Shift & Stir™ lever for thorough mixing. The included 4-quart stainless steel bowl and multiple attachments make it an essential tool for any home baker.

## 2. IMPORTANT SAFEGUARDS

---

To reduce the risk of fire, electric shock, and/or injury, basic safety precautions should always be followed when using electrical appliances:

- Read all instructions before operating the mixer.
- Do not immerse the motor base, cord, or plug in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.

## 3. PRODUCT COMPONENTS

---

Your Hamilton Beach Classic Stand and Hand Mixer comes with the following components:

- Main Mixer Unit (detachable hand mixer and stand base)
- 4-Quart Stainless Steel Mixing Bowl
- 2 Traditional Beaters
- 2 Dough Hooks
- 1 Whisk



Figure 3.1: Overview of the Hamilton Beach Classic Stand and Hand Mixer with its included accessories.



## Thorough side-to-side mixing

As you mix, the Shift + Stir™ lever lets you move the bowl from side-to-side to provide thorough mixing for all ingredients

*Figure 3.2: The five versatile attachments for various mixing needs.*

### 4. SETUP AND ASSEMBLY

---

Before first use, wash the mixing bowl and all attachments in warm, soapy water, then rinse and dry thoroughly. The bowl and attachments are dishwasher safe.

#### 4.1 Attaching the Mixing Bowl

1. Place the stand mixer base on a stable, flat surface.
2. Ensure the hand mixer unit is securely locked into the stand base.
3. Place the 4-quart stainless steel bowl onto the turntable of the stand base. Ensure it sits flat and is centered.

#### 4.2 Attaching and Removing Beaters/Attachments

1. Ensure the mixer is unplugged from the power outlet.
2. Press the release button located at the back of the hand mixer unit to tilt the mixer head upwards.
3. Insert the desired attachments (beaters, dough hooks, or whisk) into the openings on the underside of the

hand mixer unit. Push firmly until they click into place.

4. To remove attachments, ensure the mixer head is tilted upwards. Press the eject button (usually located near the speed control) and pull the attachments out.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Using as a Stand Mixer

For hands-free mixing, use the unit in its stand mixer configuration. This is ideal for larger batches or thicker mixtures like cookie dough and bread dough.

1. Ensure the hand mixer unit is securely attached to the stand base and the mixing bowl is in place with attachments inserted.
2. Add your ingredients to the 4-quart stainless steel bowl.
3. Plug the mixer into a standard electrical outlet.
4. Select the desired speed using the speed control dial (1-6). Start with a lower speed and gradually increase as needed.
5. Utilize the **QuickBurst™** button for an extra surge of power at any speed, useful for breaking up clumps or achieving a smoother consistency.
6. Use the **Shift & Stir™** lever located on the base to move the bowl from side-to-side during mixing. This ensures all ingredients are thoroughly incorporated, reducing the need to scrape the sides manually.
7. When finished, turn the speed dial to "0" and unplug the mixer.



## Mixing versatility



With 2 traditional beaters,  
2 dough hooks, whisk and  
4 qt. stainless steel bowl

*Figure 5.1: The Shift & Stir™ lever allows for thorough side-to-side mixing.*



Includes stand mixers, hand mixers and combo hand/stand mixers. Excludes mixer attachments.

*Figure 5.2: The 6-speed control and QuickBurst™ button for precise mixing.*

## 5.2 Using as a Hand Mixer

For smaller tasks or when you need to move around the kitchen, the hand mixer detaches from the stand base.

1. Ensure the mixer is unplugged.
2. Press the release button on the side of the hand mixer unit (marked with a mixer icon) to detach it from the stand base.
3. You can now use the hand mixer independently with any suitable mixing bowl.
4. To reattach, align the hand mixer with the stand base and push down firmly until it clicks securely into place.

# 2 products in 1



Hand mixer easily unlocks from the stand mixer base for quick mixing jobs

Figure 5.3: The mixer's 2-in-1 design allows for both stand and handheld use.

## 5.3 Official Product Video: A Closer Look

Your browser does not support the video tag.

Video 5.1: This official video provides a detailed overview of the Hamilton Beach Classic Stand and Hand Mixer, demonstrating its features and versatility.

## 6. CARE AND CLEANING

---

Proper cleaning and maintenance will ensure the longevity and optimal performance of your mixer.

- Always unplug the mixer before cleaning.
- **Mixing Bowl and Attachments:** The 4-quart stainless steel bowl, traditional beaters, dough hooks, and whisk are all dishwasher safe for easy cleanup. Alternatively, wash them in warm, soapy water, rinse, and dry thoroughly.
- **Motor Base and Stand:** Wipe the exterior of the hand mixer unit and the stand base with a damp cloth. Do not immerse the motor base or stand in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surfaces.
- Store the mixer and its attachments in a dry place when not in use.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your mixer, please refer to the following common problems and solutions:

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Mixer does not turn on.	Not plugged in; power outlet not working; unit not properly assembled.	Ensure the mixer is securely plugged into a working outlet. Check if the hand mixer unit is correctly locked into the stand base.
Attachments are difficult to insert or remove.	Attachments not aligned correctly; eject button not fully pressed.	Ensure attachments are aligned with the correct holes. Press the eject button firmly when removing.
Ingredients not mixing thoroughly.	Bowl not moving; insufficient mixing time; incorrect speed.	Use the Shift & Stir™ lever to move the bowl. Increase mixing time or adjust speed as needed.

## 8. PRODUCT SPECIFICATIONS

---

<b>Feature</b>	<b>Specification</b>
Brand	Hamilton Beach
Model Name	Classic Stand and Hand Mixer
Model Number	64654
Color	Red
Power	290 Watts Peak Power
Capacity	4 Quarts
Speeds	6 Speeds with QuickBurst™
Bowl Material	Stainless Steel
Product Dimensions	8.5"D x 13.25"W x 14.25"H
Item Weight	5.1 Pounds
Dishwasher Safe Parts	Bowl and Attachments



## Classic Stand Mixer 6 Speeds

Figure 8.1: Key dimensions of the Classic Stand Mixer.

### 9. WARRANTY AND SUPPORT

---

#### 9.1 Limited Warranty

This Hamilton Beach product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty extends only to the original consumer purchaser and is not transferable. It does not cover normal wear and tear, commercial use, or damage resulting from accident, misuse, abuse, improper installation or operation, or unauthorized repair.

#### 9.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Hamilton Beach Customer Service:

- **Online:** Visit the official Hamilton Beach website for FAQs and support resources.

- **Phone:** Refer to your product packaging or the official website for the most current customer service phone number.
- **User Guide:** A detailed user guide is available for download: [Download User Guide \(PDF\)](#)