

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Nixplay](#) /
- › [Nixplay 8-inch Smart Digital Photo Frame \(Model W08K\) User Manual](#)

Nixplay W08K

Nixplay 8-inch Smart Digital Photo Frame (Model W08K) User Manual

Your comprehensive guide to setting up, operating, and maintaining your Nixplay Smart Digital Photo Frame.

INTRODUCTION

Welcome to the Nixplay Smart Digital Photo Frame. This device is designed to provide an ultimate photo and video sharing experience, allowing you to instantly display cherished memories from anywhere in the world via Wi-Fi. It features an 8-inch Hi-Res 1028x768 pixel IPS Display with wide viewing angles, encased in a slim, elegant black frame. This manual will guide you through the process of setting up your frame, managing your content, and troubleshooting common issues.



Image: Front and back view of the Nixplay 8-inch Smart Digital Photo Frame, showcasing its sleek design and stand.

SETUP

1. Unboxing and Initial Power On

- Carefully remove all components from the packaging: the Nixplay frame, power adapter, and remote control.
- Connect the power adapter to the frame's power port and plug it into a wall outlet. The frame will automatically power on.
- Follow the on-screen prompts to select your preferred language.

2. Connecting to Wi-Fi

- The frame will automatically scan for available Wi-Fi networks.
- Select your Wi-Fi network from the list.
- Enter your Wi-Fi password using the on-screen keyboard and the remote control.
- Confirm the connection. Once connected, the frame will display a confirmation message.

3. Nixplay App Installation and Account Creation

- Download the Nixplay App from the Apple App Store (for iPhone) or Google Play Store (for

Android).

- Open the app and create a new Nixplay account, or log in if you already have one.
- In the app, select 'Add a Frame' and follow the instructions to link your frame to your account. This typically involves entering a code displayed on your frame.

Share & Connect From Anywhere in the World

Have full control of your frame from your smartphone with the Nixplay app.

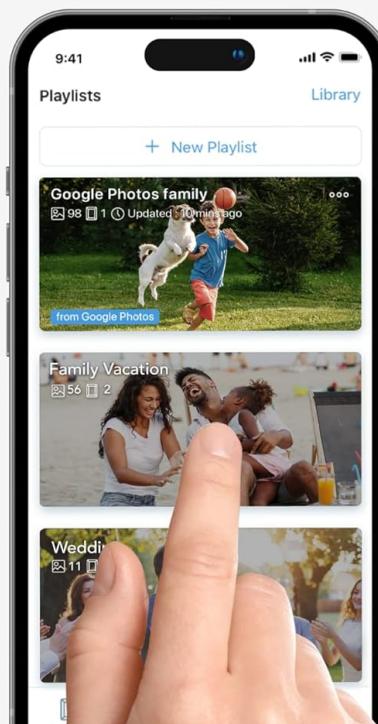


Image: A smartphone screen displaying the Nixplay app interface, illustrating how users can manage their frame and content from anywhere.

OPERATING YOUR NIXPLAY FRAME

1. Uploading Photos and Videos

- **Via Nixplay App:** The easiest way to upload. Select photos/videos from your device's gallery and send them directly to your frame or a specific playlist.
- **Via Email:** Each frame has a unique email address. Send photos and short videos directly to your frame's email address.
- **From Social Media/Cloud Services:** Link your Nixplay account to services like Facebook, Instagram, Dropbox, Flickr, and Picasa to import photos directly.
- **USB/SD Card Playback:** The frame supports High Definition 720p Video Playback via

USB/SD/SDHC Card. Insert a card into the designated slot to display content.

Preload Photos & Videos from wherever you are



Nixplay's Content Preload feature lets you add photos, videos & messages to the frame (without unboxing) so your gift is preloaded with love!

Image: A Nixplay frame showing a preloaded photo and message, demonstrating the ability to add content remotely before gifting or use.

2. Creating and Managing Playlists

- In the Nixplay App or web interface, you can create multiple playlists to organize your photos and videos.
- Assign specific photos or videos to different playlists.
- You can choose which playlists are active on your frame at any given time.
- Share playlists with other Nixplay frames or invite friends and family to contribute to your playlists.

3. Frame Settings and Customization

- **Display Settings:** Adjust brightness, transition effects between photos, and display duration.
- **Sleep Mode:** Schedule the frame to turn on and off automatically at specific times.
- **AI Face Framing & Rotating View:** The frame can intelligently detect faces and adjust the display to keep them centered. It also supports automatic rotation for portrait or landscape orientation.

Smart Display with A.I. Face Framing & Rotating View

Enjoy multiple angles, portrait or landscape, and let our AI technology put faces center frame.



Image: A visual representation of the Nixplay frame's AI Face Framing and Rotating View features, showing how it intelligently adjusts content.

MAINTENANCE

- Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and frame. Avoid abrasive cleaners or sprays directly on the screen.
- Software Updates:** Ensure your frame is connected to Wi-Fi to receive automatic firmware updates, which provide new features and performance improvements.
- Placement:** Place the frame on a stable surface or mount it securely on a wall (VESA compatible). Avoid direct sunlight or extreme temperatures.

TROUBLESHOOTING

| Issue | Possible Solution |
|-------|-------------------|
|-------|-------------------|

| Issue | Possible Solution |
|-----------------------------------|---|
| Frame not connecting to Wi-Fi | Ensure your Wi-Fi password is correct. Check if your router is working. Try restarting both the frame and your router. Ensure the frame is within Wi-Fi range. |
| Photos not appearing on the frame | Verify that the frame is linked to your Nixplay account. Check if photos are uploaded to an active playlist. Ensure the frame has a stable internet connection. |
| Frame is frozen or unresponsive | Unplug the power adapter from the frame, wait 10 seconds, then plug it back in to perform a restart. If the issue persists, contact customer support. |
| Remote control not working | Ensure there are no obstructions between the remote and the frame. Check and replace the remote's battery if necessary. |

SPECIFICATIONS

| Feature | Detail |
|--------------------|--|
| Model Number | W08K |
| Screen Size | 8 Inches |
| Resolution | 1028x768 pixels (720p HD Video Playback) |
| Display Type | IPS Display with wide viewing angles |
| Connectivity | Wi-Fi |
| Storage | Nixplay online cloud storage (10GB free, Plus Account options available) |
| Media Support | USB/SD/SDHC Card for photo and video playback |
| Mounting | Wall mountable (VESA compatible) |
| Color | Black |
| Product Dimensions | 12.5 x 8.23 x 2.24 inches |
| Item Weight | 11.3 ounces |

Sophisticated Design with Built-in Speakers

Ideal for video playback.



Image: A detailed view of the back of the Nixplay frame, highlighting its sophisticated design and integrated speakers for video playback.

WARRANTY AND SUPPORT

Nixplay products are designed for reliability and performance. For specific warranty details regarding your Nixplay Smart Digital Photo Frame (Model W08K), please refer to the warranty card included in your product packaging or visit the official Nixplay support website. Nixplay offers customer support to assist with any questions or issues you may encounter.

For assistance, you can typically find support resources, FAQs, and contact information on the Nixplay website. Ensure you have your product model number (W08K) and purchase details ready when contacting support.

Private Network with Secure Storage

Your content is safely stored on secure, encrypted servers.



CCPA
Compliant



GDPR
Compliant



Image: The Nixplay frame alongside icons indicating its private network with secure storage, emphasizing compliance with CCPA and GDPR for data protection.


© 2024 Nixplay. All rights reserved.

Related Documents - W08K

How to be an
Expert Nixplay
A Brief Guide to Your Nixplay

[Nixplay Smart Photo Frame: Quick Start Guide and Setup](#)

Comprehensive guide to setting up and using your Nixplay Smart Photo Frame, including remote control functions, wall mounting, app connection, and app features.
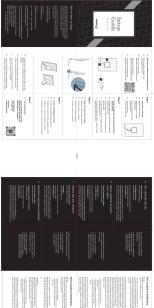
| | |
|---|---|
|  | <p>Nixplay Smart Photo Frame Setup Guide A comprehensive setup guide for the Nixplay Smart Photo Frame, covering installation, account creation, and compliance information in multiple languages.</p> |
|  | <p>Nixplay W15F Wifi Digital Photo Frame User Guide A comprehensive guide to setting up, using, and troubleshooting your Nixplay W15F Wifi Digital Photo Frame. Learn about the remote control, Wi-Fi connection, account creation, wall mounting, and photo sharing features.</p> |
|  | <p>Nixplay W13D-06 Wifi Digital Photo Frame User Guide A comprehensive guide to setting up, using, and mounting your Nixplay W13D-06 Wifi Digital Photo Frame, including remote control operation and account creation.</p> |
|  | <p>Nixplay Iris WiFi Cloud Frame User Manual Comprehensive user manual for the Nixplay Iris WiFi Cloud Frame, covering setup, photo management, playlists, settings, and important safety information.</p> |
|  | <p>Nixplay Cloud Frame User Manual: Setup, Features, and Operation Comprehensive user manual for the Nixplay Cloud Frame, guiding users through setup, connecting to WiFi, managing photos and slideshows via Nixplay account, utilizing USB/SD card input, adjusting frame settings, and important safety information.</p> |