

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Transcend](#) /

› [Transcend 8GB SDHC Class 4 Flash Card User Manual](#)

### Transcend FINEPIX JX200-KSD48G

# Transcend 8GB SDHC Class 4 Flash Card User Manual

Model: FINEPIX JX200-KSD48G

## INTRODUCTION

This manual provides essential instructions for the proper use and care of your Transcend 8GB SDHC Class 4 Flash Card. This high-capacity memory card is designed to provide reliable storage for digital devices, such as cameras, supporting the SDHC standard. Please read this manual thoroughly before using the product to ensure optimal performance and data integrity.



Image: Transcend 8GB SDHC Class 4 Flash Card. This image displays the front view of the memory card, typically showing the brand name "Transcend", the capacity "8GB", and the speed class "Class 4" along with the SDHC logo.

## SETUP

### 1. Inserting the Memory Card:

- Locate the memory card slot on your compatible device (e.g., digital camera, card reader). Refer to your device's manual for the exact location.
- Orient the Transcend SDHC card correctly, ensuring the metal contacts face the correct direction as indicated by your device.
- Gently insert the card into the slot until it clicks into place. Do not force the card, as this may cause damage to both the card and the device.

### 2. Formatting the Memory Card (Optional, but Recommended for First Use):

- Formatting prepares the card for use with your specific device and can resolve potential compatibility issues.
- Warning:** Formatting will erase all data on the card. Ensure any important data is backed up before proceeding.
- Access the formatting option through your device's menu settings. Typically found under "Setup," "Tools," or "System Settings."

- Select the Transcend SDHC card and confirm the format operation.

## OPERATING INSTRUCTIONS

---

### 1. Saving Data:

- Once the card is inserted and recognized, your device will automatically save new photos, videos, or other files to the card.
- Monitor the available storage space on your device to avoid running out of capacity.

### 2. Accessing Data:

- To view or transfer data, connect your device to a computer using a USB cable, or insert the SDHC card into a compatible card reader connected to your computer.
- The card will appear as a removable drive. You can then copy files to your computer or other storage devices.

### 3. Removing the Memory Card Safely:

- Before removing the card from a device or computer, ensure all data transfer operations are complete.
- For computers, always use the "Safely Remove Hardware" or "Eject" option to prevent data corruption.
- For cameras or other devices, power off the device before removing the card, or follow the device's specific instructions for safe removal.
- Gently press the card inward until it unlatches, then pull it out.

## MAINTENANCE

---

### • Proper Storage:

Store the memory card in its protective case when not in use to prevent dust, dirt, and static electricity from affecting the contacts.

### • Physical Protection:

Avoid bending, dropping, or exposing the card to extreme temperatures or direct sunlight. While the card features a **waterproof** design, prolonged submersion or exposure to corrosive liquids should be avoided.

### • Data Backup:

Regularly back up important data from your memory card to a computer or other storage solution to prevent data loss due to unforeseen circumstances.

### • Cleaning:

If necessary, gently wipe the metal contacts with a clean, dry, lint-free cloth. Do not use abrasive materials or liquid cleaners.

## TROUBLESHOOTING

---

### • Card Not Recognized:

- Ensure the card is fully and correctly inserted into the device or card reader.
- Restart your device or computer.

- Try the card in a different compatible device or card reader to determine if the issue is with the card or the device.
- Check if the card is locked (small switch on the side). Unlock it if necessary.
- If the card was previously used in another device, it might need to be formatted for the current device (refer to "Formatting the Memory Card" in the Setup section).

- Data Transfer Issues / Slow Performance:**

- Ensure your card reader and USB port support the necessary speed for data transfer.
- Avoid running multiple demanding applications during data transfer.
- Check for sufficient free space on both the memory card and the destination drive.
- The card's speed class (Class 4) indicates a minimum write speed. Performance may vary based on the host device.

- Error Messages:**

If you encounter specific error messages, consult your device's user manual or the manufacturer's support website for detailed explanations and solutions.

## SPECIFICATIONS

<b>Brand</b>	Transcend
<b>Model Number</b>	FINEPIX JX200-KSD48G
<b>Memory Storage Capacity</b>	8 GB
<b>Flash Memory Type</b>	SDHC (Secure Digital High Capacity)
<b>Secure Digital Association Speed Class</b>	Class 4
<b>Hardware Interface</b>	SDHC, Secure Digital Card
<b>Compatible Devices</b>	Camera
<b>Special Feature</b>	Water Proof
<b>Product Dimensions</b>	0.94 x 0.08 x 1.26 inches
<b>Item Weight</b>	0.071 ounces (2 Grams)
<b>UPC</b>	876544800440

## WARRANTY INFORMATION

For detailed warranty information regarding your Transcend 8GB SDHC Class 4 Flash Card, please refer to the official Transcend website or the warranty card included with your purchase. Warranty terms and conditions may vary by region and product type.

You can typically find warranty details by visiting the [Transcend official support page](#).

## CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Transcend

customer support. Support resources, including FAQs, drivers, and contact information, are available on the official Transcend website.

Visit the [Transcend Support Center](#) for comprehensive assistance.

© 2026 Transcend. All rights reserved.