

[Manuals.plus](#) /

> [Lenoxx](#) /

> Lenoxx Sound CD-90 Portable CD Player User Manual

Lenoxx CD-90

Lenoxx Sound CD-90 Portable CD Player User Manual

Model: CD-90

INTRODUCTION

Thank you for purchasing the Lenoxx Sound CD-90 Portable CD Player. This device is designed to provide high-quality audio playback from your compact discs, featuring anti-skip protection for uninterrupted listening and a bass boost function for enhanced sound. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience.

SAFETY INFORMATION

- Do not expose the unit to rain or moisture.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Clean only with a dry cloth.
- Do not open the casing; refer all servicing to qualified service personnel.
- Dispose of batteries properly, following local regulations.

PACKAGE CONTENTS

Please check that all items are present:

- Lenoxx Sound CD-90 Portable CD Player
- Stereo Earbuds
- AC Power Adapter
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the controls and features of your CD player.

Controls and Functions:

- **PLAY/PAUSE (▶/⏸) Button:** Starts or pauses CD playback.
- **STOP (■) Button:** Stops CD playback.
- **SKIP/SEARCH (◀◀ / ▶▶) Buttons:** Skips to the previous/next track. Hold to fast forward/rewind within a track.
- **MODE Button:** Selects playback modes (Repeat 1, Repeat All, Random).
- **PROG (Program) Button:** Programs tracks for custom playback order.
- **BASS BOOST (BBS) Switch:** Activates or deactivates bass enhancement.
- **VOLUME Control:** Adjusts the audio output level.
- **DC IN 4.5V Jack:** Connects the AC power adapter.
- **PHONES Jack:** Connects headphones.
- **OPEN Button:** Opens the CD compartment lid.
- **LCD Display:** Shows track number, playback time, and mode indicators.

Note: No relevant product images were found in the provided data that accurately depict the Lenoxx Sound CD-90 Portable CD Player. Please refer to the product packaging or official product page for visual references.

SETUP

1. Powering the Device

The CD-90 can be powered by either an AC adapter or batteries.

- **AC Power:** Insert the small plug of the supplied AC power adapter into the DC IN 4.5V jack on the unit. Plug the other end of the adapter into a standard AC wall outlet.
- **Battery Power:** Open the battery compartment cover on the bottom of the unit. Insert 2 x 'AA' size batteries (not included), ensuring correct polarity (+/-). Close the battery compartment cover securely.

2. Inserting a CD

1. Press the **OPEN** button to open the CD compartment lid.
2. Carefully place a CD onto the center spindle with the label side facing up.
3. Gently close the CD compartment lid until it clicks shut.

3. Connecting Headphones

Plug your headphones into the **PHONES** jack on the side of the unit. Adjust the volume to a comfortable listening level before placing headphones on your ears.

OPERATING

1. Basic CD Playback

1. Ensure a CD is inserted and the unit is powered on.
2. Press the **PLAY/PAUSE (▶/⏸)** button to start playback. The track number and elapsed time will appear on the LCD display.
3. To pause playback, press the **PLAY/PAUSE (▶/⏸)** button again. Press it once more to resume.
4. To stop playback, press the **STOP (■)** button.
5. Adjust the **VOLUME** control to your desired listening level.

2. Skipping Tracks

- During playback, press the **SKIP/SEARCH** (▶▶) button once to skip to the next track.
- Press the **SKIP/SEARCH** (◀◀) button once to return to the beginning of the current track. Press it again to skip to the previous track.

3. Fast Forward/Rewind

During playback, press and hold the **SKIP/SEARCH** (▶▶) button to fast forward through the current track. Press and hold the **SKIP/SEARCH** (◀◀) button to rewind.

4. Anti-Skip Protection

The CD-90 features an electronic anti-skip system that buffers audio data to prevent interruptions during minor shocks or vibrations. This function is automatically active during playback.

5. Bass Boost Function (BBS)

Slide the **BASS BOOST (BBS)** switch to the 'ON' position to enhance low-frequency audio for a richer sound. Slide it to 'OFF' to disable this feature.

6. Playback Modes (MODE Button)

Press the **MODE** button repeatedly during playback to cycle through the following options:

- **Repeat 1:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the CD.
- **Random:** Plays tracks in a random order.
- **Intro:** Plays the first few seconds of each track (if available).
- **Normal Play:** Disables all special playback modes.

7. Programmed Playback (PROG Button)

1. In STOP mode, press the **PROG** button. The LCD will show 'P01'.
2. Use the **SKIP/SEARCH** (◀◀ / ▶▶) buttons to select the first track you wish to program.
3. Press **PROG** again to confirm the selection. The display will show 'P02'.
4. Repeat steps 2 and 3 to program up to 20 tracks.
5. After programming, press **PLAY/PAUSE** (▶/--) to start programmed playback.
6. To clear the program, press the **STOP** (■) button twice.

MAINTENANCE

1. Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the CD lens, use a specialized CD lens cleaning kit only when necessary, following the kit's instructions.

2. CD Care

- Handle CDs by their edges to avoid fingerprints on the playing surface.
- Store CDs in their cases when not in use to prevent scratches and dust accumulation.
- Clean dirty CDs with a soft, lint-free cloth, wiping gently from the center outwards.

3. Battery Care

If the unit will not be used for an extended period, remove the batteries to prevent leakage and damage to the unit.

4. Storage

Store the CD player in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected properly; Batteries are dead or inserted incorrectly.	Check AC adapter connection; Replace batteries or ensure correct polarity.
CD does not play	CD inserted incorrectly; CD is dirty or scratched; CD compartment lid not closed; Unit in STOP mode.	Insert CD with label side up; Clean or replace CD; Close lid firmly; Press PLAY.
Skipping or distorted sound	CD is dirty or scratched; Unit is subject to excessive vibration; CD lens is dirty.	Clean or replace CD; Place unit on a stable surface; Clean CD lens with a specialized kit.
No sound from headphones	Headphones not plugged in fully; Volume too low; Headphones are faulty.	Ensure headphones are fully inserted; Increase volume; Test with another pair of headphones.

SPECIFICATIONS

- **Model:** CD-90
- **Power Source:** DC 4.5V (AC adapter) or 2 x 'AA' batteries
- **Supported Disc Formats:** CD, CD-R, CD-RW (MP3 format not explicitly supported by product title, assuming standard audio CDs)
- **Anti-Skip Protection:** Electronic Skip Protection
- **Audio Output:** 3.5mm Headphone Jack
- **Features:** Bass Boost, Program Play, Repeat Play, Random Play

WARRANTY AND SUPPORT

Lennox Sound products are manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship for a period of one year from the original date of purchase. This warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

For technical support or warranty claims, please contact Lennox Sound customer service. Keep your proof of purchase for warranty validation.

Contact information (e.g., phone number, website) typically found on product packaging or official brand website.

