

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fuji Discovery 1000 Zoom 35mm Compact Camera w/Date User Manual

Fujifilm Discovery 1000 ZOOM Date

Fuji Discovery 1000 Zoom 35mm Compact Camera w/Date User Manual

Model: Discovery 1000 ZOOM Date | Brand: Fujifilm

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Fuji Discovery 1000 Zoom 35mm Compact Camera w/Date. The Discovery 1000 Zoom Date is a point and shoot 35mm film camera featuring a 35-80mm Fujinon zoom lens. Its LCD screen displays critical information such as battery status, frame count, and self-timer mode.



Figure 1.1: Front view of the Fuji Discovery 1000 Zoom 35mm Compact Camera w/Date, highlighting the lens, flash, and control labels.

2. WHAT'S IN THE BOX

Upon opening your product package, please ensure all items are present:

- Fuji Discovery 1000 Zoom 35mm Compact Camera Body Only

Note: Film and batteries are not included and must be purchased separately.

3. KEY FEATURES

The Fuji Discovery 1000 Zoom Date camera offers several advanced features for enhanced photography:

- **35 - 80 mm Power Zoom Lens:** Provides versatile focal lengths for various shooting situations, from wide-angle to telephoto.
- **Red Eye Reduction Capability:** Minimizes the red-eye effect often seen in flash photography.
- **Drop in Loading:** Simplifies the film loading process for quick and easy setup.
- **Multi Beam Auto Focusing:** Ensures sharp and accurate focus across different subjects and lighting

conditions.

- **Panorama Photography Capability:** Allows for capturing wide scenic shots.

4. SETUP

4.1. Installing Batteries

1. Locate the battery compartment cover on the bottom or side of the camera.
2. Slide or unlatch the cover to open it.
3. Insert the required batteries (typically 2x AA or 1x CR123A, refer to the compartment label) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.

4.2. Loading Film

1. Open the camera back cover by sliding the latch on the side.
2. Place a new 35mm film cartridge into the film chamber, ensuring the film leader points towards the take-up spool.
3. Extend the film leader slightly and align it with the film take-up indicator.
4. Close the camera back cover firmly until it latches. The camera will automatically advance the film to the first frame. The frame counter on the LCD will display '1'.

5. OPERATING INSTRUCTIONS

5.1. Turning the Camera On/Off

Locate the power button or switch, usually near the shutter button. Press or slide it to turn the camera on or off.

5.2. Using the Zoom Lens

Use the zoom buttons (often marked 'W' for Wide and 'T' for Telephoto) to adjust the focal length of the lens. Press 'W' to zoom out (wider view) and 'T' to zoom in (closer view).

5.3. Focusing and Taking a Picture

1. Look through the viewfinder and frame your subject.
2. Gently press the shutter button halfway down. The camera's Multi Beam Auto Focusing system will activate and focus on your subject. A focus indicator light (usually green) will illuminate in the viewfinder when focus is achieved.
3. Press the shutter button fully down to take the picture. The film will automatically advance to the next frame.

5.4. Using the Flash and Red-Eye Reduction

The camera features an automatic flash. In low light conditions, the flash will fire automatically. To activate Red-Eye Reduction, typically there is a dedicated button or a setting in the mode dial. When enabled, the camera will emit a series of pre-flashes before the main flash to reduce red-eye.

5.5. Setting the Date/Time (Date Imprint Function)

If your camera has a date imprint function, locate the 'DATE' button or mode. Use the adjustment buttons (often marked with arrows) to set the current year, month, day, and time. Once set, you can choose to

imprint this information directly onto your photos.

5.6. Self-Timer Mode

To use the self-timer, press the self-timer button (often indicated by a clock icon). Frame your shot, then press the shutter button. The self-timer lamp will blink, and the shutter will release after approximately 10 seconds, allowing you to be in the picture.

5.7. Unloading Film

Once all frames on the film roll have been exposed, the camera will automatically rewind the film back into the cartridge. The frame counter will reset. Open the camera back cover and remove the film cartridge.

6. MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust and smudges from the lens surface. Avoid touching the lens with your fingers.
- **Cleaning the Camera Body:** Wipe the camera body with a dry, soft cloth. Do not use organic solvents or strong cleaning agents.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period to prevent leakage.
- **Storage:** Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity.
Film does not advance.	Film not loaded correctly; film leader not caught by take-up spool.	Re-open camera back and re-load film, ensuring the leader is properly engaged.
Pictures are blurry.	Subject too close; camera shake; focus not achieved.	Ensure subject is within minimum focus distance. Hold camera steady. Press shutter halfway to confirm focus before fully pressing.
Flash does not fire.	Insufficient battery power; flash mode set to 'off' or 'fill-in' in bright conditions.	Check battery level. Ensure camera is in auto-flash mode or force flash if needed.

8. SPECIFICATIONS

Feature	Detail
Model Name	Discovery 1000 ZOOM Date
Brand	Fujifilm
Film Format Type	35mm

Feature	Detail
Lens	Fujinon Zoom Lens 35-80mm
Focusing System	Multi Beam Auto Focusing
Special Feature	Compact, Red Eye Reduction, Panorama Capability
Shutter Type	Focal Plane Shutter
Item Dimensions (L x W x H)	5.55 x 2.25 x 2.65 inches
Item Weight	1.2 pounds
UPC	074101131604

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms for the Fuji Discovery 1000 Zoom 35mm Compact Camera w/Date is not available in this manual. For warranty details, please refer to the documentation provided at the time of purchase or contact Fujifilm customer support directly.

For further assistance or technical support, please visit the official Fujifilm website or contact their customer service department.