

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Transcend](#) /

› [Transcend EXILIM EX-ZS10-KSD48 8GB SDHC Class 4 Flash Card User Manual](#)

## Transcend EXILIM EX-ZS10-KSD48

# Transcend EXILIM EX-ZS10-KSD48 8GB SDHC Class 4 Flash Card User Manual

### INTRODUCTION

---

This manual provides comprehensive instructions for the Transcend EXILIM EX-ZS10-KSD48 8GB SDHC Class 4 Flash Card. This high-capacity memory card is designed for reliable data storage in compatible digital devices, such as cameras and camcorders. Please read this manual carefully to ensure proper usage and to maximize the performance and longevity of your memory card.



Image: Transcend 8GB SDHC Class 4 Flash Card. This image displays the front of the Transcend 8GB SDHC Class 4 Flash Card, showing its compact form factor and branding.

## SETUP

Follow these steps to properly install your Transcend SDHC card into a compatible device:

1. **Identify the SD Card Slot:** Locate the SD card slot on your digital camera, camcorder, or other compatible device. Refer to your device's manual if you are unsure of its location.
2. **Orient the Card:** Hold the Transcend SDHC card with the metal contacts facing towards the device and the label facing the direction indicated by your device's slot. Ensure the card is oriented correctly to avoid damage.
3. **Insert the Card:** Gently slide the SDHC card into the slot until it clicks into place. Do not force the card. If it does not slide in easily, recheck its orientation.
4. **Verify Installation:** Turn on your device and navigate to its settings or memory status menu to confirm that the SDHC card is recognized and its capacity is displayed correctly.

## OPERATING

Once installed, your Transcend SDHC card is ready for use. Here are common operating procedures:

- **Storing Data:** When taking photos or recording videos with your camera, the data will automatically be saved to the SDHC card. Ensure your device is set to save to the external memory if it has internal storage options.
- **Transferring Data to a Computer:**
  - **Using a Card Reader:** Remove the SDHC card from your device and insert it into a compatible SD card reader connected to your computer. The card will appear as a removable drive.
  - **Direct Connection:** Connect your digital device (e.g., camera) directly to your computer using a USB cable. Follow your device's instructions to access the card's contents.
- **Formatting the Card:** It is recommended to format the SDHC card periodically, especially when using it for the first time or after transferring large amounts of data. Always format the card using the device it will be primarily used with (e.g., your camera) to ensure optimal compatibility. **Warning:** *Formatting will erase all data on the card. Back up important files before formatting.*

## MAINTENANCE

Proper care will extend the life of your Transcend SDHC card and protect your data:

- **Handle with Care:** Avoid bending, dropping, or applying excessive force to the card.
- **Protect Contacts:** Do not touch the metal contacts on the back of the card. Keep them clean and free from dust, dirt, or moisture.
- **Storage:** Store the card in its protective case or a dedicated memory card holder when not in use to prevent physical damage and exposure to static electricity.
- **Temperature and Humidity:** Avoid exposing the card to extreme temperatures, direct sunlight, or high humidity.
- **Safe Removal:** Always ensure your device is powered off or the card is safely ejected through the device's menu before physically removing it. This prevents data corruption.

## TROUBLESHOOTING

If you encounter issues with your Transcend SDHC card, refer to the following common problems and solutions:

Problem	Solution
Card not recognized by device.	<ul style="list-style-type: none"> <li>• Ensure the card is fully and correctly inserted.</li> <li>• Restart the device.</li> <li>• Try the card in another compatible device to rule out a device issue.</li> <li>• Check if the card's write-protect switch is in the 'unlocked' position.</li> </ul>
Cannot save or delete files.	<ul style="list-style-type: none"> <li>• Check the write-protect switch on the side of the SDHC card. Slide it to the 'unlocked' position.</li> <li>• Ensure the card is not full. Delete unnecessary files or transfer them to another storage.</li> </ul>

Problem	Solution
Slow data transfer speeds.	<ul style="list-style-type: none"> <li>• Ensure your card reader or device connection supports USB 2.0 or higher for optimal speeds.</li> <li>• The card's speed class (Class 4) indicates minimum write speed; actual speeds may vary based on device and file size.</li> <li>• Try formatting the card (after backing up data).</li> </ul>
Error messages (e.g., 'Card Error', 'Memory Full').	<ul style="list-style-type: none"> <li>• If 'Memory Full', delete files or transfer them.</li> <li>• If 'Card Error', try reinserting the card. If the problem persists, try formatting the card (data loss will occur).</li> <li>• If errors continue, the card may be damaged or faulty.</li> </ul>

## SPECIFICATIONS

Key technical specifications for the Transcend EXILIM EX-ZS10-KSD48 8GB SDHC Class 4 Flash Card:

- **Model Number:** EXILIM EX-ZS10-KSD48
- **Brand:** Transcend
- **Flash Memory Type:** SDHC (Secure Digital High Capacity)
- **Memory Storage Capacity:** 8 GB
- **Secure Digital Association Speed Class:** Class 4 (Minimum write speed of 4 MB/s)
- **Hardware Interface:** SDHC, Secure Digital Card
- **Compatible Devices:** Cameras, Camcorders, and other devices supporting SDHC cards.
- **Product Dimensions:** 0.08 x 0.94 x 1.26 inches (2.03 x 23.88 x 32.00 mm)
- **Item Weight:** Approximately 0.16 ounces (4.5 grams)
- **Special Feature:** Lightweight design

## WARRANTY AND SUPPORT

Transcend products are manufactured to the highest standards and undergo rigorous testing. For specific warranty information, please refer to the warranty card included with your product packaging or visit the official Transcend website. In case of technical issues or questions not covered in this manual, please contact Transcend customer support through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, visit the [Transcend Store on Amazon](#).