

Transcend FINEPIX S2500HD-KSD4

Transcend 4GB SDHC Memory Card User Manual

Model: FINEPIX S2500HD-KSD4

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Transcend 4GB Secure Digital High Capacity (SDHC) Memory Card. This card is designed for reliable data storage in compatible electronic devices, such as digital cameras and camcorders. Please read this manual thoroughly before use to ensure optimal performance and data integrity.



Image: Transcend 4GB SDHC Memory Card. This image displays the front of the memory card, highlighting the Transcend brand logo, the 'LOCK' switch indicator, the SDHC logo, and the '4GB' capacity marking. The card features a blue plastic casing with a colorful label.

2. SETUP

1. **Compatibility Check:** Ensure your device (e.g., camera, card reader) is compatible with SDHC memory cards. SDHC cards are not backward compatible with standard SD devices that do not support SDHC.
2. **Card Insertion:** Locate the memory card slot on your device. Gently insert the Transcend SDHC card into the slot with the gold contacts facing the correct direction, usually downwards or towards the

back of the device. Push until it clicks into place. Do not force the card.

3. **Initial Formatting (Recommended):** For optimal performance and to ensure compatibility with your specific device, it is recommended to format the memory card using the device it will primarily be used with. Refer to your device's instruction manual for specific formatting procedures. *Note: Formatting will erase all data on the card. Back up any important data before formatting.*

3. OPERATING

1. **Data Storage:** Once inserted and recognized by your device, the memory card will be available for storing data such as photos, videos, or documents. Follow your device's instructions for saving files to the card.
2. **Write Protection (Lock Switch):** The Transcend SDHC card features a small mechanical switch on its left side.
 - When the switch is in the **down (locked)** position, data cannot be written to or deleted from the card. This protects your data from accidental modification or erasure.
 - When the switch is in the **up (unlocked)** position, data can be freely written to, deleted from, or modified on the card.

Ensure the switch is in the unlocked position when you intend to save or delete files.

3. **Data Transfer:** To transfer data to a computer, insert the card into a compatible SD card reader connected to your computer. The card will appear as a removable drive. You can then copy files to and from the card.
4. **Safe Removal:** Always safely eject the memory card from your computer or device before physically removing it. This prevents data corruption. For computers, use the 'Safely Remove Hardware' option (Windows) or drag the drive icon to the Trash (macOS). For cameras, power off the device before removal.

4. MAINTENANCE

- **Physical Care:** Keep the memory card clean and free from dust, dirt, and moisture. Avoid touching the gold contacts directly. Store the card in a protective case when not in use.
- **Environmental Conditions:** Do not expose the card to extreme temperatures, direct sunlight, strong magnetic fields, or static electricity.
- **Data Backup:** Regularly back up important data from your memory card to another storage device (e.g., computer hard drive, cloud storage) to prevent data loss.
- **Avoid Bending:** Do not bend or apply excessive force to the memory card, as this can cause physical damage.

5. TROUBLESHOOTING

- **Card Not Recognized:**
 - Ensure the card is fully and correctly inserted into the device slot.
 - Verify that your device supports SDHC cards.
 - Check the lock switch on the side of the card; it should be in the unlocked position for the device to write to it.
 - Try inserting the card into a different compatible device or card reader to rule out a device issue.
- **Cannot Write or Delete Files:**

- Check the lock switch on the side of the card. It must be in the unlocked position to allow writing or deleting.
 - Ensure the card is not full.
 - If the issue persists, try formatting the card (*warning: this will erase all data*).
- **Slow Performance:**
 - Ensure your device's firmware is up to date.
 - The speed of data transfer can also depend on the device and card reader used.
 - **Data Loss:** In cases of accidental deletion or corruption, specialized data recovery software or services may be able to retrieve lost files. However, success is not guaranteed. Regular backups are the best prevention.













6. SPECIFICATIONS

Feature	Detail
Brand	Transcend
Model Number	FINEPIX S2500HD-KSD4
Flash Memory Type	SDHC (Secure Digital High Capacity)
Memory Storage Capacity	4 GB
Hardware Interface	SDHC
Product Dimensions	0.94 x 0.08 x 1.26 inches
Item Weight	0.071 ounces (2 Grams)
Compatible Devices	Camera
Special Feature	Lightweight

7. WARRANTY AND SUPPORT

Transcend memory cards are typically covered by a manufacturer's warranty. For specific warranty terms, conditions, and duration, please refer to the documentation included with your purchase or visit the official Transcend website. For technical support or further assistance, please contact Transcend customer service through their official channels.

You can find more information and support resources on the [Transcend Store on Amazon](#).

  <p>SoftwareUser Guide</p> 	<p>Transcend Micro Software User Guide</p> <p>User guide for the Transcend Micro CPAP device software, detailing configuration, compliance management, data reporting, and contact information for Transcend Inc.</p>
 <p>Manual de Usuario</p> <p>JetFlash® Vault 100</p> 	<p>Transcend JetFlash Vault 100 User Manual - Secure USB Flash Drive</p> <p>Official user manual for the Transcend JetFlash Vault 100, detailing how to set up passwords, use the device on Windows and Mac, access settings, and find support. Learn about secure portable storage.</p>
 <p>Quick Guide</p> 	<p>Transcend Micro CPAP Machine Quick Guide</p> <p>A quick guide to setting up and using the Transcend Micro Continuous Positive Airway Pressure (CPAP) device, including information on its features, operation, and maintenance.</p>
 <p>CPAPMAN</p> <p>Micro</p> <p>User Manual</p> 	<p>Transcend Micro CPAP User Manual</p> <p>User manual for the Transcend Micro CPAP device, covering setup, operation, maintenance, troubleshooting, and technical specifications.</p>
  <p>Transcend 40W Sun-Watt™ Solar Charger User Manual</p>  <p>Read user manual before use</p>	<p>Transcend 40W Sun-Watt Solar Charger User Manual - Portable Power Solution</p> <p>Comprehensive user manual for the Transcend 40W Sun-Watt™ Solar Charger. Learn about its features, intended use with the PowerAway™ Battery for CPAP devices, charging procedures, maintenance, technical specifications, and warranty information.</p>



[Transcend Micro CPAP Quick Guide: Setup, Operation, and Troubleshooting](#)

This quick guide provides essential information for the Transcend Micro CPAP device, including setup instructions, operating procedures, comfort features, app connectivity, troubleshooting tips, safety warnings, and maintenance guidelines.