

[Manuals.plus](#) /

› [Transcend](#) /

› Transcend 8GB SDHC Class 4 Memory Card User Manual for Fujifilm Finepix S1500

Transcend FINEPIX S1500-KSD48G

Transcend 8GB SDHC Class 4 Memory Card User Manual

Model: FINEPIX S1500-KSD48G

INTRODUCTION

This manual provides comprehensive instructions for the proper use and care of your Transcend 8GB SDHC Class 4 Memory Card. Please read this manual thoroughly before using the product to ensure optimal performance and data integrity. This memory card is designed for use with compatible digital cameras and other devices requiring SDHC storage.

PRODUCT OVERVIEW



Image Description: A blue-framed Transcend 8GB SDHC Class 4 memory card. The card features a colorful rainbow stripe at the top, followed by a red band with "Transcend" in white text. Below this, a green section displays "• LOCK", "SDHC" logo, and "8GB" prominently, along with a circled "4" indicating its speed class. A small yellow lock switch is visible on the left side of the card.

The Transcend 8GB SDHC Class 4 Memory Card offers reliable storage for your digital data. It features a physical write-protection switch to prevent accidental data loss and is compatible with devices that support the SDHC standard.

SETUP

1. **Identify Compatible Slot:** Locate the SDHC card slot on your device (e.g., digital camera, camcorder, card reader). Ensure the device supports SDHC cards.
2. **Insert Memory Card:** Gently slide the Transcend SDHC card into the designated slot with the gold contacts facing down (or as indicated by your device's manual). Apply light pressure until it clicks into place. Do not force the card.
3. **Format (Optional, but Recommended for First Use):** For optimal performance and to ensure compatibility, it is recommended to format the memory card using your device's formatting function before its first use. Refer to your device's manual for specific instructions on how to format an SD card. **Warning:** Formatting will erase all

data on the card.

4. **Check Write-Protection Switch:** Ensure the small switch on the side of the card is in the "unlocked" (upward) position if you intend to write or delete data. If it is in the "locked" (downward) position, the card will be read-only.

OPERATING

- **Storing Data:** Once inserted and recognized by your device, the memory card will function as a storage medium. Files (photos, videos, documents) will be saved to the card according to your device's settings.
- **Accessing Data:** To access data, insert the card into a compatible device or card reader connected to a computer. The card will appear as a removable drive.
- **Transferring Data:** Copy or move files between the memory card and your computer or other storage devices as needed. Always safely eject the card from your computer before physically removing it.
- **Write Protection:** Use the physical lock switch on the side of the card to protect your data from accidental deletion or modification. Slide the switch down to lock the card (read-only) and up to unlock it (read/write).

MAINTENANCE

- **Handle with Care:** Avoid bending, dropping, or exposing the card to excessive force.
- **Keep Clean:** Do not touch the gold contacts on the card. If necessary, gently clean the contacts with a soft, lint-free cloth.
- **Storage:** Store the memory card in its protective case or a suitable storage solution when not in use to prevent dust, moisture, and static electricity damage.
- **Temperature and Humidity:** Avoid extreme temperatures and high humidity. Do not expose the card to direct sunlight or heat sources.
- **Data Backup:** Regularly back up important data from your memory card to another storage device (e.g., computer hard drive, cloud storage) to prevent data loss.

TROUBLESHOOTING

Card Not Recognized:

- Ensure the card is fully inserted into the slot.
- Check if your device supports SDHC cards. Older devices may only support standard SD cards.
- Try the card in another compatible device or card reader to rule out a device issue.
- Clean the gold contacts on the card with a soft cloth.

Cannot Write or Delete Files:

- Check the write-protection switch on the side of the card. Slide it to the "unlocked" (upward) position.
- Ensure the card is not full. Delete unnecessary files or transfer them to another storage device.
- The card might be corrupted. Try formatting the card (**Warning:** This will erase all data).

Slow Performance:

- Ensure your device supports Class 4 speed or higher.
- The card might be fragmented. Back up data and then format the card.
- Ensure your device's firmware is up to date.

SPECIFICATIONS

Feature	Detail
Brand	Transcend
Model Number	FINEPIX S1500-KSD48G
Flash Memory Type	SDHC (Secure Digital High Capacity)
Memory Storage Capacity	8 GB
Speed Class	Class 4
Hardware Interface	SDHC, Secure Digital Card
Compatible Devices	Camera (and other SDHC-compatible devices)
Special Feature	Water Proof
Product Dimensions	0.94 x 0.08 x 1.26 inches
Item Weight	0.071 ounces (2 Grams)
UPC	876544383240

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the official Transcend website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Online Resources: For the most up-to-date support information, FAQs, and driver downloads, visit the official Transcend website.

Contact Support: Refer to the Transcend website for contact details, including phone numbers and email addresses for technical assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question