

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Transcend](#) /

› [Transcend 2GB Standard Secure Digital \(SD\) Memory Card User Manual](#)

## Transcend FinePix S1600-KSD2GB

# Transcend 2GB Standard Secure Digital (SD) Memory Card User Manual

Model: FinePix S1600-KSD2GB

## INTRODUCTION

---

This manual provides instructions for the proper use and care of your Transcend 2GB Standard Secure Digital (SD) Memory Card. This card is designed for reliable data storage in compatible devices such as digital cameras and camcorders.

## PRODUCT OVERVIEW

---

The Transcend 2GB SD Memory Card offers a compact and reliable solution for storing your digital data.

# Synergy Digital 2GB Regular Memory Card



Image description: A Transcend 2GB SD Memory Card is displayed next to a child holding a camera, illustrating the card's purpose for capturing memories.

## SETUP

### Inserting the SD Card

1. Locate the memory card slot on your compatible device (e.g., digital camera, camcorder). Refer to your device's manual for exact location.
2. Ensure the SD card's write-protect switch (small slider on the side) is in the "unlocked" position (usually towards the top, away from the contacts).
3. Gently insert the SD card into the slot with the metal contacts facing the correct direction, as indicated by your device. It should slide in smoothly and click into place. Do not force the card.
4. Close the memory card slot cover, if applicable.

### Initializing the Card (Formatting)

For optimal performance and to ensure compatibility, it is recommended to format the SD card using your device's internal formatting function before first use. Formatting will erase all data on the card.

1. Turn on your device.

2. Navigate to the device's menu settings, typically under "Setup," "System," or "Card Tools."
3. Select the "Format" or "Erase Card" option.
4. Confirm the formatting process.
5. Once complete, the card is ready for use.



Image description: A hand holds the Transcend 2GB SD card near the lens of a DSLR camera, illustrating its wide compatibility with DSLR cameras and HD camcorders.

## OPERATING THE SD CARD

### Storing Data

Once inserted and formatted, your device will automatically detect the SD card as storage. Any photos, videos, or other data captured or saved will be stored on the card until its capacity is reached.

### Accessing Data

Data stored on the SD card can be accessed directly through your device's playback or review functions. To transfer data to a computer:

1. Connect your device to a computer using a USB cable, or

2. Remove the SD card from your device and insert it into a compatible SD card reader connected to your computer.
3. The card will appear as a removable drive. You can then copy, move, or delete files as needed.

## Write Protection

The small slider switch on the side of the SD card is a write-protect lock.

- When the switch is in the "locked" position (towards the contacts), data on the card cannot be written to, deleted, or modified. This protects your data from accidental erasure.
- When the switch is in the "unlocked" position (away from the contacts), data can be freely written, deleted, and modified.

Always ensure the switch is in the correct position for your intended operation.

## MAINTENANCE AND CARE

---

- Keep the SD card clean and free from dust and moisture. Avoid touching the metal contacts.
- Store the card in a protective case when not in use to prevent physical damage.
- Avoid exposing the card to extreme temperatures, direct sunlight, or strong magnetic fields.
- Always safely eject the card from your computer or device before removing it to prevent data corruption.
- Regularly back up important data from the SD card to another storage medium.

# Wide Compatibility

DSLR Cameras  
HD Camcorders



Image description: A close-up of the Transcend 2GB SD card, with text emphasizing its stability, reliability, and durability, indicating high quality.

## TROUBLESHOOTING

---

### Card Not Detected

- Ensure the card is fully and correctly inserted into the device or card reader.
- Check if the write-protect switch is in the unlocked position. Some devices may not recognize a locked card.
- Try the card in another compatible device or card reader to determine if the issue is with the card or the device.
- If the card has been used in multiple devices, it might require reformatting (which will erase all data).

### Cannot Write or Delete Files

- Verify that the write-protect switch on the side of the SD card is in the "unlocked" position.
- Check if the card is full. Delete unnecessary files or transfer them to another storage device.
- The file system might be corrupted. Back up data if possible and then format the card.

### Data Corruption or Errors

- Always safely eject the card from your computer or device before removal.
- Avoid interrupting data transfer processes.
- If errors persist, the card may be faulty. Consider replacing it and backing up data regularly.

## Slow Performance

- Ensure your device and card reader support the speed class of the SD card.
- The card might be fragmented. Back up data and reformat the card.

## TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Transcend
Model Number	FinePix S1600-KSD2GB
Memory Storage Capacity	2 GB
Flash Memory Type	SD
Hardware Interface	Secure Digital Card
Compatible Devices	Camera
Special Feature	Lightweight
Product Dimensions	0.08 x 0.94 x 1.26 inches
Item Weight	0.16 ounces (4.54 g)
UPC	876544549981
ASIN	B00OLTK5V0
Date First Available	June 15, 2012

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Transcend website or contact their customer service. Keep your purchase receipt as proof of purchase.

[Transcend Official Website](#)