

[manuals.plus](#) /

› [Sekonda](#) /

› [Sekonda Men's Quartz Chronograph Watch, Dark Blue Dial, Silver Stainless Steel Bracelet, Model 1008 Instruction Manual](#)

Sekonda 1008

Sekonda Men's Quartz Chronograph Watch Model 1008 Instruction Manual

Your Guide to Operation and Care

1. INTRODUCTION

Thank you for choosing the Sekonda Men's Quartz Chronograph Watch, Model 1008. This timepiece combines classic design with practical chronograph functionality. This manual provides detailed instructions to help you understand and operate your watch effectively, ensuring its longevity and accurate performance. Please read this manual thoroughly before using your watch.

2. PRODUCT OVERVIEW

The Sekonda Model 1008 features a robust stainless steel case and bracelet, a dark blue dial with baton markers, and a precise quartz movement. It includes a chronograph function for timing events, a 24-hour display, and a date indicator.

Key Features:

- **Movement:** Quartz
- **Case Material:** Stainless Steel
- **Dial Color:** Dark Blue with Baton Markers
- **Functions:** 1-second Chronograph (up to 1 hour), 24-hour display, Date display
- **Water Resistance:** Up to 50 meters (5 ATM)
- **Bracelet Material:** Stainless Steel

Watch Components:





Image 2.1: Front view of the Sekonda Model 1008 watch, showcasing the dark blue dial, chronograph sub-dials, date window, and stainless steel bracelet.





Image 2.2: Side view of the watch, highlighting the crown (for time/date adjustment) and the two pushers (for chronograph operation).



Image 2.3: Rear view of the watch, showing the stainless steel case back and the deployment clasp on the bracelet, featuring the Sekonda logo.

3. SETUP

3.1 Setting the Time and Date

- 1. Pull out the crown:** Gently pull the crown (central knob on the side) to position 2 (first click) for date adjustment, or position 3 (second click) for time adjustment.
- 2. Set the date:** In position 2, turn the crown clockwise or counter-clockwise until the correct date appears in the date window.
- 3. Set the time:** In position 3, turn the crown to move the hour and minute hands. Ensure the 24-hour sub-dial also reflects the correct AM/PM period.
- 4. Push in the crown:** Once the time and date are set, push the crown back into position 1 (normal position) to start the watch.

Note: Avoid setting the date between 9 PM and 3 AM, as this can interfere with the date change mechanism. If

you need to adjust the date during this period, first set the time outside this range, then adjust the date, and finally reset the time.

3.2 Bracelet Adjustment

The stainless steel bracelet can be adjusted to fit your wrist. This typically involves removing or adding links. For proper fit and to avoid damage, it is recommended to have this adjustment performed by a qualified jeweler or watch technician.

4. OPERATING THE CHRONOGRAPH

Your Sekonda Model 1008 watch features a chronograph (stopwatch) function, controlled by the two pushers located above and below the crown.

- 1. Start/Stop:** Press the top pusher to start the chronograph. Press it again to stop the timing.
- 2. Reset:** While the chronograph is stopped, press the bottom pusher to reset all chronograph hands to their zero positions.
- 3. Sub-dials:** The chronograph typically uses sub-dials to display elapsed seconds, minutes, and sometimes hours. Refer to your watch's specific dial markings for precise readings. The 1-second chronograph can time up to 1 hour.

5. MAINTENANCE

5.1 Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or prolonged water activities. Always ensure the crown is fully pushed in before any contact with water.

5.2 Cleaning

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.

5.3 Battery Replacement

The watch is powered by an alkaline button cell battery. When the battery runs low, the watch may stop or the second hand may jump in irregular intervals. Battery replacement should be performed by a professional watchmaker to ensure proper sealing and maintain water resistance.

6. TROUBLESHOOTING

- Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- Date not changing:** Ensure the time is set correctly, especially the AM/PM cycle for the 24-hour display. Avoid setting the date between 9 PM and 3 AM.
- Chronograph hands not resetting to zero:** This may require a chronograph reset procedure, which can vary by movement. Consult a professional watch technician if the issue persists after attempting to reset.

- Condensation under crystal:** This indicates a loss of water resistance. Seek immediate professional service to prevent internal damage.

7. SPECIFICATIONS

Model Number	1008
Movement	Quartz
Case Dimensions	Approximately 10 x 10 x 5 cm (Product Size)
Weight	112 g
Water Resistance	50 meters (5 ATM)
Battery Type	1 Alkaline Button Cell Battery (included)
Band Width	20 mm

8. WARRANTY AND SUPPORT

Your Sekonda Model 1008 watch comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims or technical support, please contact your authorized Sekonda retailer or visit the official Sekonda website for service center information. Please retain your proof of purchase for warranty validation.